



**READ THROUGH THIS MANUAL
BEFORE STARTING CONSTRUCTION.
IT CONTAINS IMPORTANT INSTRUCTIONS
AND WARNINGS CONCERNING THE
ASSEMBLY AND USE OF THIS MODEL.**



SPECIFICATION

- Wingspan: 1830mm (72 in)
- Length: 1765mm (70 in)
- Flying weight: 9800-10000g
- Wing area: 54 dm²
- Wing loading: 180g/dm²
- Gear type: Electric Retractable Gear (included) with controller box (included)
- Servo: - 2 aileron; 2 flap (Mount 21mm X 41mm) (not included)
 - 2 elevator; 1 rudder; 1 Nose steering (Mount 17mm X 33mm) (not included)
- Engine: Turbine Jet Engine with thrust 8kg (not included)
- Gravity CG: 227 mm (8.93 in) Back from the leading edge of the wing, at the fuselage

- Control throw Ailerons: Low: 14mm up/down; High: 15mm up/down
- Control throw Elevators: Low: 14mm up/down; High: 15mm up/down
- Control throw Rudder: Low: 15mm right/left; High: 18mm right/left
- Control throw Flaps: Mid: 20mm down; Landing: 30mm down
- Plane type: Jet Scale

⚠ UNDER SAFETY PRECAUTIONS
This radio control model is not a toy!

- It is highly recommended that first-time builders seek advice of experienced modelers before beginning assembly.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model.
 You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

TABLE OF CONTENTS

Introduction	1	Installing the elevator pushrod	18
Warranty.....	2	Horizontal stabilizer installation.....	20
Disclaimer.....	2	Installing the vertical stabilizer	21
Safety precaution	2	Installing the vertical stabilizer servo.....	22
Important building notes.....	2	Installing the vertical stabilizer pushrod	23
Suggestion.....	2	Installing the nose gear retract.....	25
Flight warnings.....	2	Electric retract system.....	28
Flight warnings.....	3	Installing the engine	30
Electric ducted fan recommended	3	Installing the fuel tank.....	31
Covering tools.....	3	Installing the fuel tank.....	32
Adhesives and required tools	3	Balancing.....	37
Academy of model aeronautics national		Lateral balance	37
model aircraft safety code.....	3	Control throws	40
Installing the light wing.....	5	Flight preparation pre flight check	41
Preparations.....	6	For your radio installation	
Installing the ailerons and flap	6	Basic connection for airplane	
Installing the aileron and flap servo	7	and adjustment of servos	41
Installing the aileron and flap linkages.....	8	Decoration.....	42
Installing the main landing gear	11	Main gear dimensional detail.....	43
Electric retract system	13	Nose gear dimensional detail.....	43
Secure the fuselage	13	Exploded view	44
Installing the lip of air inlet	14	Exploded view	45
Secure the wing to the fuselage.....	14		
Installing the elevator servos.....	16		

INTRODUCTION

Thank you for purchasing Phoenix Model products. With over 20 years experience in production and fly testing, Phoenix Model is committed to bring the best quality products and good service to customers. Along with a team of creative engineers and skilled workers, we will always accompany with customers by our great experiences, fully enthusiasm... which will burn our passion!! Joining with us to explore and conquer challenges in the sky ...

Your satisfaction is our success. Please read through this manual before starting construction.

Academy of Model Aeronautics: If you are not already a member of the AMA, please join! The AMA is the governing body of model aviation and membership provides liability insurance coverage, protects modelers' rights and interests and is required to fly at most R/C sites.

Academy of Model Aeronautics
5151 East Memorial Drive Muncie, IN 47302-9252

Tele. (800) 435-9262
Fax (765) 741-0057

Or via the Internet at: <http://www.modelaircraft.org>



WARRANTY

Phoenix Model guarantees the component parts in this kit to be free from defects in both material and workmanship at the date of purchase by the purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product.

This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Phoenix Model.

Further, Phoenix Model reserves the right to change or modify this warranty without notice.

DISCLAIMER

Read this disclaimer carefully before using this product. Please strictly follow the instruction manual to assemble and use this.

In that Phoenix Model has no control over the final assembly or material used for final assembly, Phoenix Model is not responsible for loss of use, or other incidental or consequential damages.

Furthermore, Phoenix Model cannot be held liable for personal injury or property damage caused by the use or misuse of Phoenix Model products. By the act of using the user-assembled products, the user accepts all resulting liability.

SAFETY PRECAUTION

- This is not a toy and pilots must be over the age of 14
- Be sure that no other flyers are using your radio frequency.
- Do not smoke near fuel
- Store fuel in a cool, dry place, away from children and pets.
- Wear safety glasses.
- The glow plug clip must be securely attached to the glow plug.
- Do not flip the propeller with your fingers.
- Keep loose clothing and wires away from the propeller.
- Do not start the engine if people are near. Do not stand in line with the side of the propeller.
- Make engine adjustments from behind the propeller only. Do not reach around the spinning propeller.
- Moisture causes damage to electronics. Avoid water exposure to all equipment not specifically designed and protected for this purpose.

IMPORTANT BUILDING NOTES

- Please trial fit all the parts. Make sure you have the correct parts and that they fit and are aligned properly before gluing! This will assure proper assembly. This kit is hand made from natural materials, every plane is unique and minor adjustments may have to be made. However, you should find the fit superior and assembly simple.
- The painted and plastic parts used in this kit are fuel proof. However, they are not tolerant of many harsh chemicals including the following: paint thinner, C/A glue accelerator, C/A glue debonder and acetone. Do not let these chemicals come in contact with the colors on the covering and the plastic parts.
- Some parts included in this kit such as the cowl or wheel pants are made of fiberglass, the fibers of which may cause eye, skin and respiratory tract irritation. Never blow into a part to remove fiberglass dust, as the dust will blow back into your eyes. Always wear safety goggles, a particle mask and rubber gloves when grinding, drilling and sanding fiberglass parts. Vacuum the parts and the work area thoroughly after working with fiberglass parts.

SUGGESTION

To avoid scratching your new airplane, do not unwrap the pieces until they are needed for assembly. Cover your workbench with an old towel or brown paper, both to protect the aircraft and to protect the table. Keep a couple of jars or bowls handy to hold the small parts after you open the bag.

FLIGHT WARNINGS

- Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc.
- NEVER fly your aircraft close to people or built up areas.
- NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.
- NEVER fly in wet conditions or on windy or stormy days.
- ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.
- THE PROPELLER IS DANGEROUS Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at ALL times.
- NEVER use damaged or deformed propellers or spinners.
- Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.
- DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

FLIGHT WARNINGS

- When ready to fly, first extend the transmitter aerial.
- Switch on the transmitter.
- Switch on the receiver.
- Check that the wings are correctly fitted to the fuselage.
- Operate the control sticks on the transmitter and check that the control surfaces move freely and in the CORRECT directions.
- Check that the transmitter batteries have adequate power.
- ALWAYS take off into the wind.
- If the model does not respond correctly to the controls, land it as soon as possible and correct the fault.
- ALWAYS land the model INTO the wind, this ensures that the model lands at the slowest possible speed.
- Switch off the receiver.
- Switch off the transmitter.
- Empty the fuel tank after flying, fuel left in the tank can cause corrosion and lead to engine problems.

ELECTRIC DUCTED FAN RECOMMENDED

- We suggest you use the EDF: 120mm, Minimum thrust 7 kg. As BVM 3-12S EVF or Ramtec 120mm ... (not included)

COVERING TOOLS

- Top Flite® MonoKote® Sealing Iron
- Top Flite Hot Sock Iron Cover
- Top Flite MonoKote Trim Seal Iron
- Top Flite MonoKote Heat Gun

ADHESIVES AND REQUIRED TOOLS

- Thin CA
- 30-minute epoxy
- 6-minute epoxy
- Threadlocker thread locking cement
- Mixing sticks
- Mixing cups (GPMR8056)
- Epoxy brushes
- Denatured alcohol
- Canopy Glue
- Felt-tipped pen or pencil
- Flat screwdriver
- Adjustable wrench
- Drill
- Hobby knife
- Masking tape
- Phillips screwdriver (large)
- Phillips screwdriver (small)
- Ruler
- Sandpaper
- Soldering iron
- Solder
- Hex wrench
- Drill bit: 1/16-inch (1.5mm), 5/64-inch (2mm), 1/8-inch (3,2mm), 3/16-inch (4,8mm), 11/64-inch (4.5mm), 13/64-inch (5,2mm), 1/4-inch (6,4mm)

Academy of Model Aeronautics National Model Aircraft Safety Code**Effective January 1, 2014**

A. GENERAL: A model aircraft is a non-human-carrying aircraft capable of sustained flight in the atmosphere. It may not exceed limitations of this code and is intended exclusively for sport, recreation, education and/or competition. All model flights must be conducted in accordance with this safety code and any additional rules specific to the flying site.









1. Model aircraft will not be flown:
 - (a) In a careless or reckless manner.
 - (b) At a location where model aircraft activities are prohibited.
2. Model aircraft pilots will:
 - (a) Yield the right of way to all human-carrying aircraft.
 - (b) See and avoid all aircraft and a spotter must be used when appropriate. (AMA Document #540-D.)
 - (c) Not fly higher than approximately 400 feet above ground level within three (3) miles of an airport without notifying the airport operator.
 - (d) Not interfere with operations and traffic patterns at any airport, heliport or seaplane base except where there is a mixed use agreement.
 - (e) Not exceed a takeoff weight, including fuel, of 55 pounds unless in compliance with the AMA Large Model Airplane program. (AMA Document 520-A.)
 - (f) Ensure the aircraft is identified with the name and address or AMA number of the owner on the inside or affixed to the outside of the model aircraft. (This does not apply to model aircraft flown indoors.)
 - (g) Not operate aircraft with metal-blade propellers or with gaseous boosts except for helicopters operated under the provisions of AMA Document #555.
 - (h) Not operate model aircraft while under the influence of alcohol or while using any drug that could adversely affect the pilot's ability to safely control the model.
 - (i) Not operate model aircraft carrying pyrotechnic devices that explode or burn, or any device which propels a projectile or drops any object that creates a hazard to persons or property.

Exceptions:

- Free Flight fuses or devices that burn producing smoke and are securely attached to the model aircraft during flight.
 - Rocket motors (using solid propellant) up to a G-series size may be used provided they remain attached to the model during flight. Model rockets may be flown in accordance with the National Model Rocketry Safety Code but may not be launched from model aircraft.
 - Officially designated AMA Air Show Teams (AST) are authorized to use devices and practices as defined within the Team AMA Program Document. (AMA Document #718.)
- (j) Not operate a turbine-powered aircraft, unless in compliance with the AMA turbine regulations. (AMA Document #510-A.)
3. Model aircraft will not be flown in AMA sanctioned events, air shows or model demonstrations unless:
- (a) The aircraft, control system and pilot skills have successfully demonstrated all maneuvers intended or anticipated prior to the specific event.
 - (b) An inexperienced pilot is assisted by an experienced pilot.
4. When and where required by rule, helmets must be properly worn and fastened. They must be OSHA, DOT, ANSI, SNELL or NOCSAE approved or comply with comparable standards.
- B. RADIO CONTROL (RC)**
- 1. All pilots shall avoid flying directly over unprotected people, vessels, vehicles or structures and shall avoid endangerment of life and property of others.
 - 2. A successful radio equipment ground-range check in accordance with manufacturer's recommendations will be completed before the first flight of a new or repaired model aircraft.
 - 3. At all flying sites a safety line(s) must be established in front of which all flying takes place. (AMA Document #706.)
 - (a) Only personnel associated with flying the model aircraft are allowed at or in front of the safety line.
 - (b) At air shows or demonstrations, a straight safety line must be established.
 - (c) An area away from the safety line must be maintained for spectators.
 - (d) Intentional flying behind the safety line is prohibited.
 - 4. RC model aircraft must use the radio-control frequencies currently allowed by the Federal Communications Commission (FCC). Only individuals properly licensed by the FCC are authorized to operate equipment on Amateur Band frequencies.
 - 5. RC model aircraft will not knowingly operate within three (3) miles of any pre-existing flying site without a frequency-management agreement. (AMA Documents #922 and #923.)
 - 6. With the exception of events flown under official AMA Competition Regulations, excluding takeoff and landing, no powered model may be flown outdoors closer than 25 feet to any individual, except for the pilot and the pilot's helper(s) located at the flightline.
 - 7. Under no circumstances may a pilot or other person touch an outdoor model aircraft in flight while it is still under power, except to divert it from striking an individual.
 - 8. RC night flying requires a lighting system providing the pilot with a clear view of the model's attitude and orientation at all times. Hand-held illumination systems are inadequate for night flying operations.
 - 9. The pilot of an RC model aircraft shall:
 - (a) Maintain control during the entire flight, maintaining visual contact without enhancement other than by corrective lenses prescribed for the pilot.
 - (b) Fly using the assistance of a camera or First-Person View (FPV) only in accordance with the procedures outlined in AMA Document #550.
 - (c) Fly using the assistance of autopilot or stabilization system only in accordance with the procedures outlined in AMA Document #560.
- C. FREE FLIGHT**
- 1. Must be at least 100 feet downwind of spectators and automobile parking when the model aircraft is launched.
 - 2. Launch area must be clear of all individuals except mechanics, officials, and other fliers.
 - 3. An effective device will be used to extinguish any fuse on the model aircraft after the fuse has completed its function.
- D. CONTROL LINE**
- 1. The complete control system (including the safety thong where applicable) must have an inspection and pull test prior to flying.
 - 2. The pull test will be in accordance with the current Competition Regulations for the applicable model aircraft category.
 - 3. Model aircraft not fitting a specific category shall use those pull-test requirements as indicated for Control Line Precision Aerobatics.
 - 4. The flying area must be clear of all utility wires or poles and a model aircraft will not be flown closer than 50 feet to any above-ground electric utility lines.
 - 5. The flying area must be clear of all nonessential participants and spectators before the engine is started.

INSTALLING THE LIGHT WING

2 x 5mm TP Screw	
	4
	2

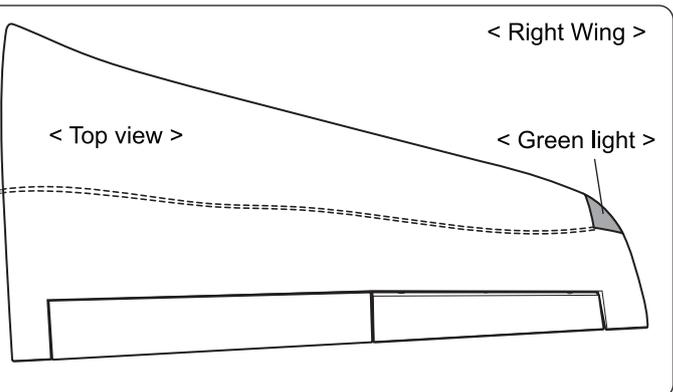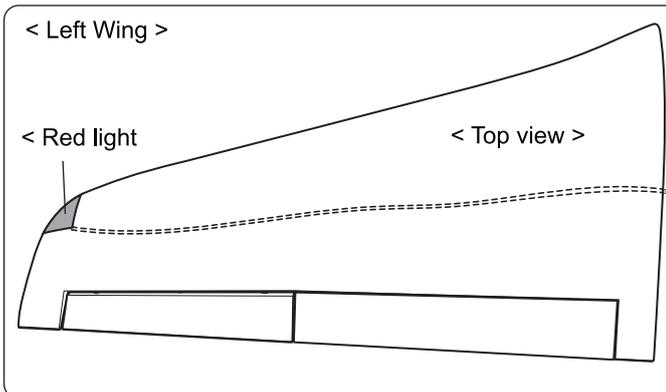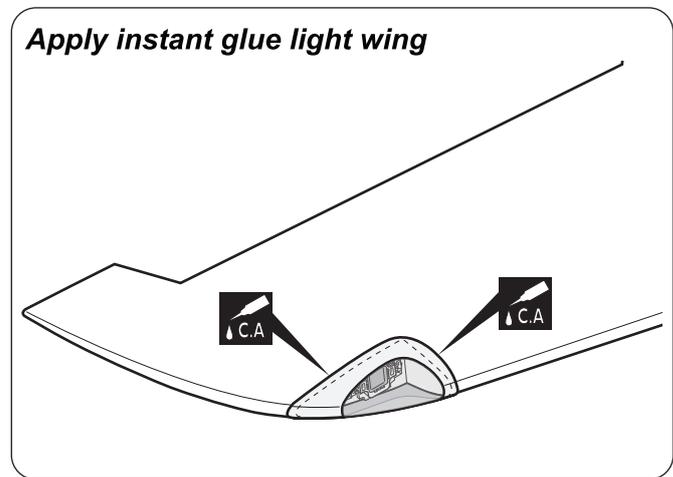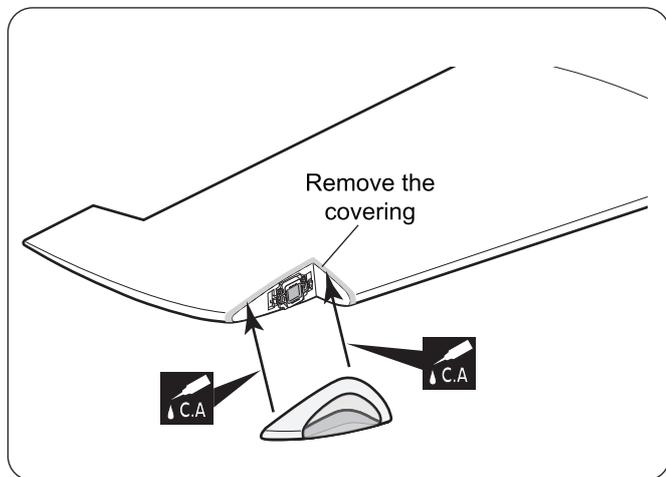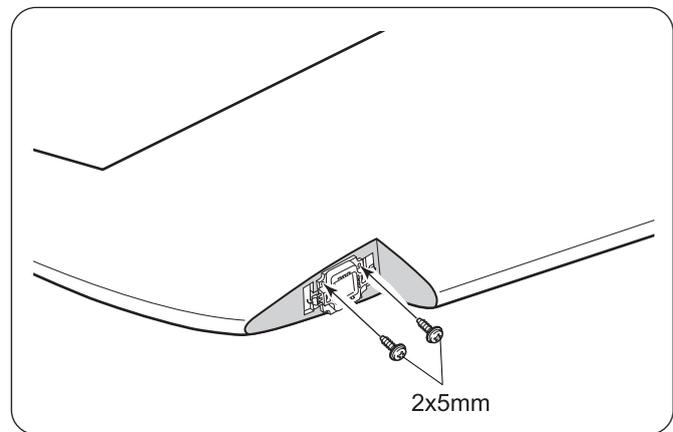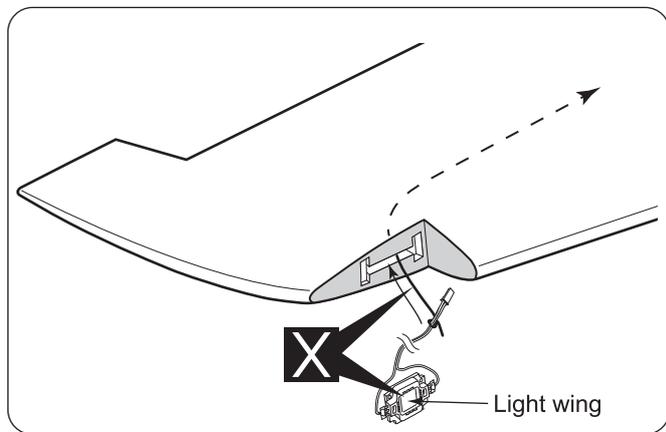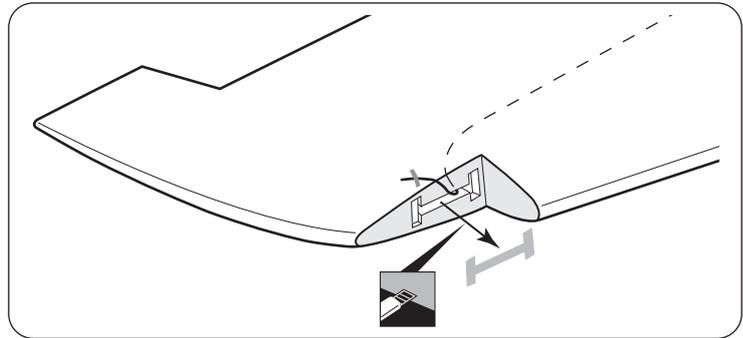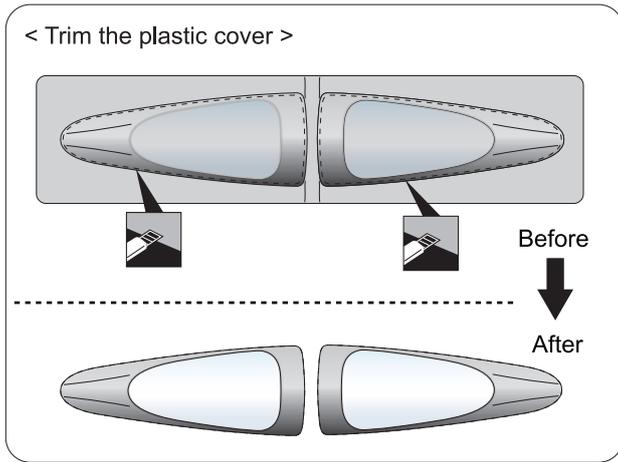

 Must be purchased separately!


 Assemble left and right sides the same way

 Apply instant glue (CA glue, super glue).

 Cut off shaded portion





PREPARATIONS

Use a covering iron with a covering sock on high heat to tighten the covering if necessary. Apply pressure over sheeted areas to thoroughly bond the covering to the wood.

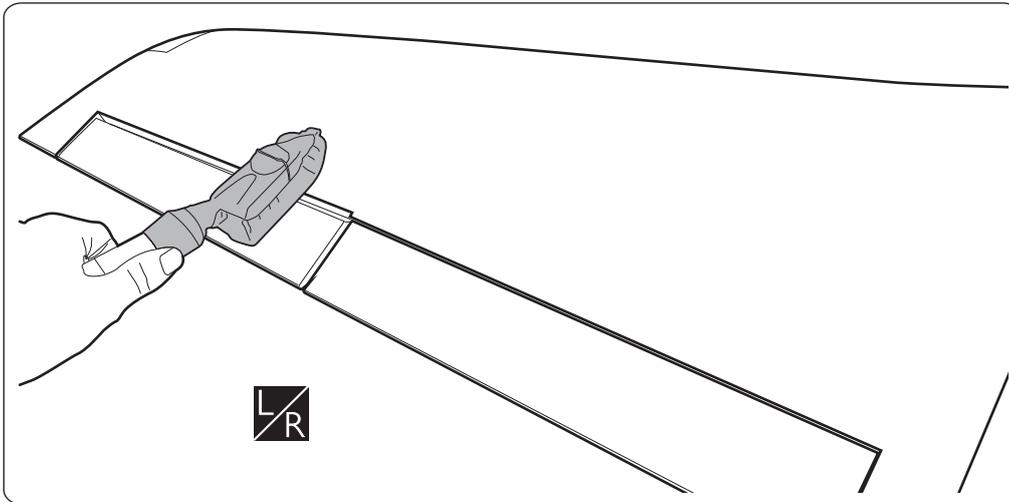

 Assemble left and right sides the same way

INSTALLING THE AILERONS AND FLAPS

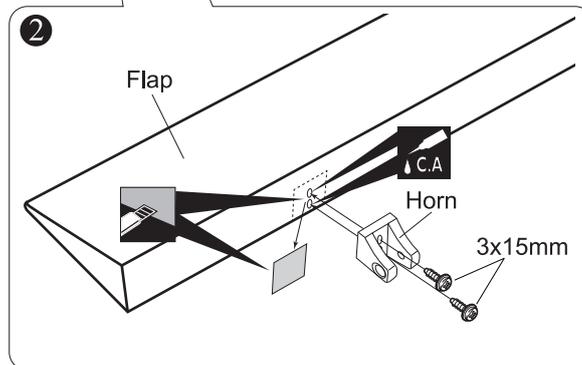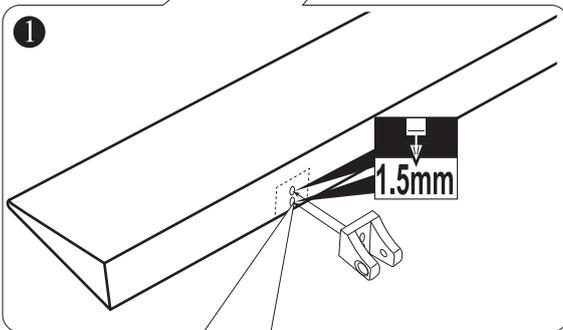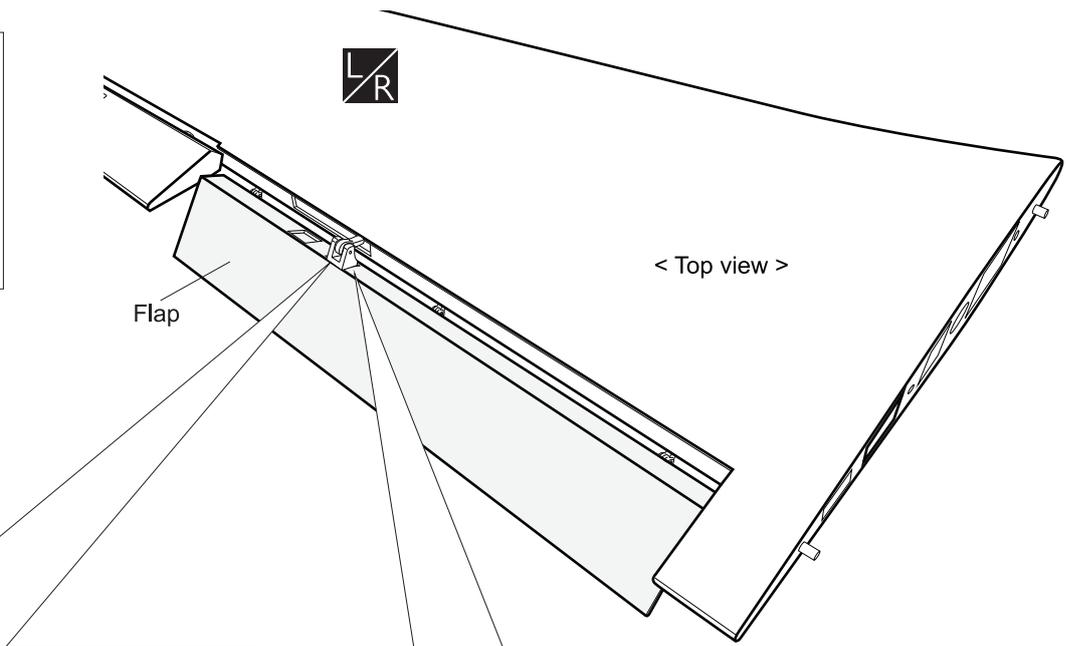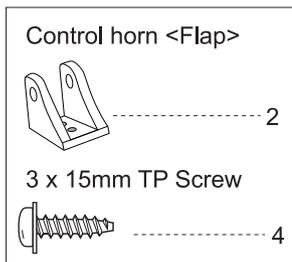



► Please note that C.A glue must be apply to these holes before screw the control horn to the aileron. If not, it comes off during flights, you may lose control of your airplane, resulting in an accident !

 Assemble left and right sides the same way

 Apply instant glue (CA glue, super glue).

 Cut off shaded portion

 Drill holes with the specified diameter.

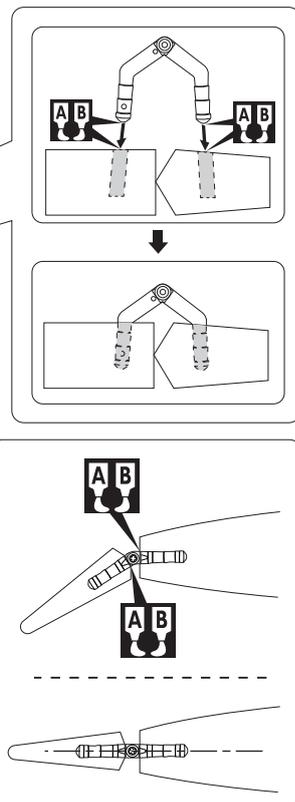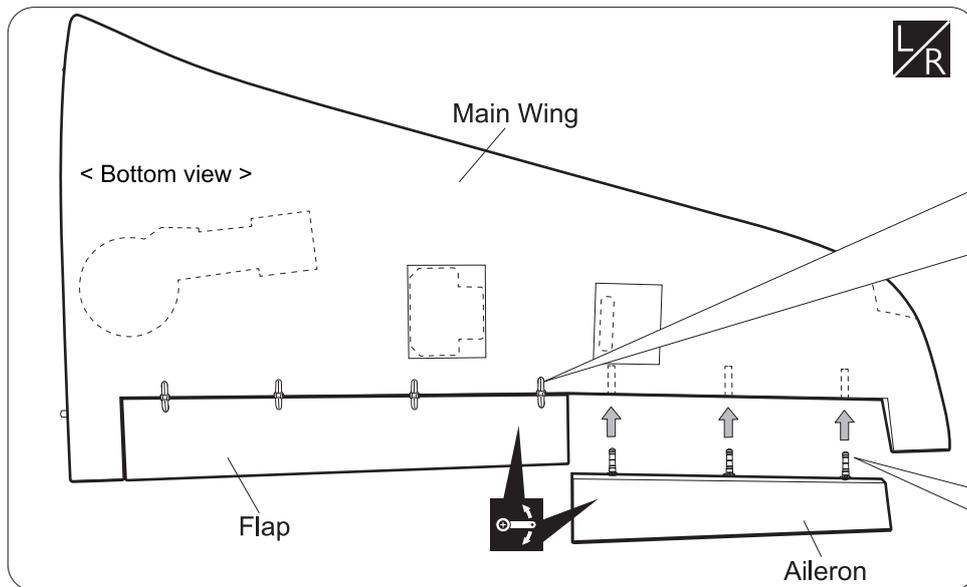





- Assemble left and right sides the same way
- Apply epoxy glue.
- Ensure smooth, non-binding movement when assembling.




► Make certain the hinges are adequately secured with glue. If they come loose in flight accidents may result.

INSTALLING THE AILERONS AND FLAPS

SERVOS

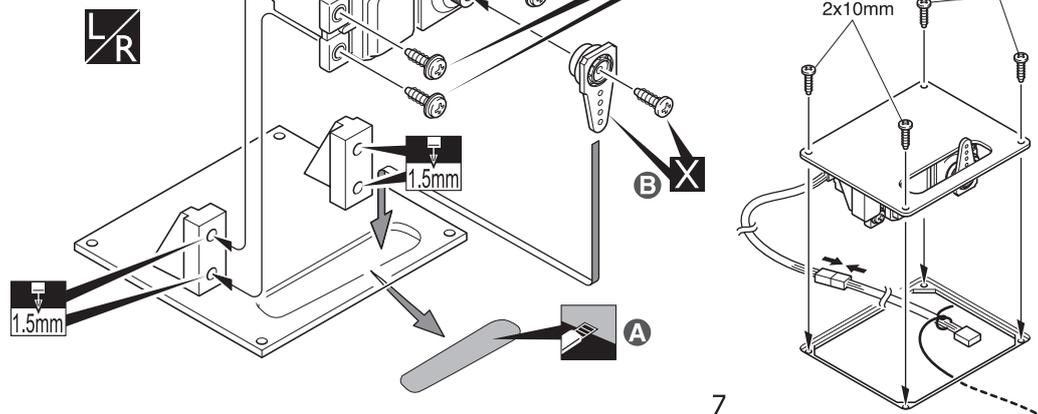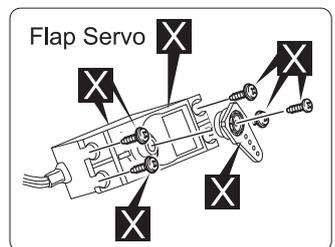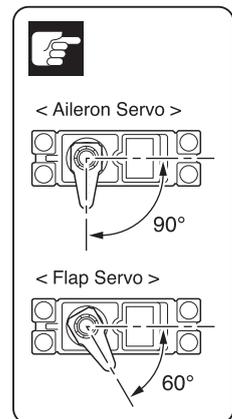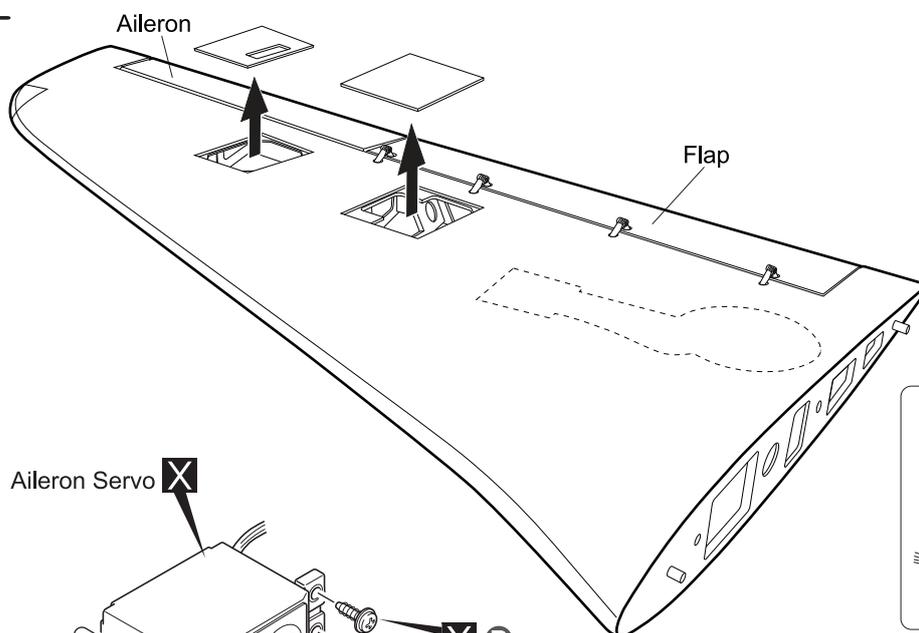

- A** Cut away film only. here
- B** Supplied with the servo
- X** Must be purchased separately!
- Assemble left and right sides the same way
- Cut off shaded portion
- Pay close attention here!
- Drill holes with the specified diameter.

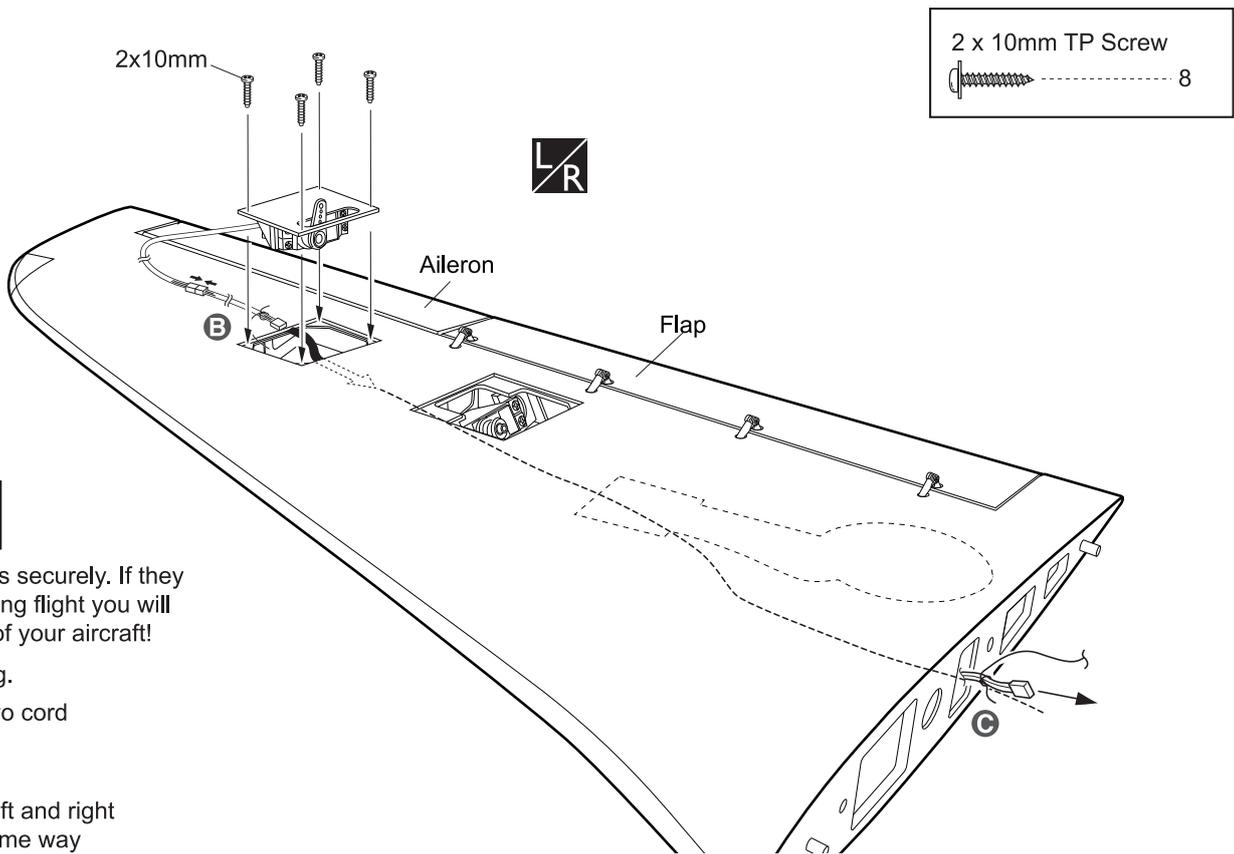

Warning!


▶ Set all screws securely. If they come off during flight you will lose control of your aircraft!

- Ⓑ Tie the string.
- Ⓒ Pull out servo cord with string.

Assemble left and right sides the same way




INSTALLING THE AILERONS AND FLAPS LINKAGES

- 2
- 2
- 3 x 25mm Cap Screw 2
- 4
- 3 x 12mm Button Screw 4
- 2
- 3mm Nylon Nut 2
- 2
- 3mm Washer 2
- 4
- Aluminum ball 4
- 2
- 3 x 70mm Push rod 2

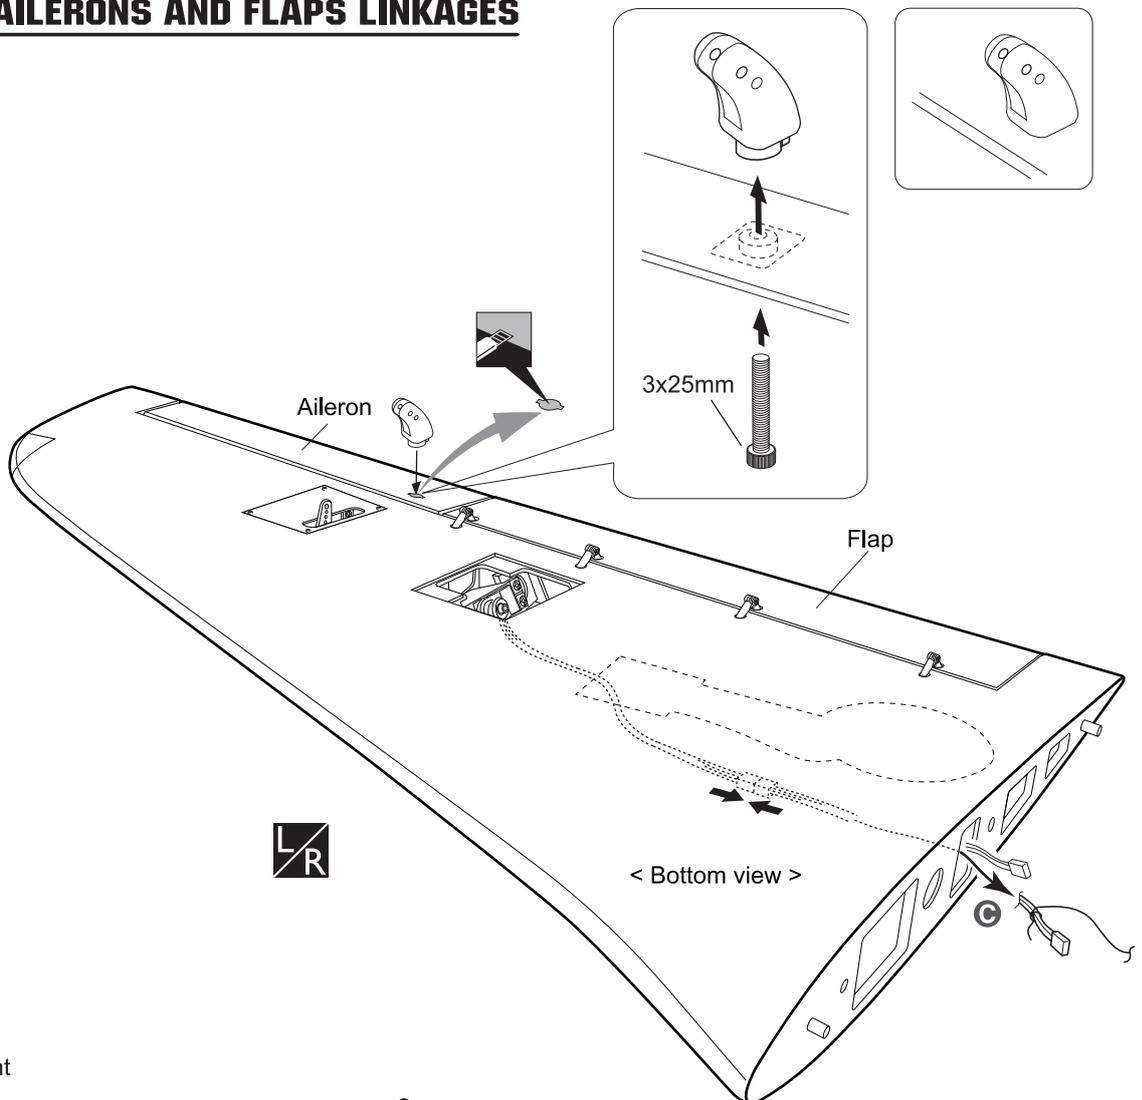





Cut off shaded portion

Assemble left and right sides the same way

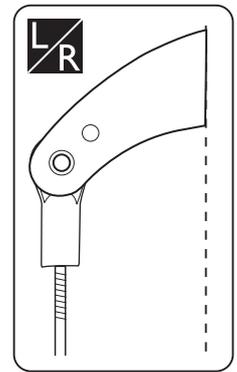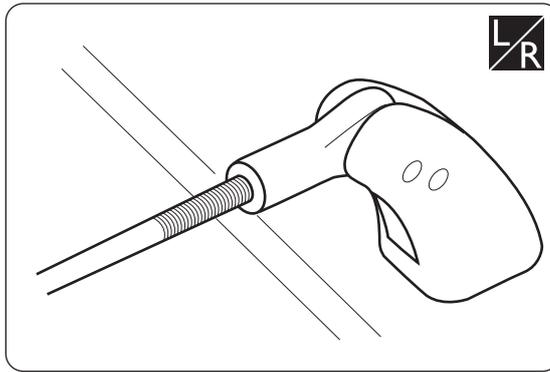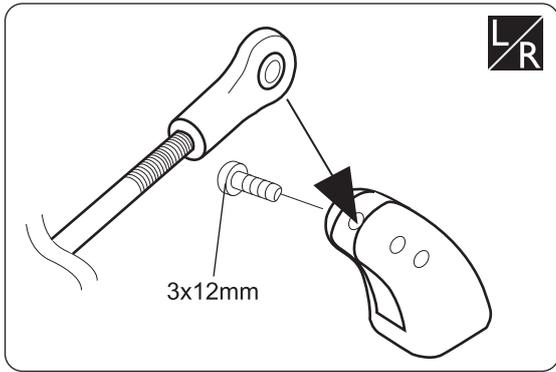

Warning!








► Set all screws securely. If they come off during flight you will lose control of your aircraft!

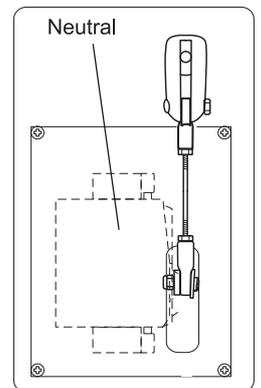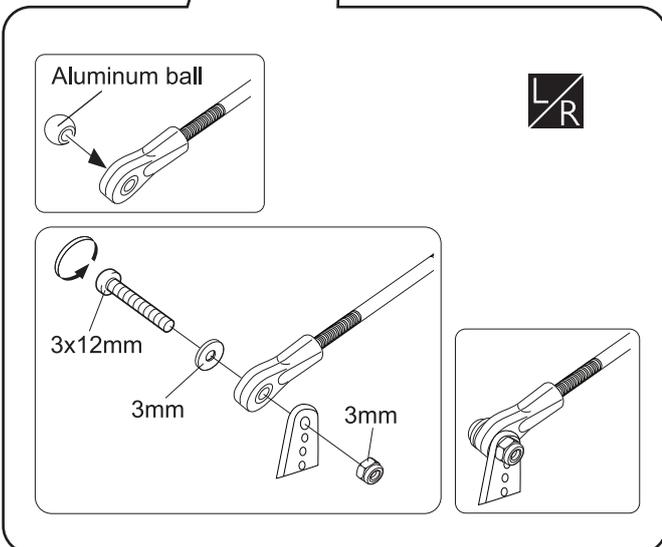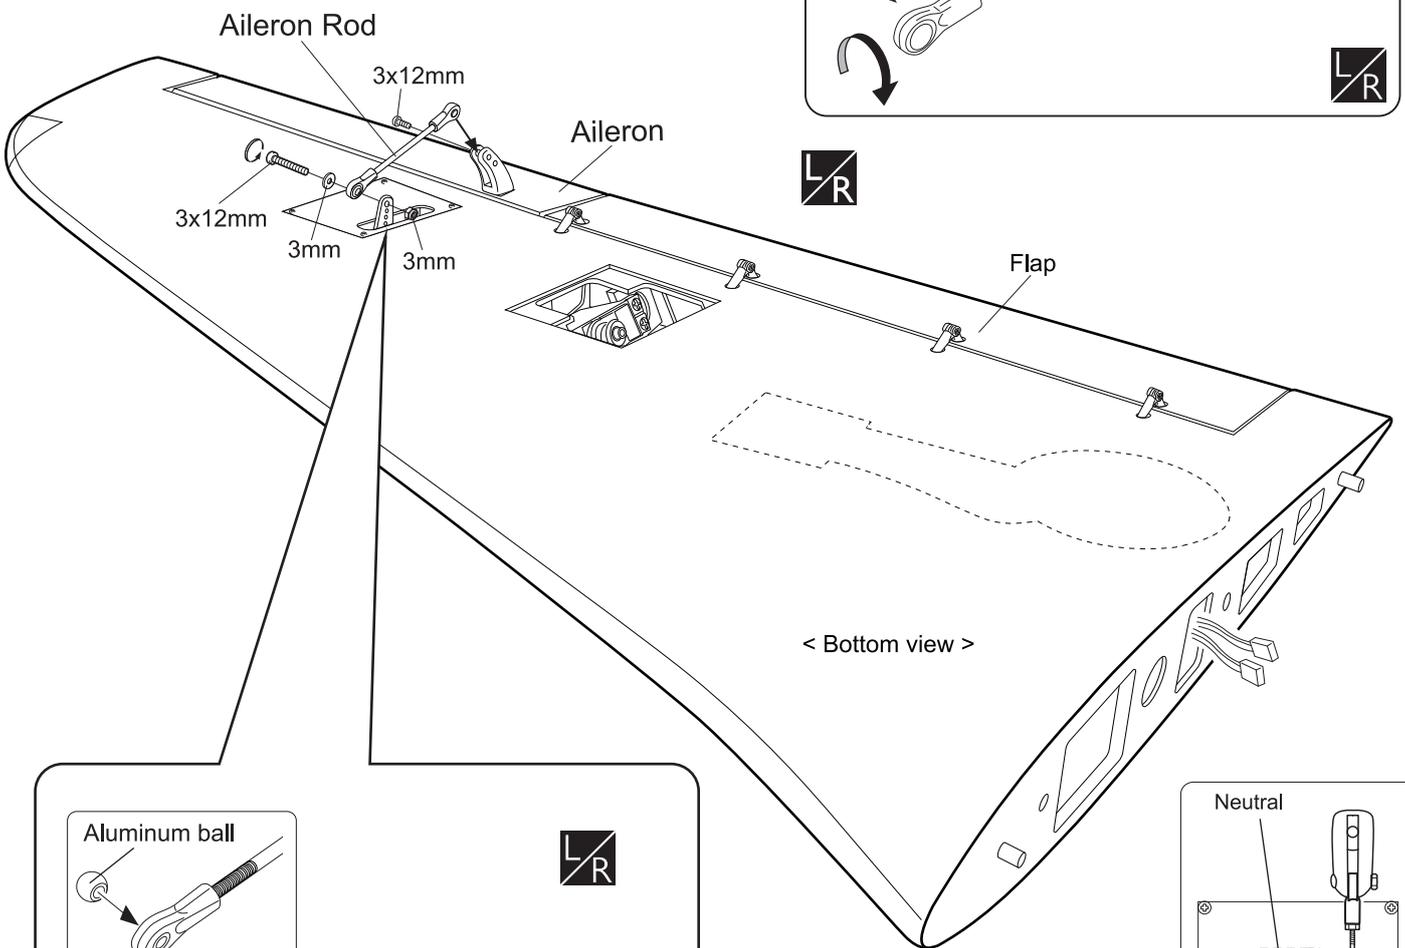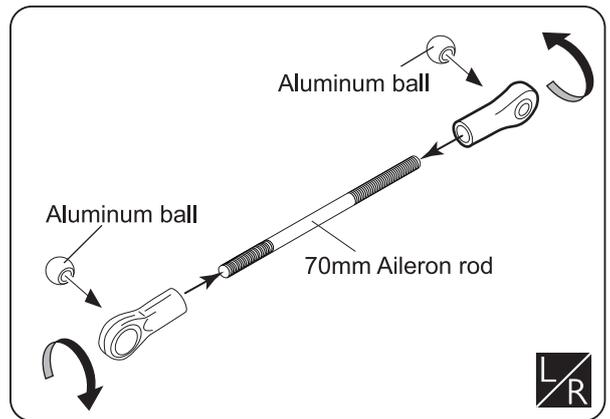

 Assemble left and right sides the same way



- 3 x 10mm Button Screw 2
- 3 x 12mm Button Screw 2
- 3mm Nylon Nut 2
- 3mm Washer 2
- Aluminum ball 4
- Aluminum ball 4
- 3 x 70mm Push rod 2

- 2 x 10mm TP Screw 8

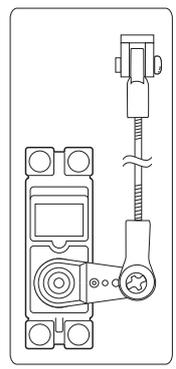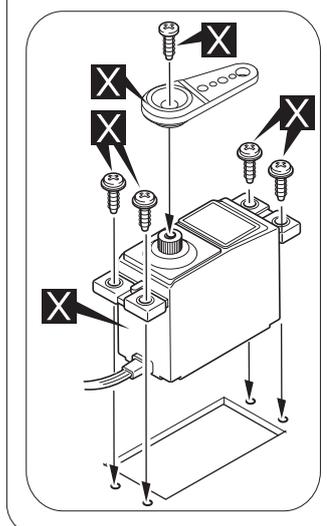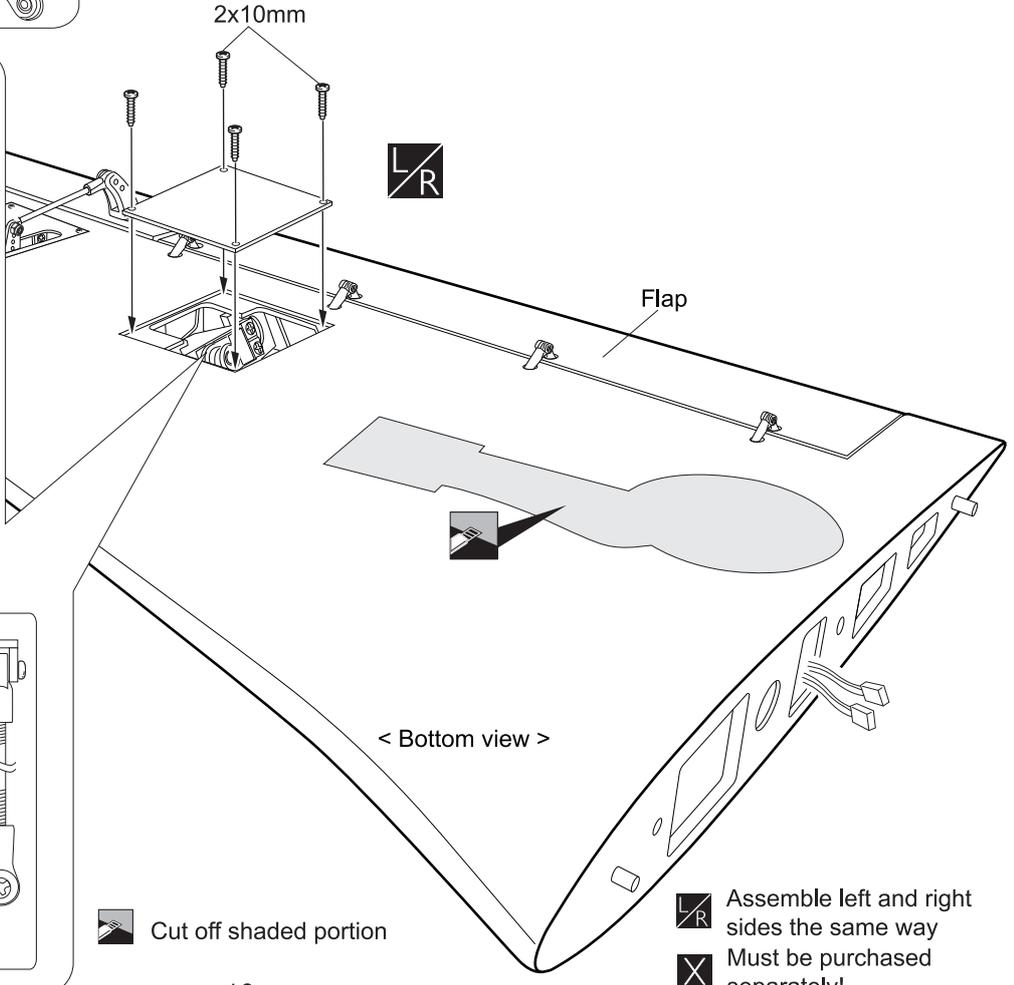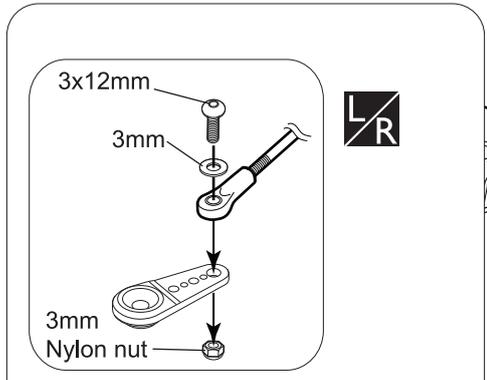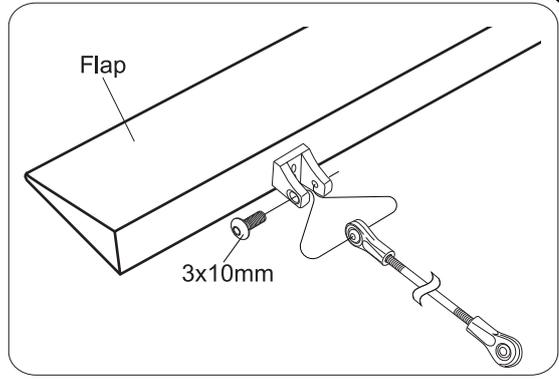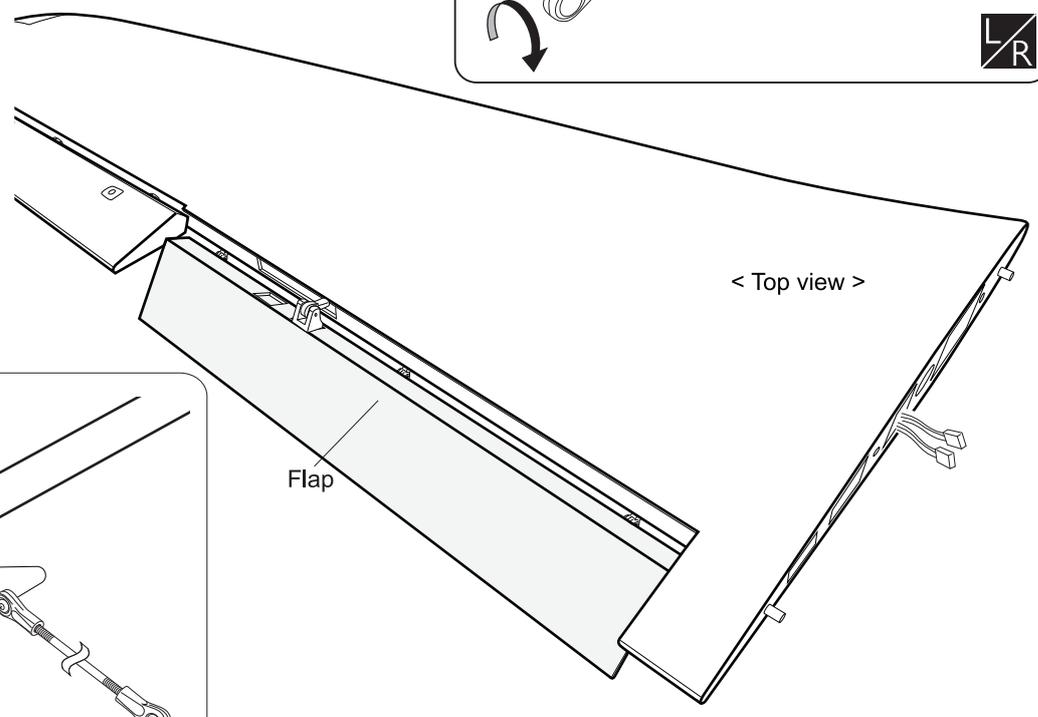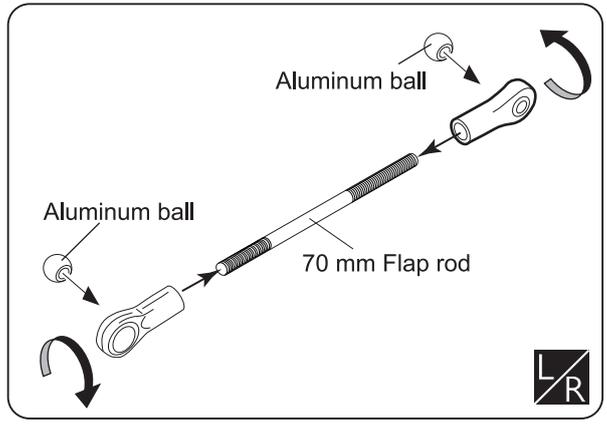


Cut off shaded portion




Assemble left and right sides the same way
 Must be purchased separately!

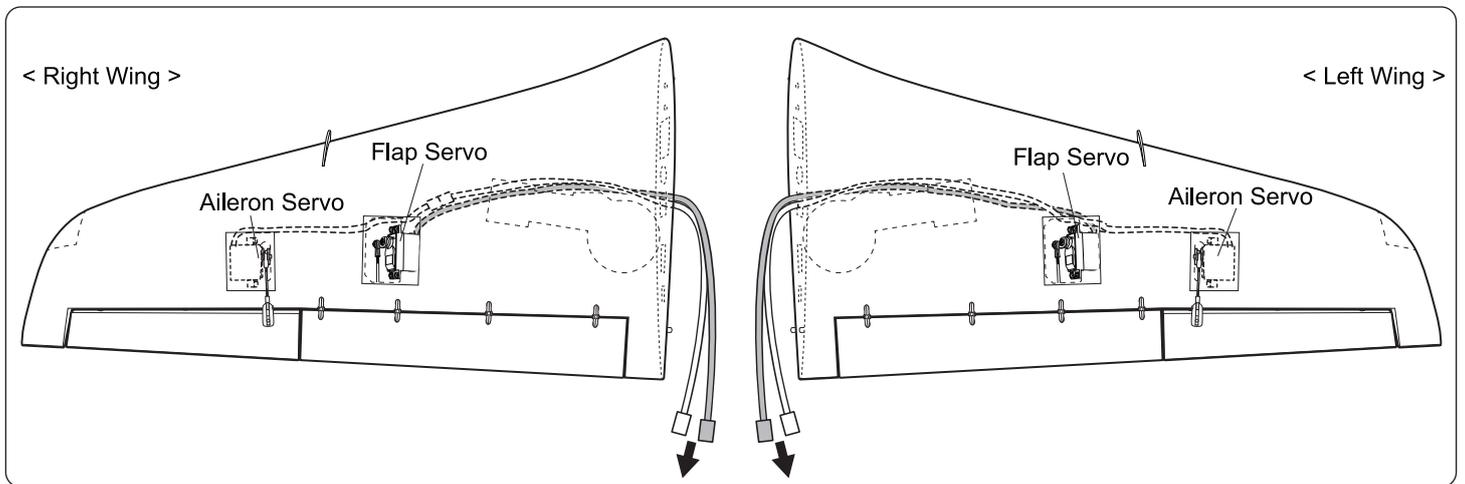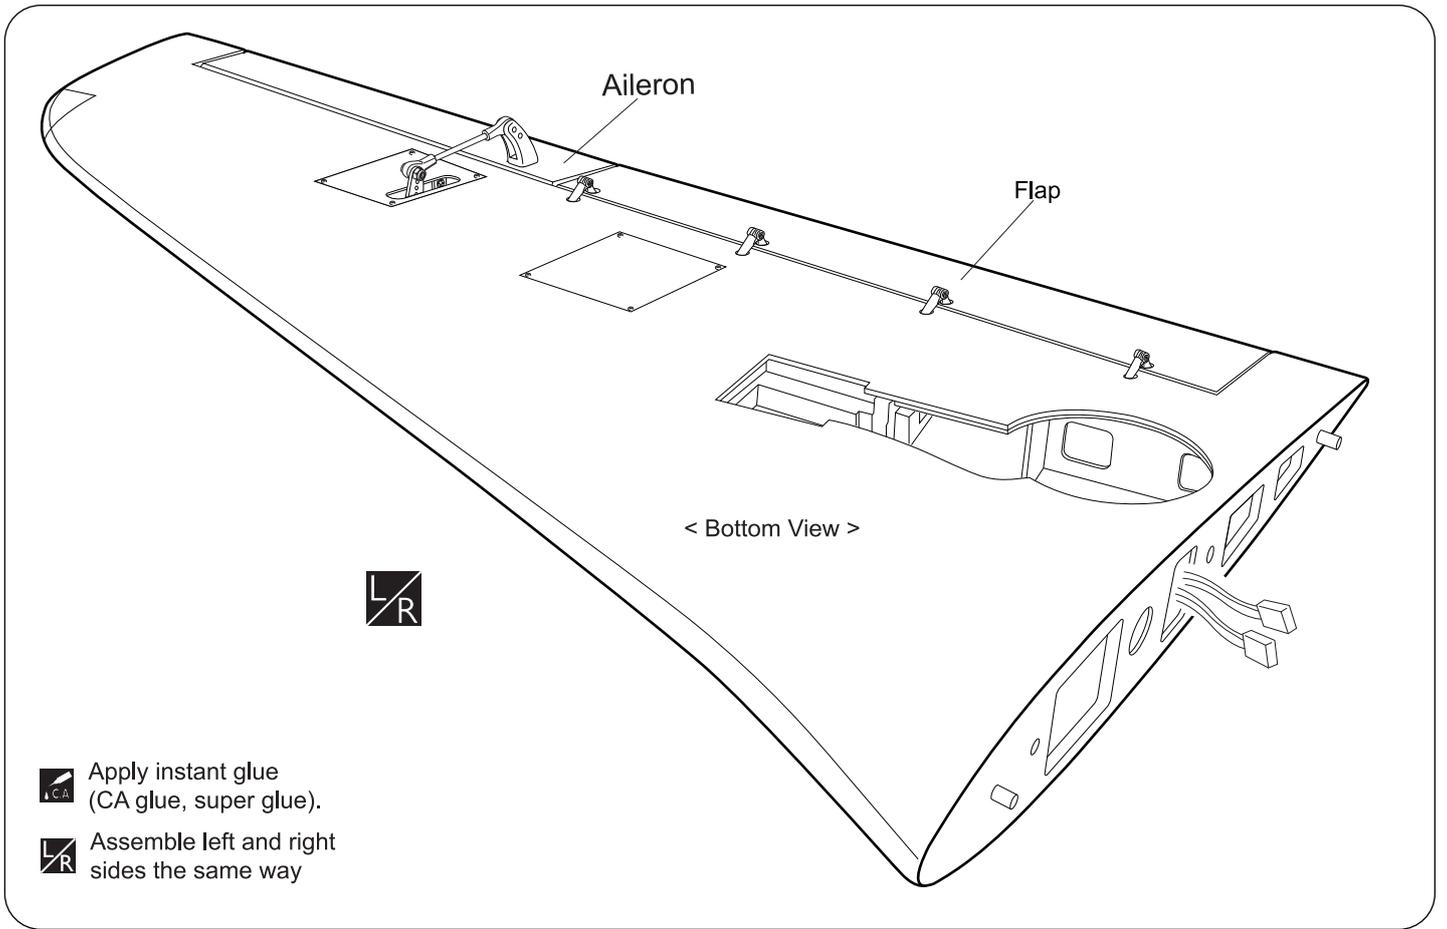

INSTALLING THE MAIN LANDING GEAR

- 4mm Spring Washer 4
- 4mm Washer 4
- 4 x 20mm Cap Screw 4

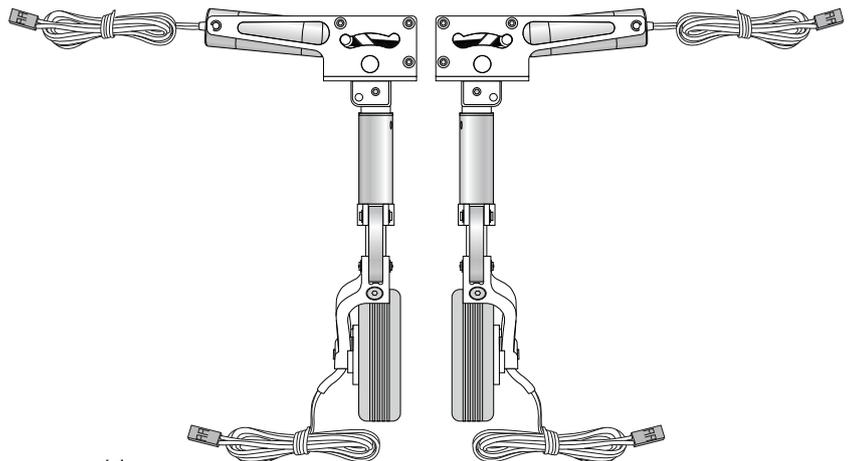

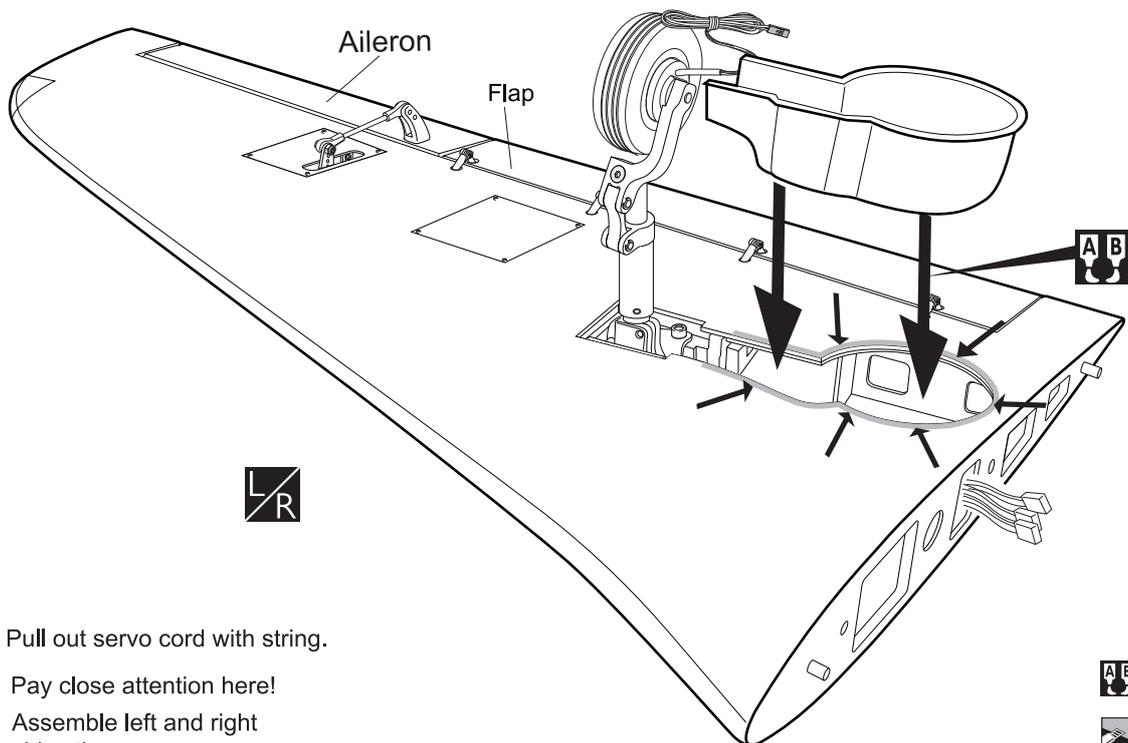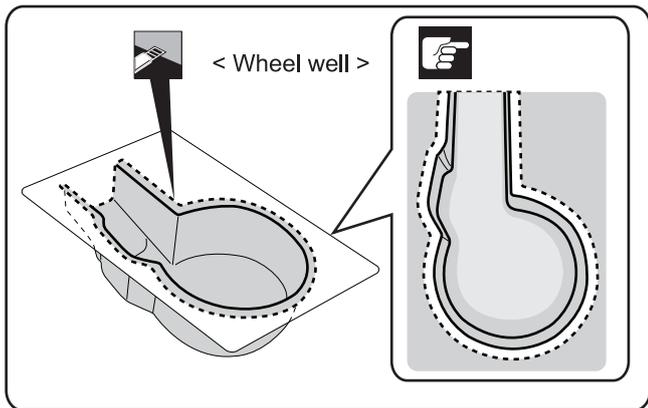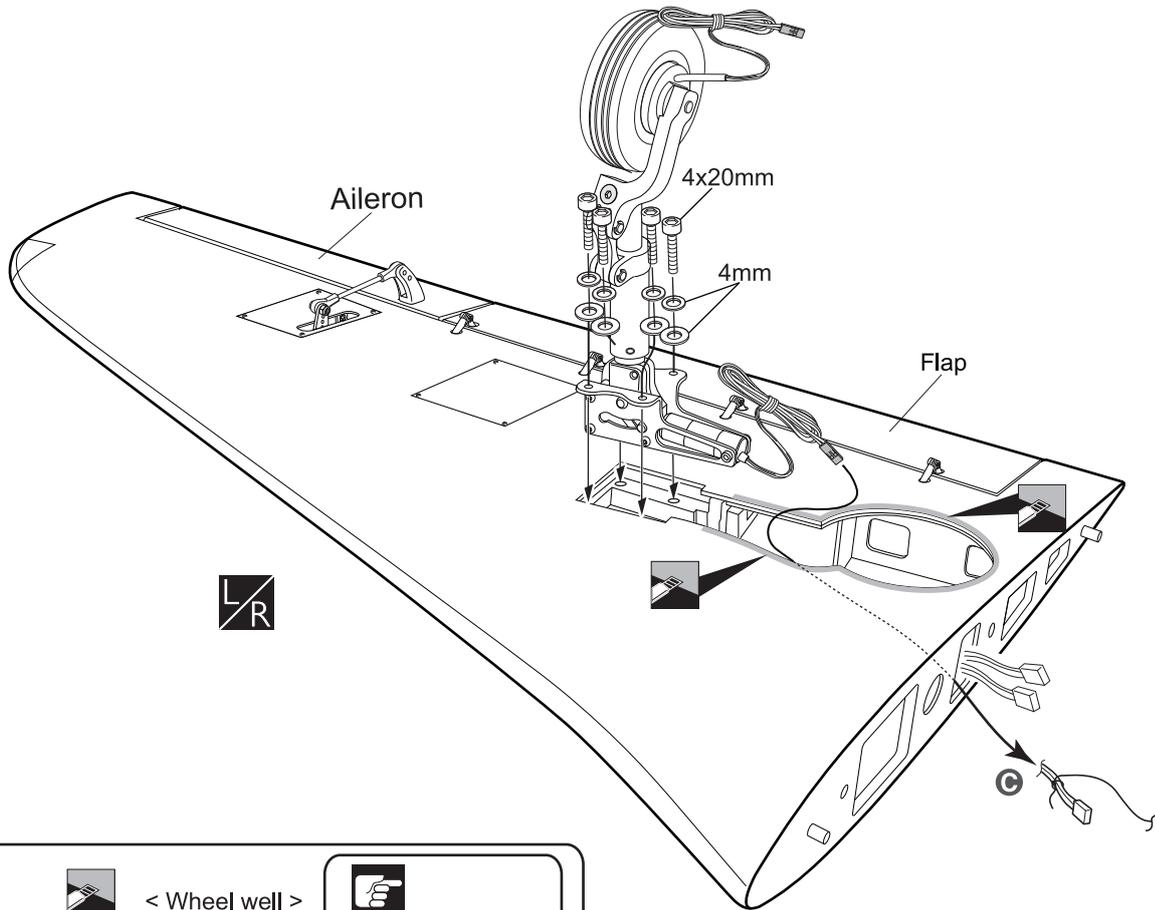


Ⓒ Pull out servo cord with string.

☞ Pay close attention here!

ⓁⓇ Assemble left and right sides the same way


ⒶⒷ Apply epoxy glue.

☞ Cut off shaded portion

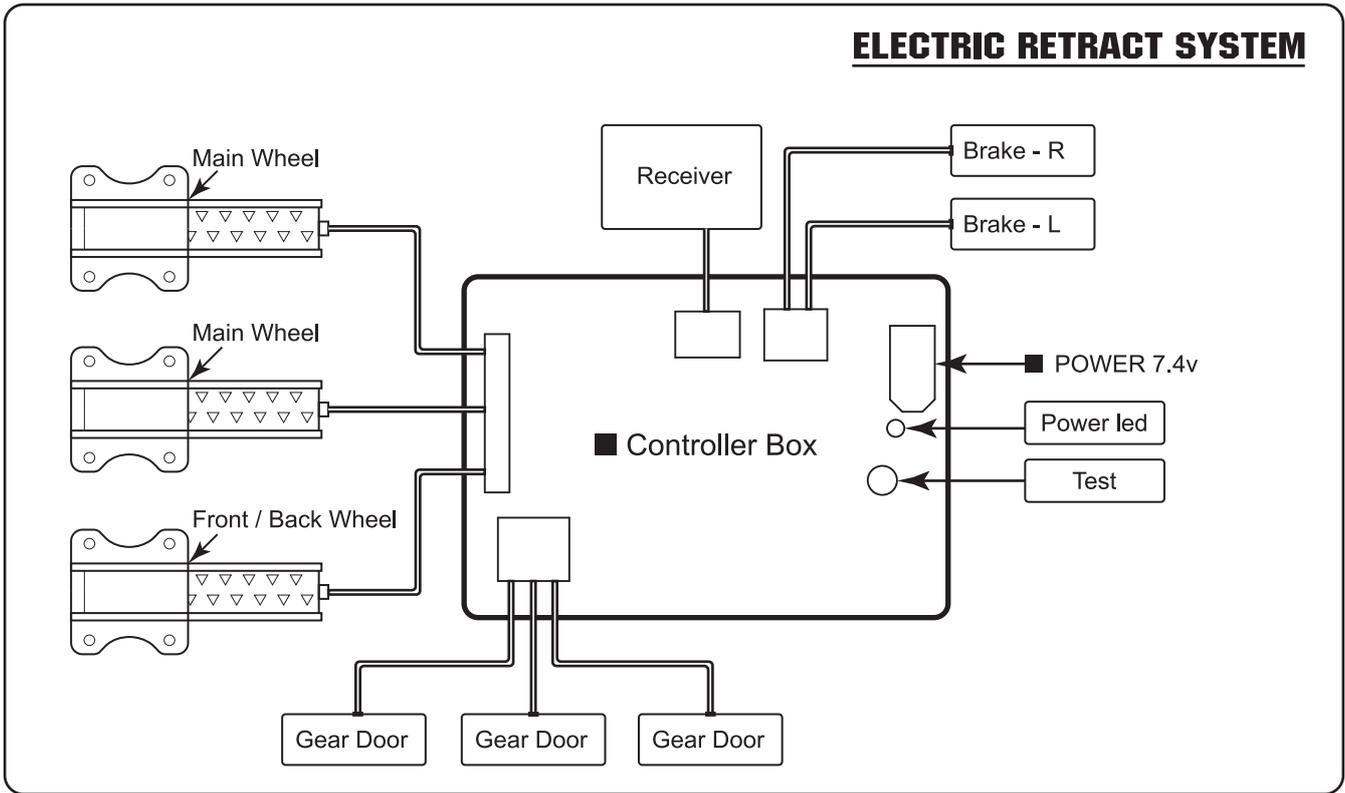


SECURE THE FUSELAGE

- 4 x 20mm Cap Screw 4
- 4mm Washer 4
- 4 x 8mm Button Screw 8
- 4mm Washer 8
- Fiberglass plate 2

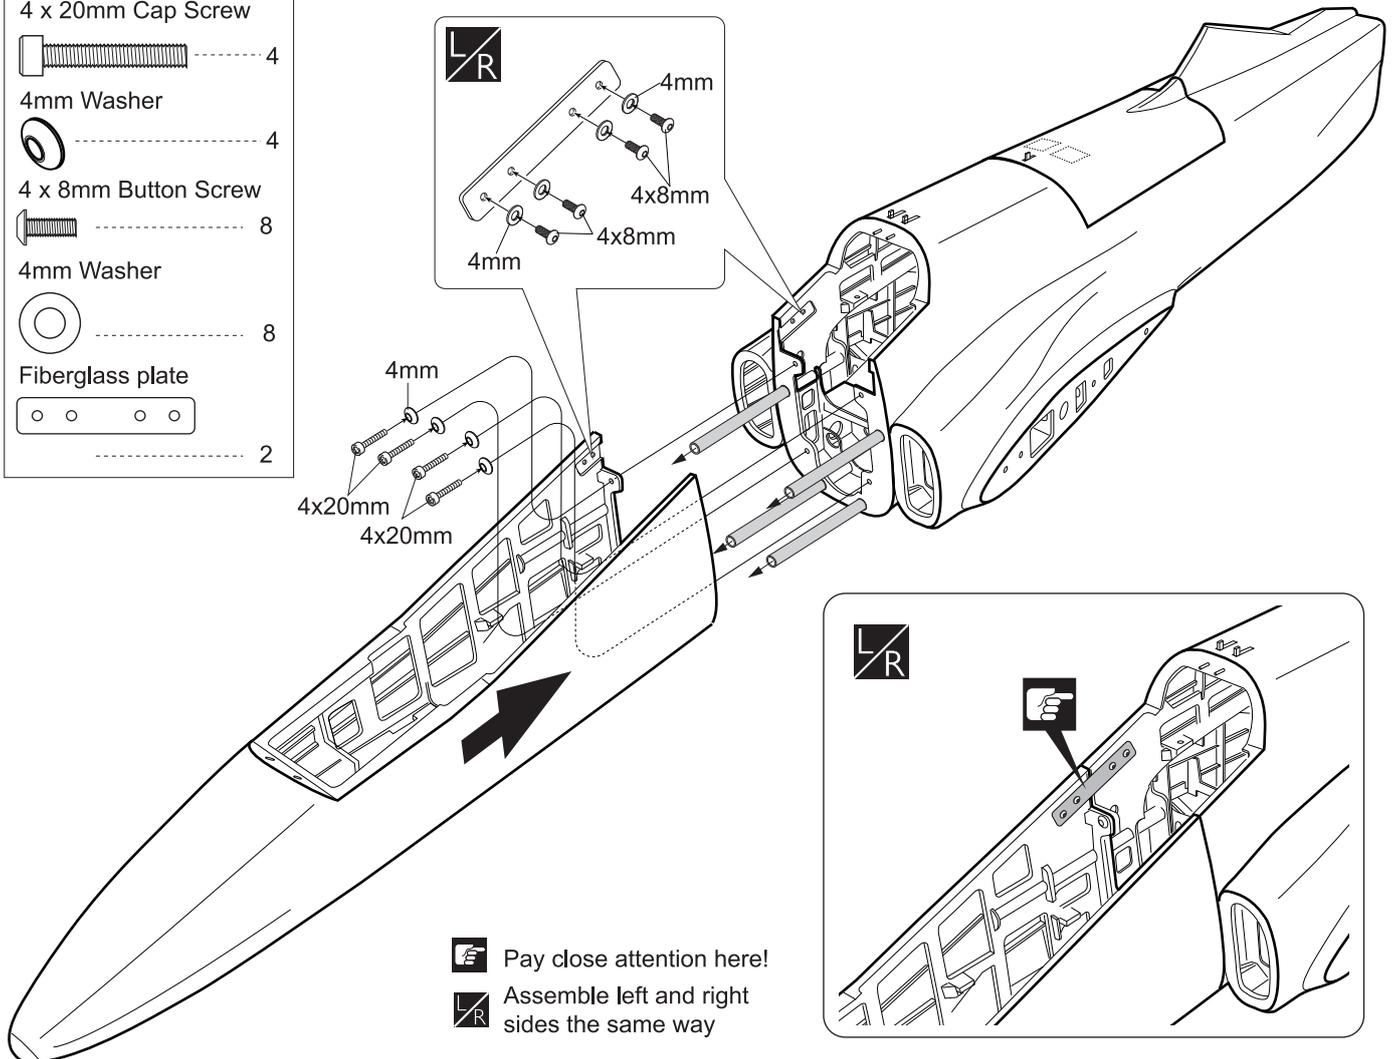




INSTALLING THE LIP OF AIR INLET

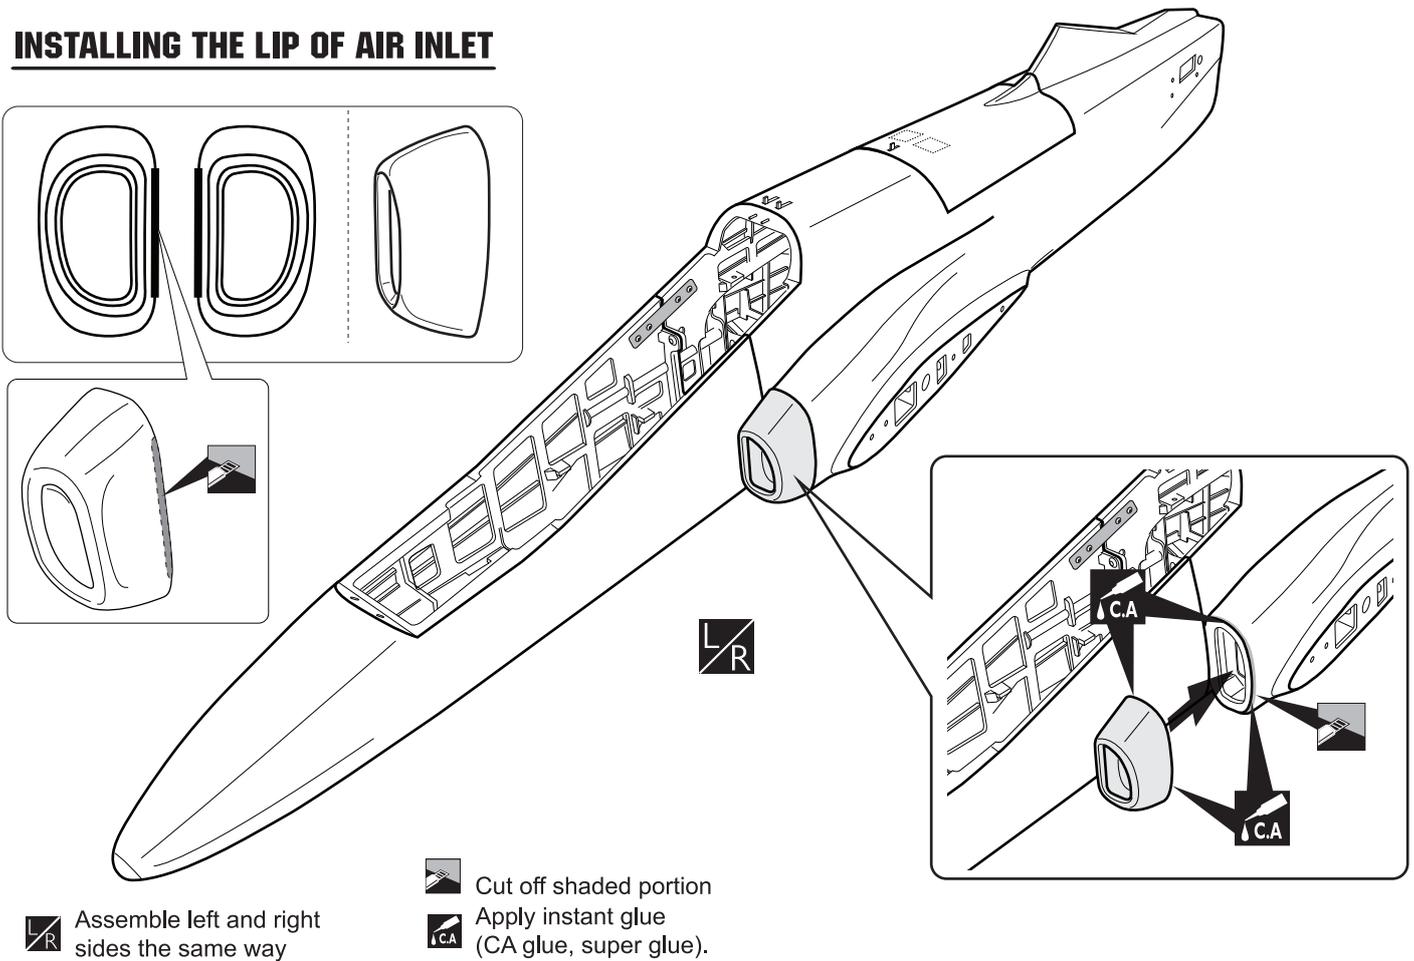


SECURE THE WING TO THE FUSELAGE

Attach the wings to the fuselage and secure the wing panels.

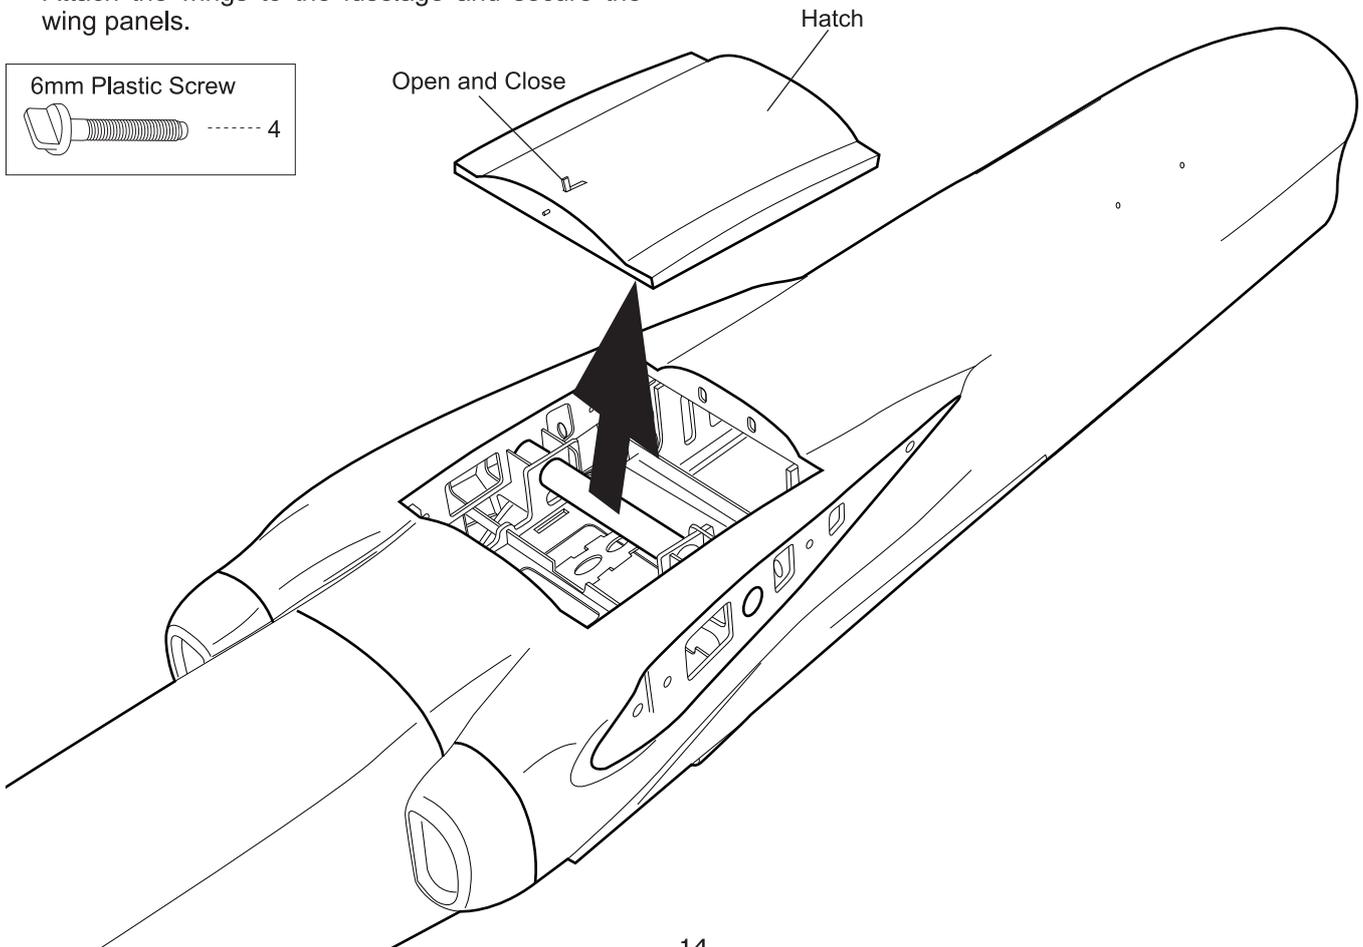

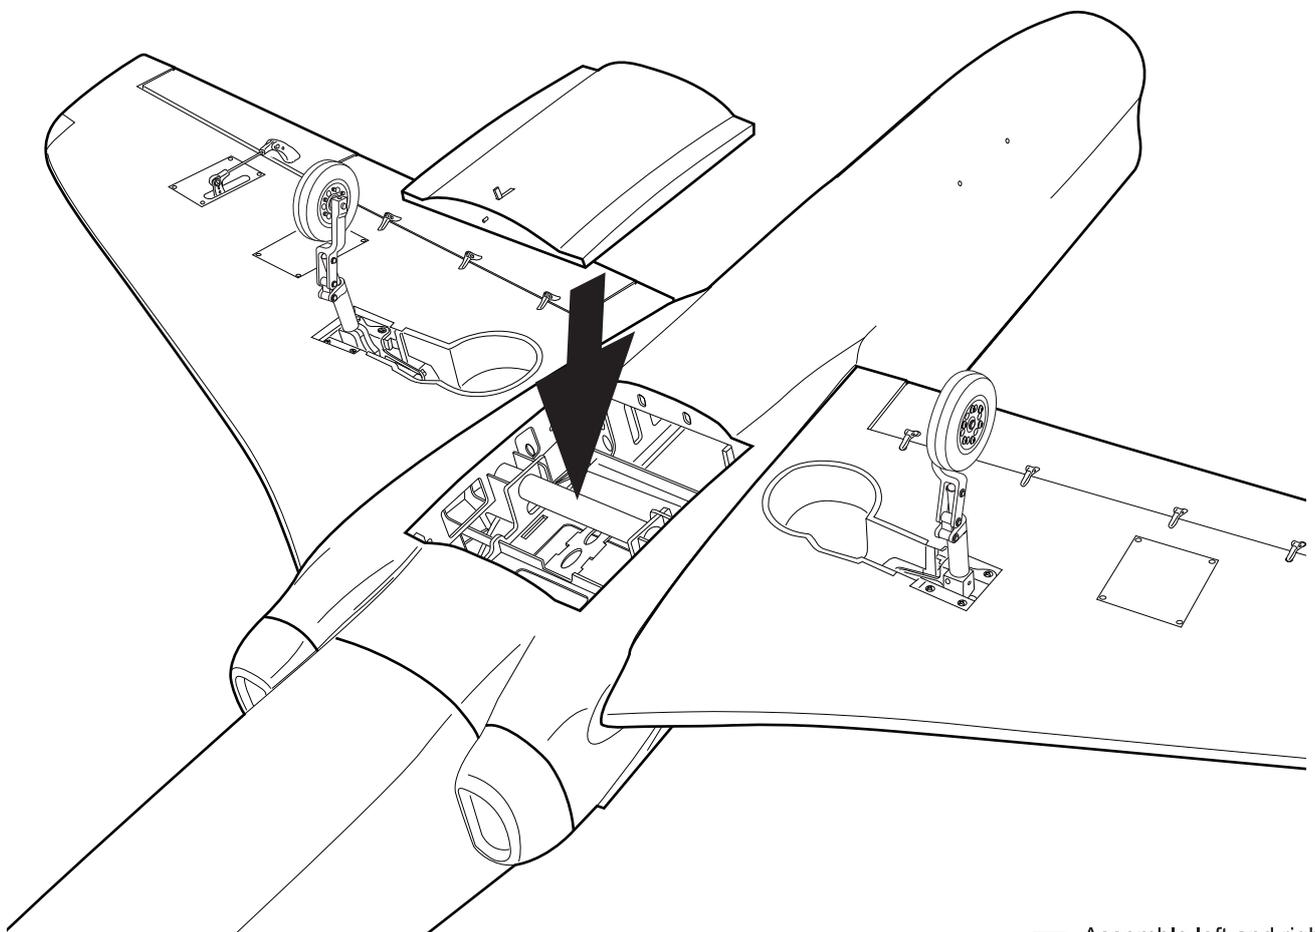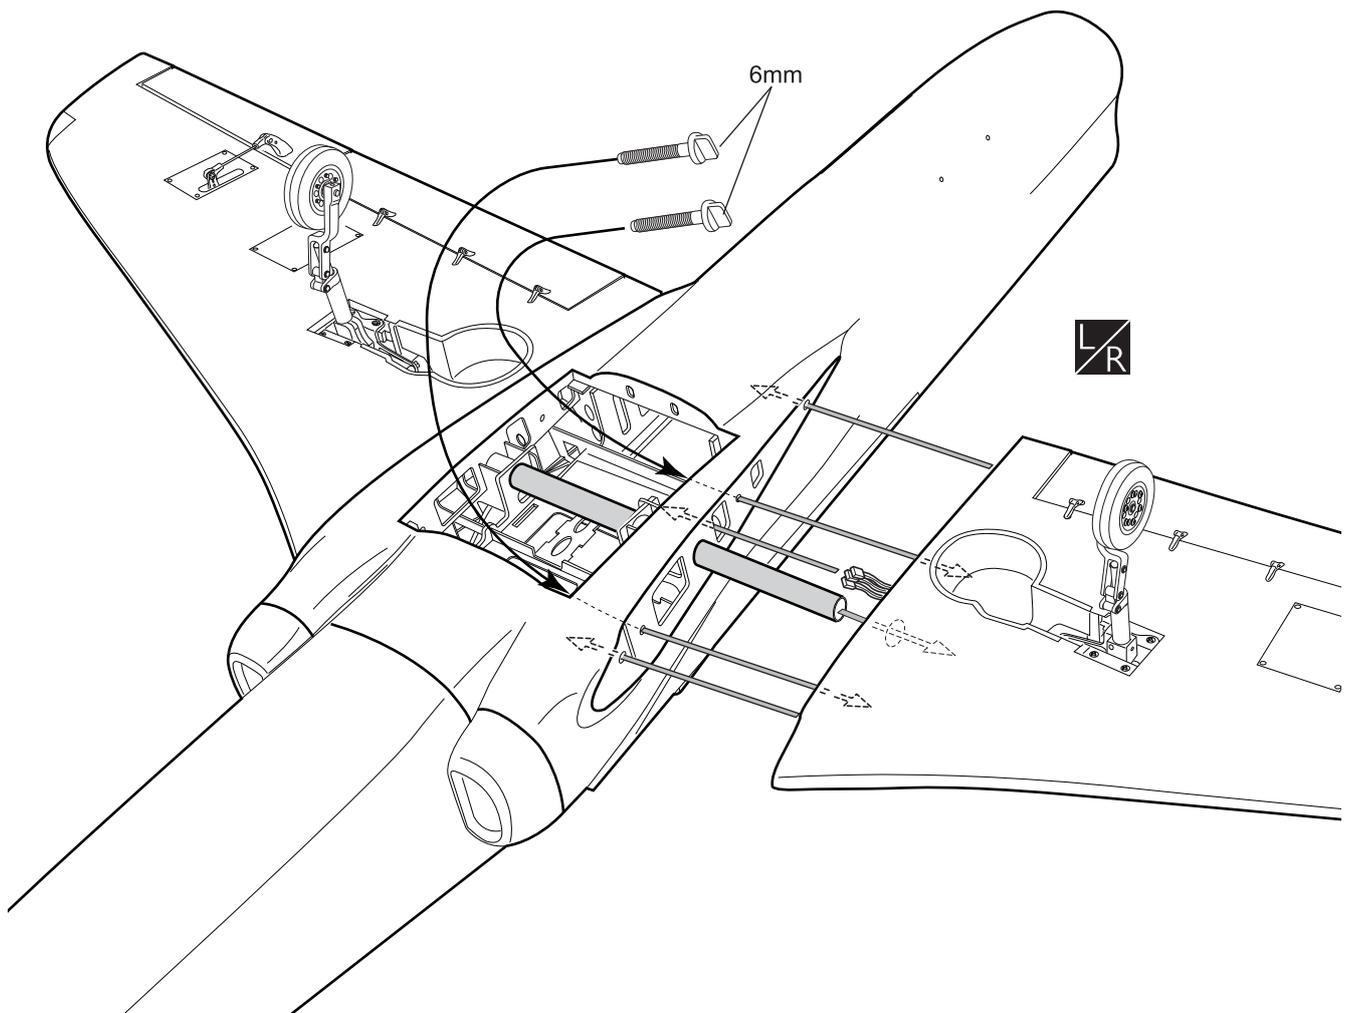










 Assemble left and right sides the same way

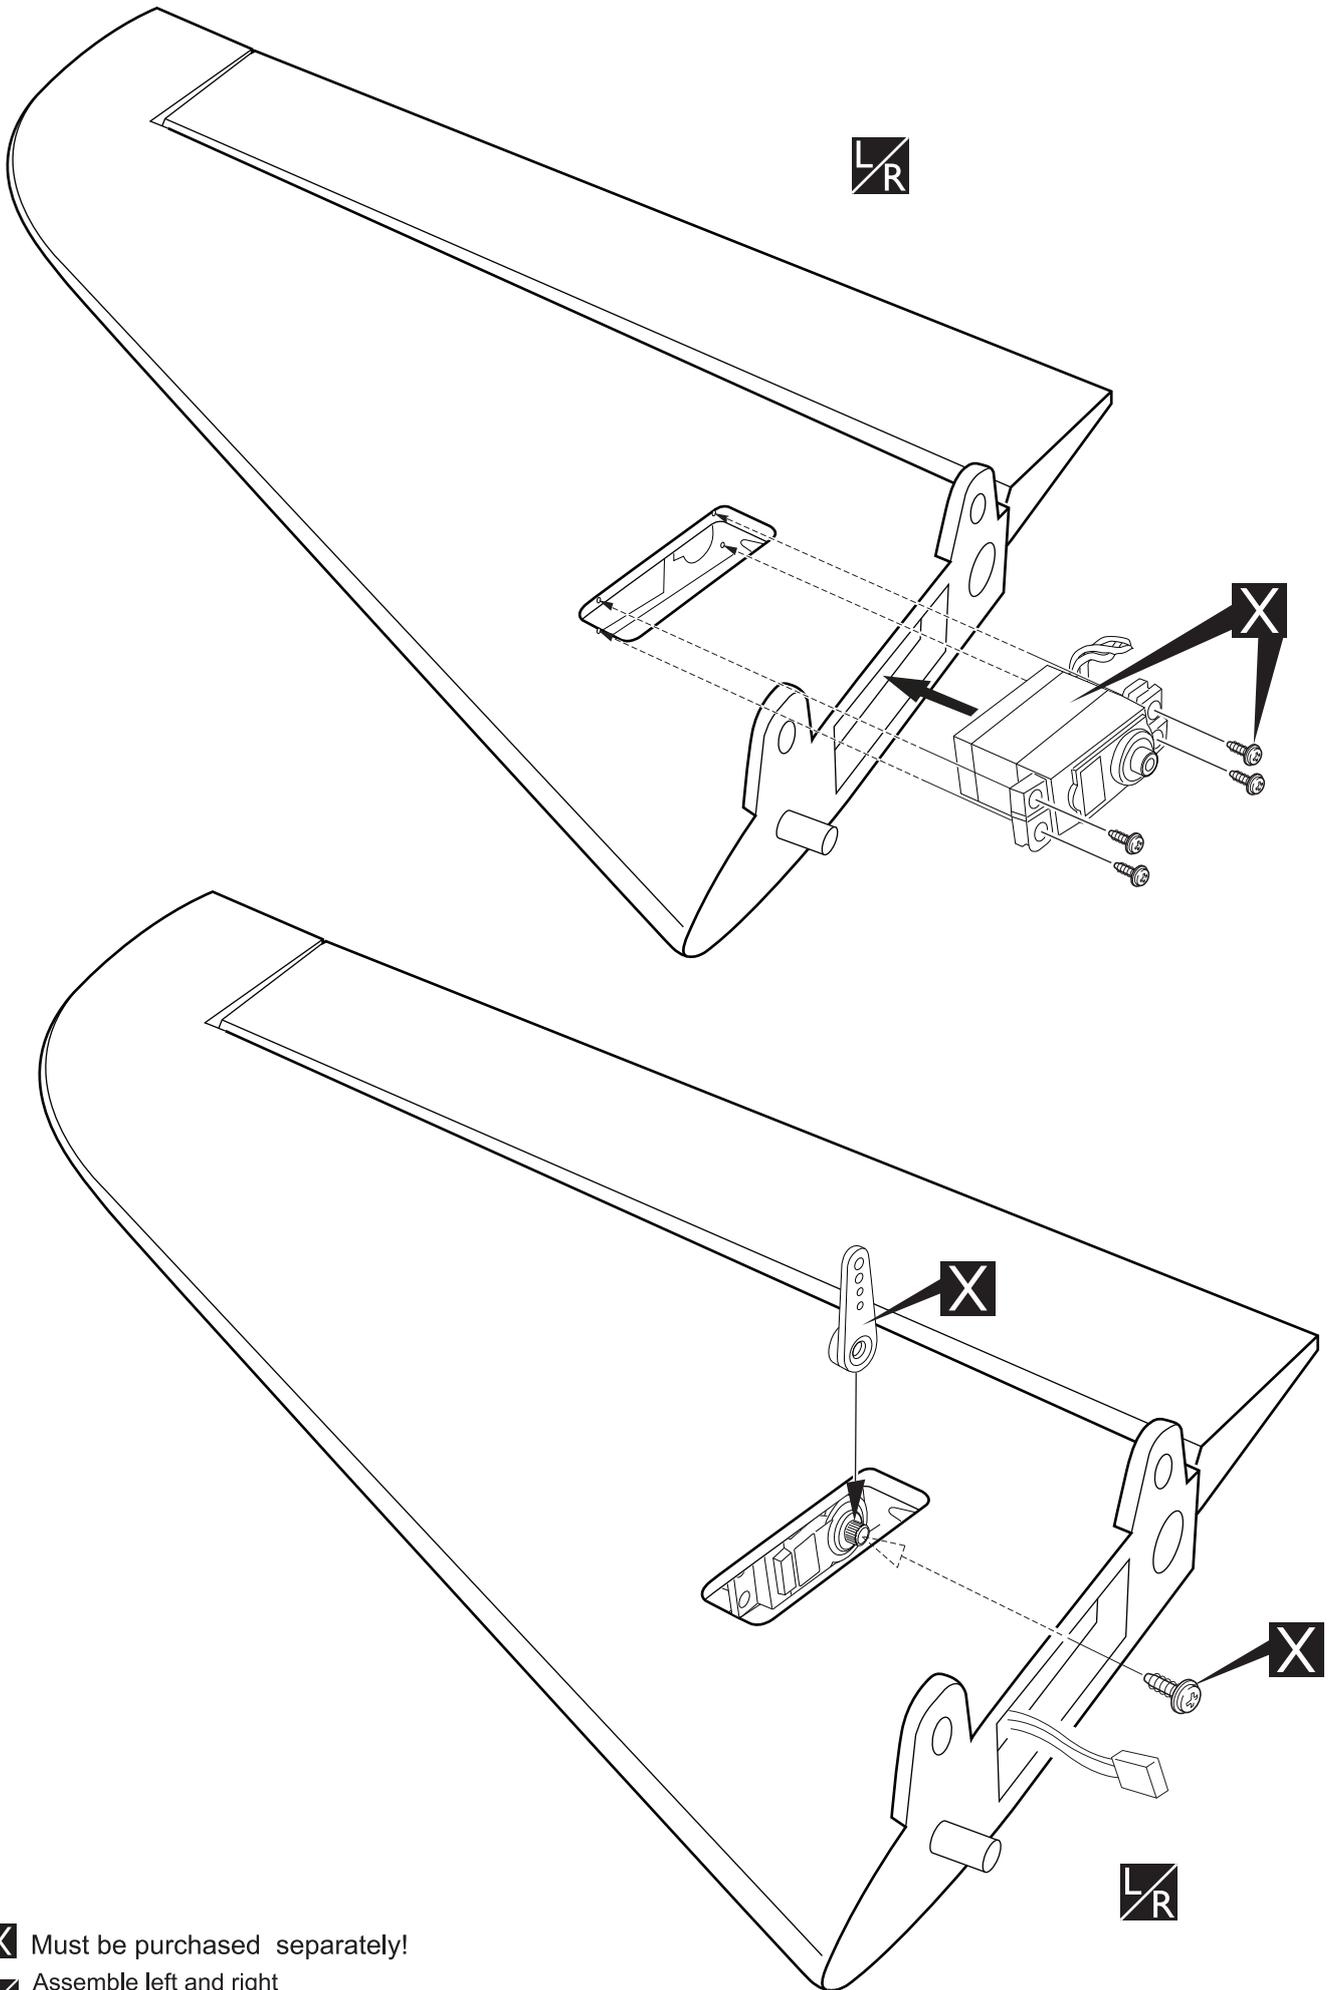

X Must be purchased separately!



L/R Assemble left and right sides the same way

INSTALLING THE ELEVATOR PUSHROD

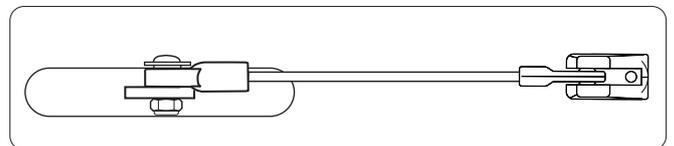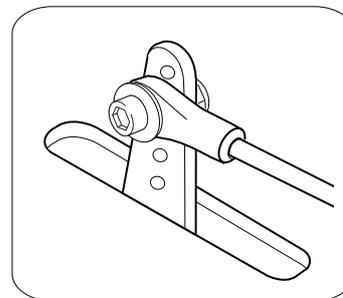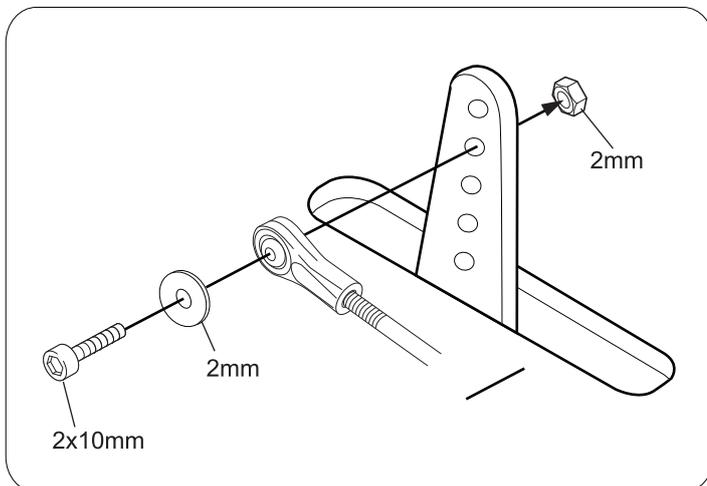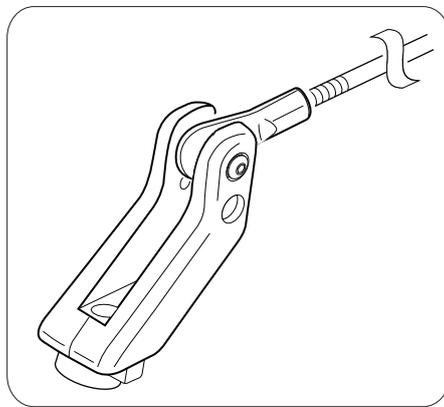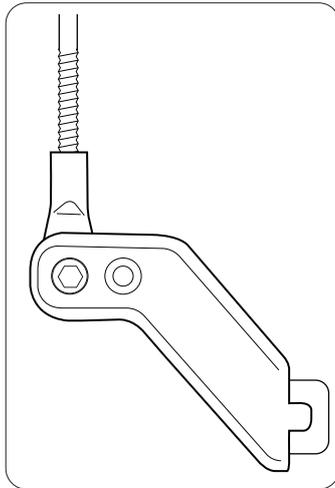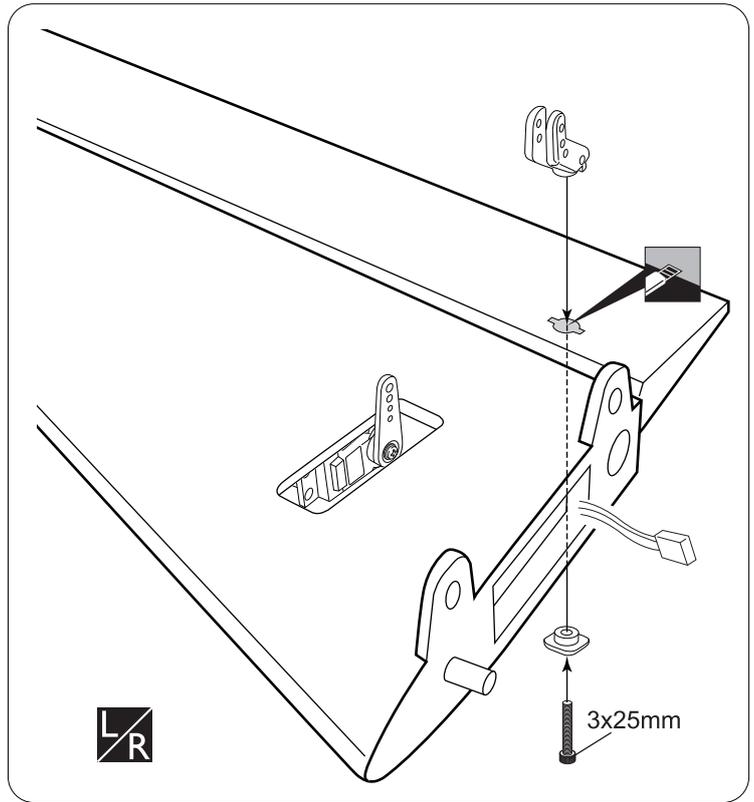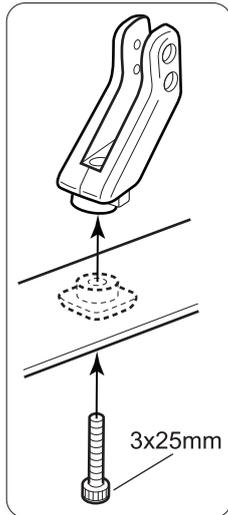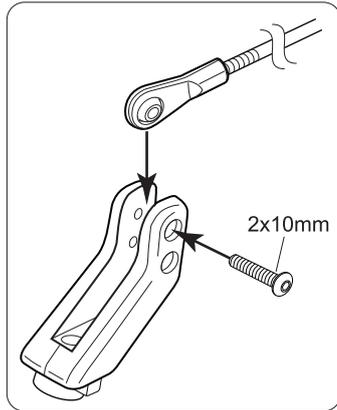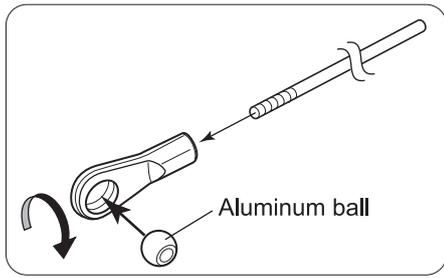

 Cut off shaded portion


 Assemble left and right sides the same way.

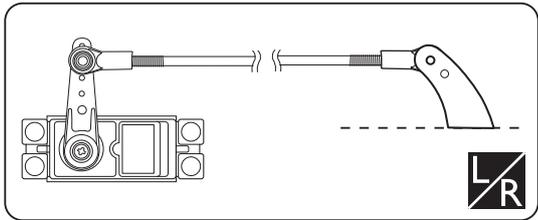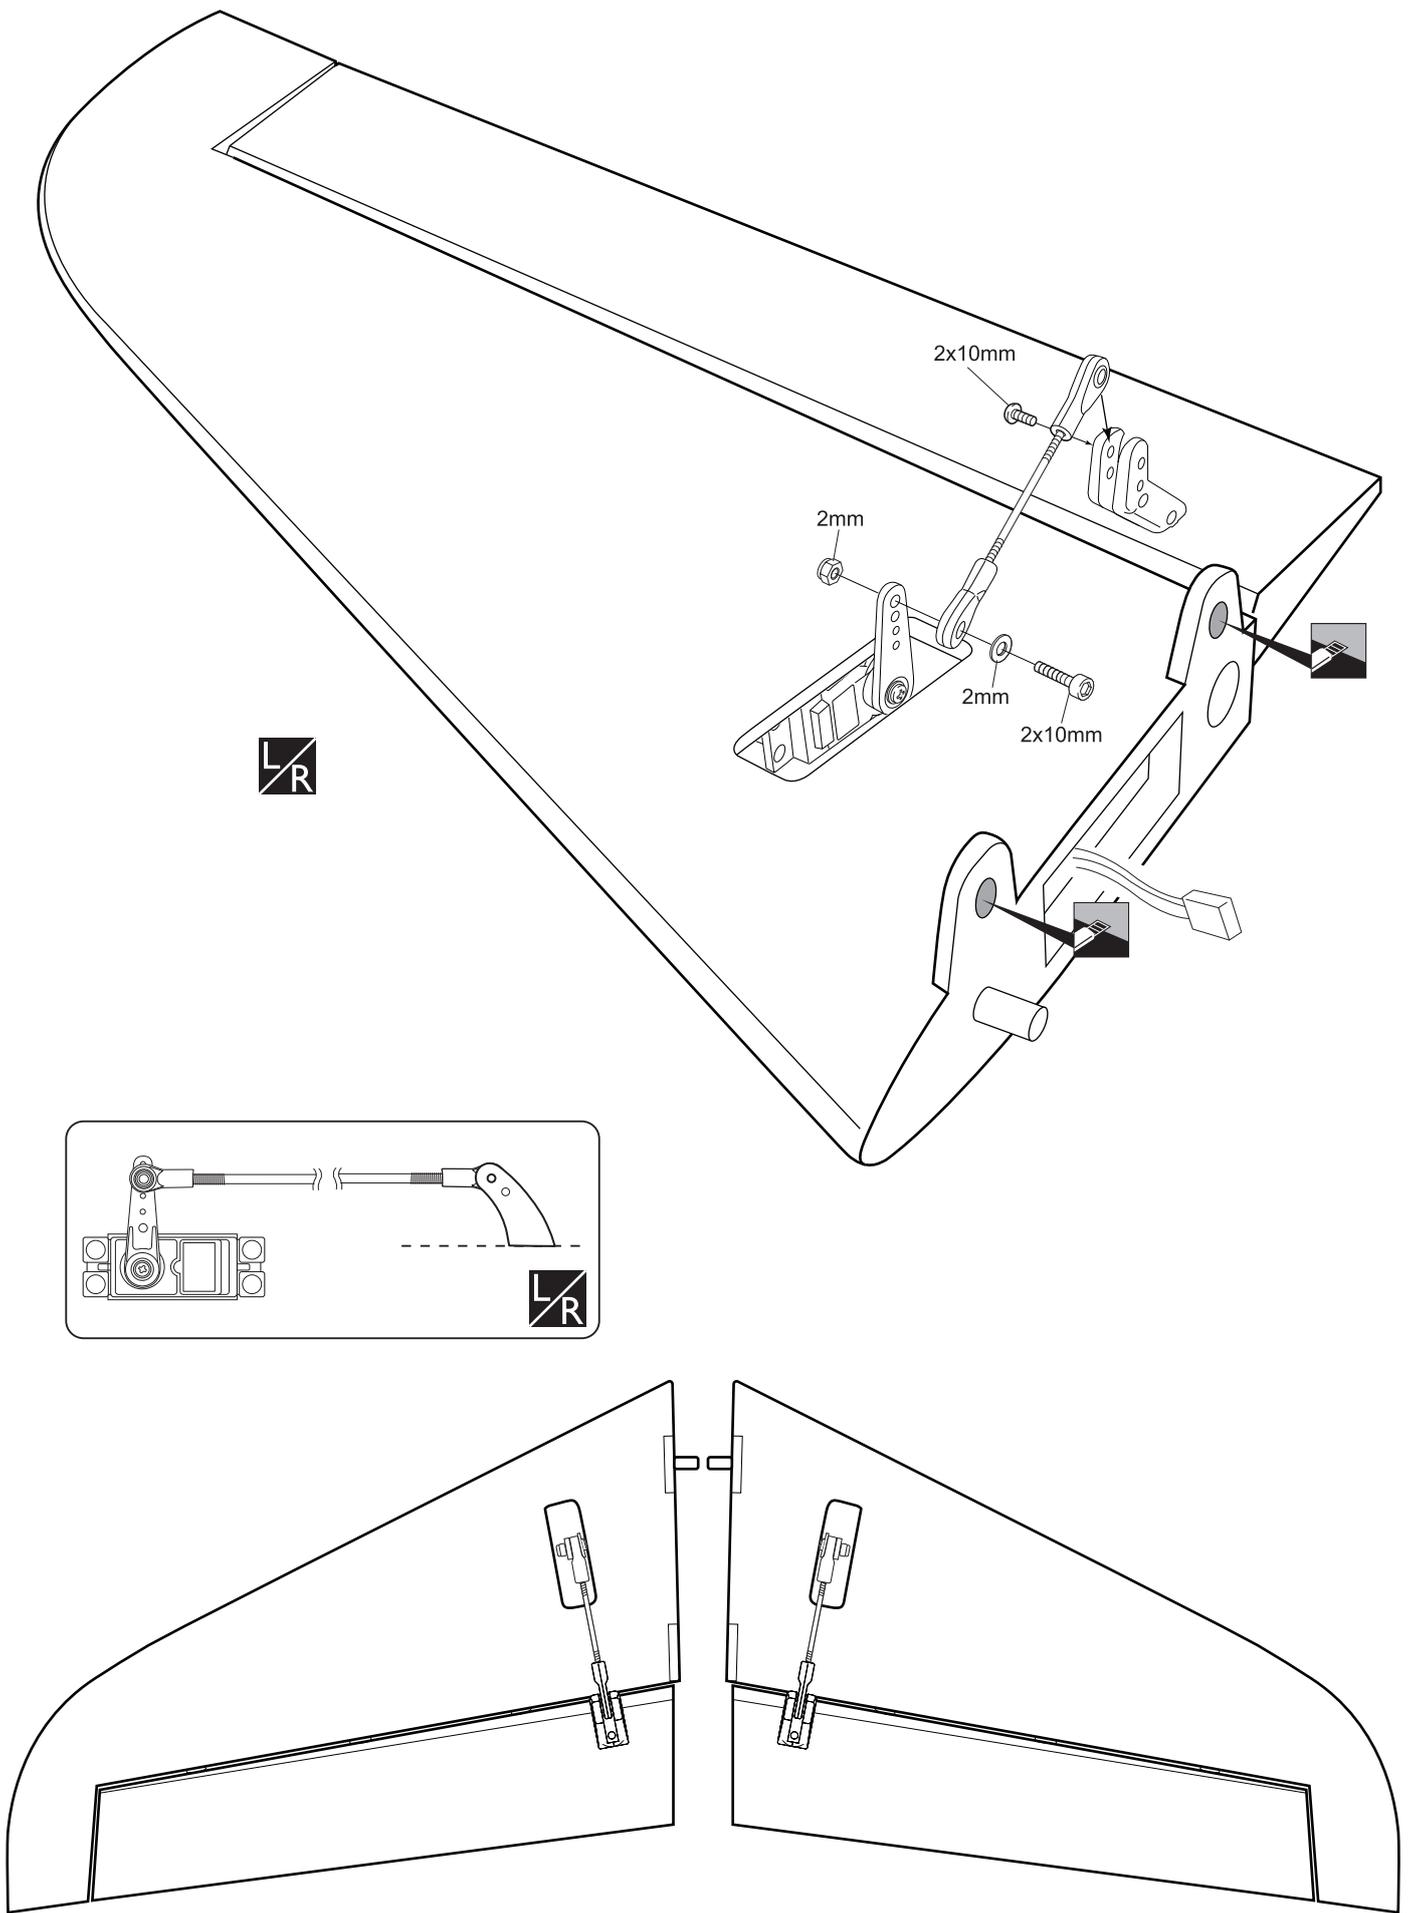

 Cut off shaded portion


 Assemble left and right sides the same way

HORIZONTAL STABILIZER INSTALLATION

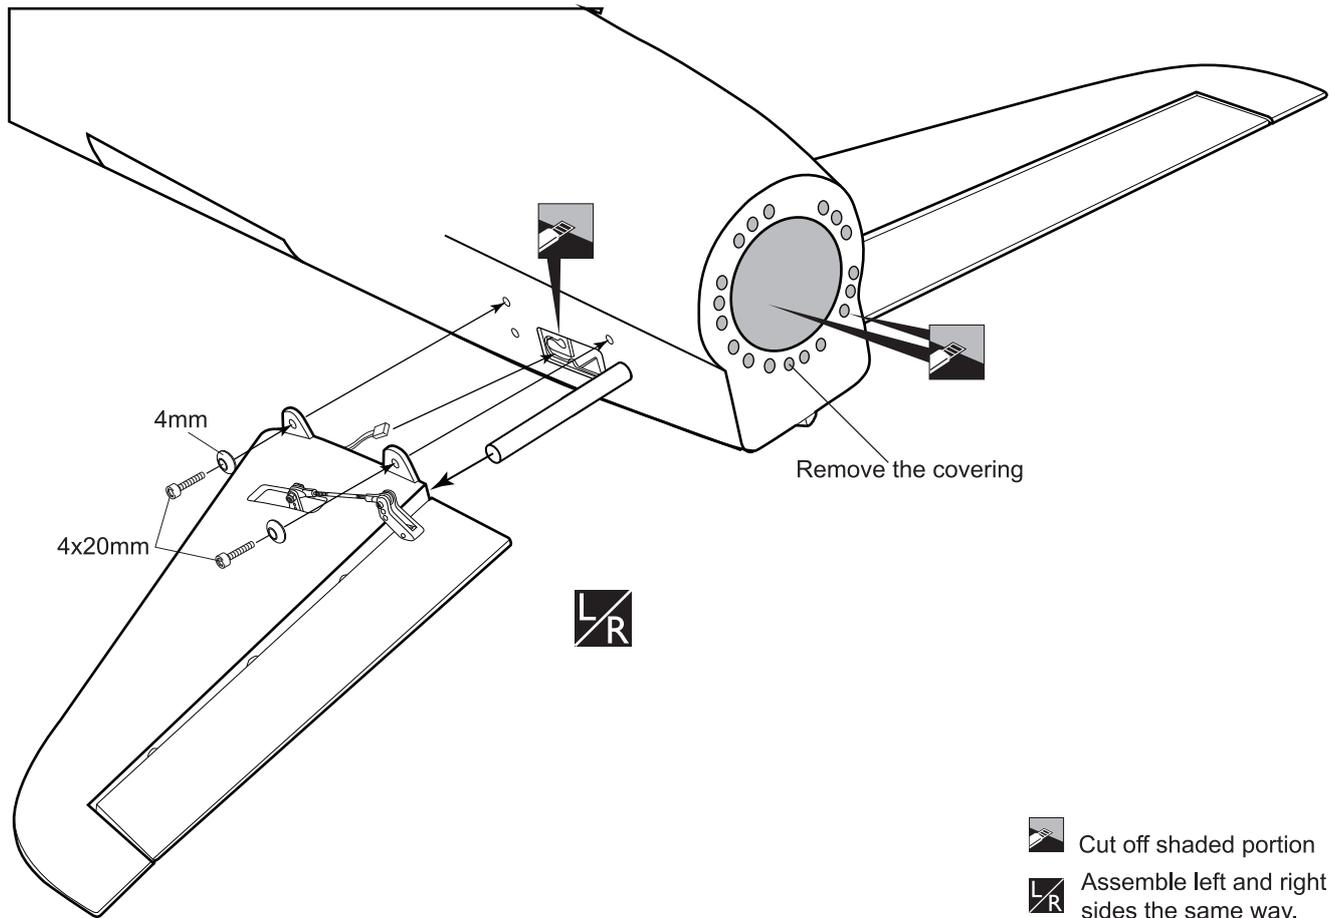


-  Cut off shaded portion
-  Assemble left and right sides the same way.

- | | |
|--------------------|---|
| 4 x 20mm Cap Screw | 4 |
| 4mm Spring Washer | 4 |
| 4mm Washer | 4 |

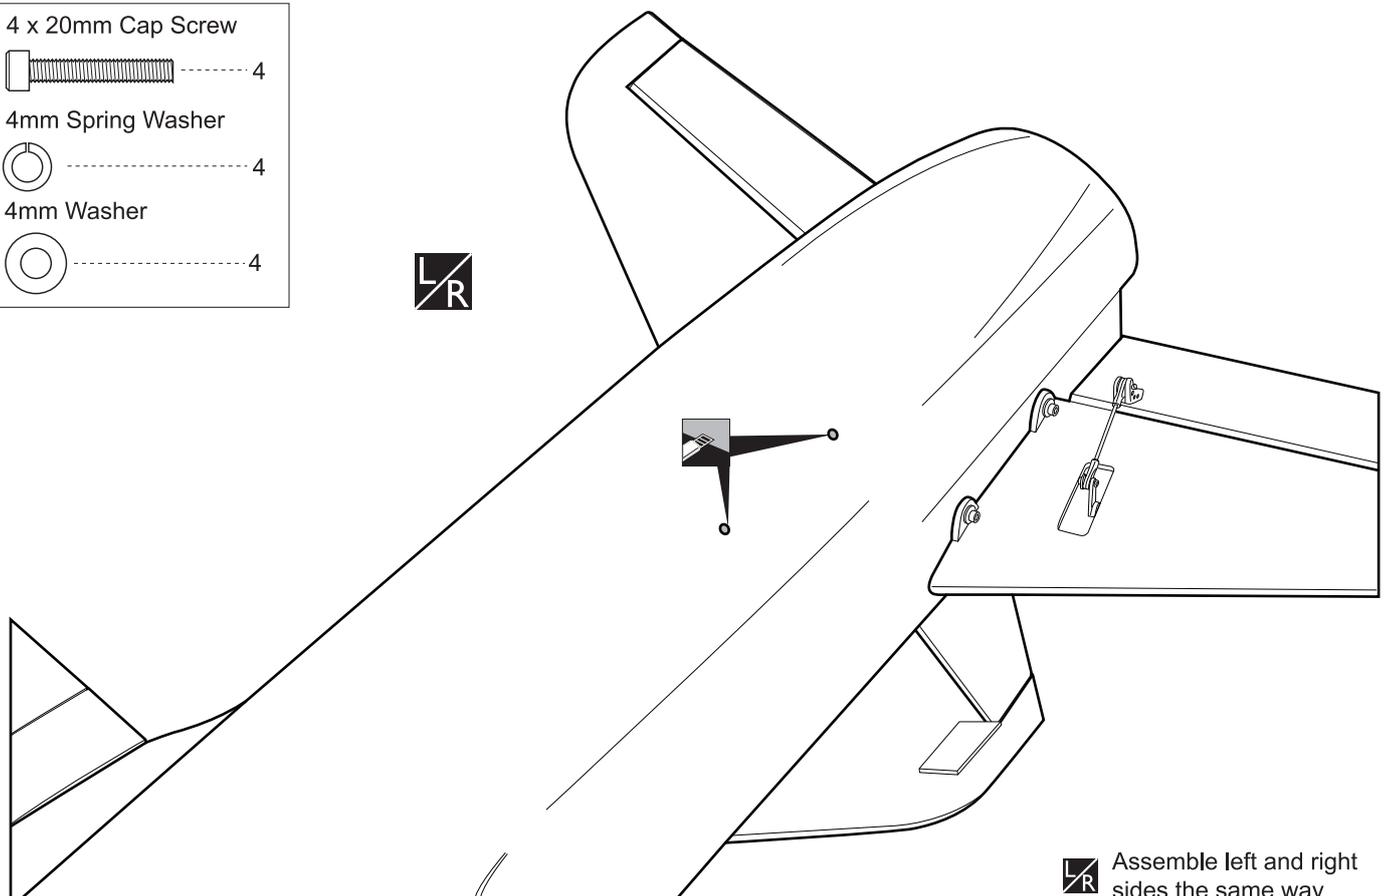


-  Assemble left and right sides the same way
-  Cut off shaded portion

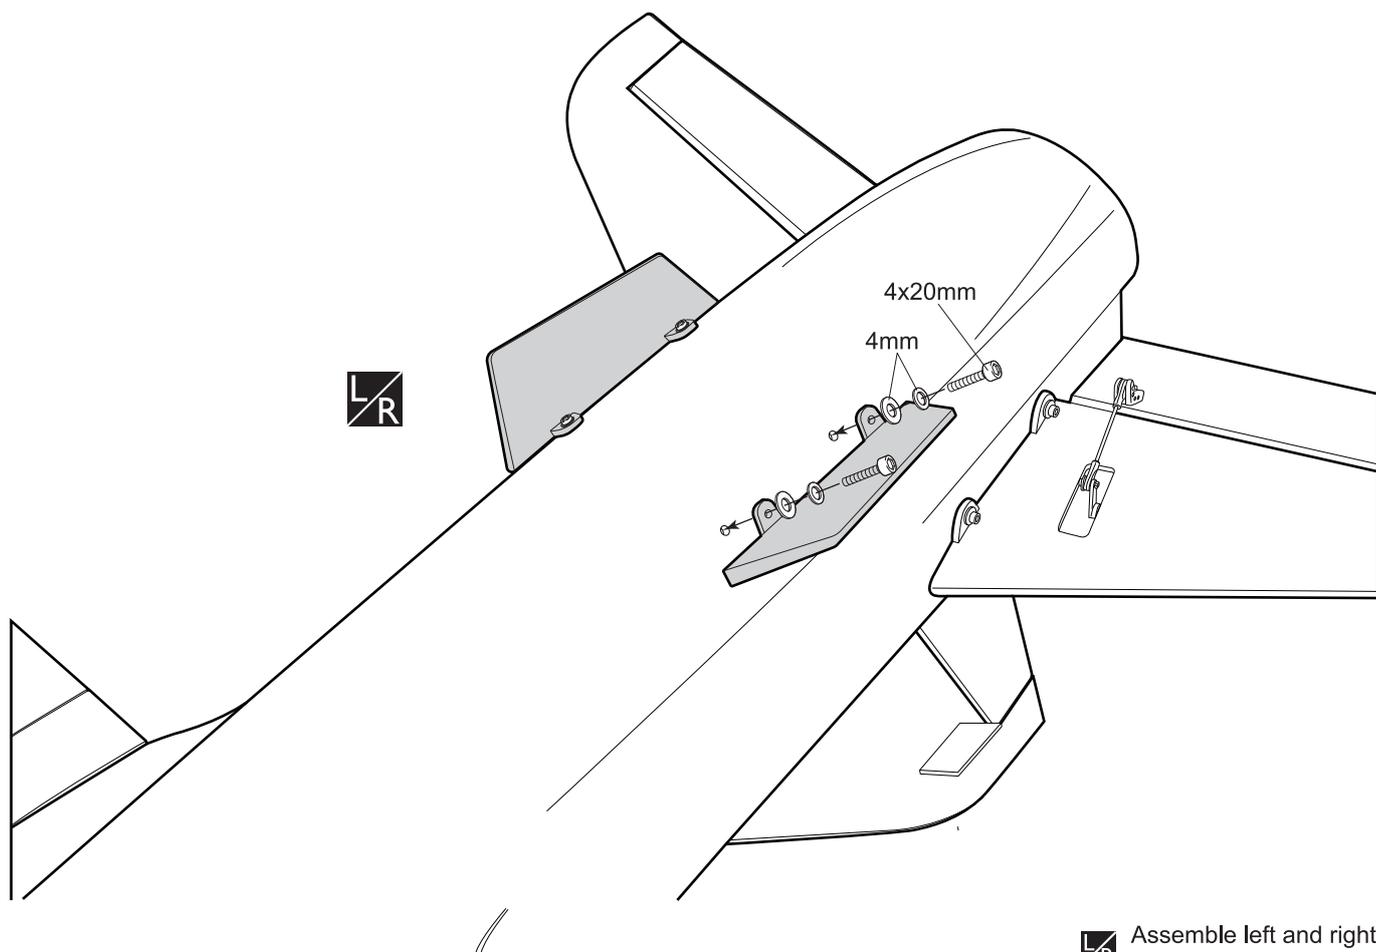

L
R Assemble left and right sides the same way

INSTALLING THE VERTICAL STABILIZER

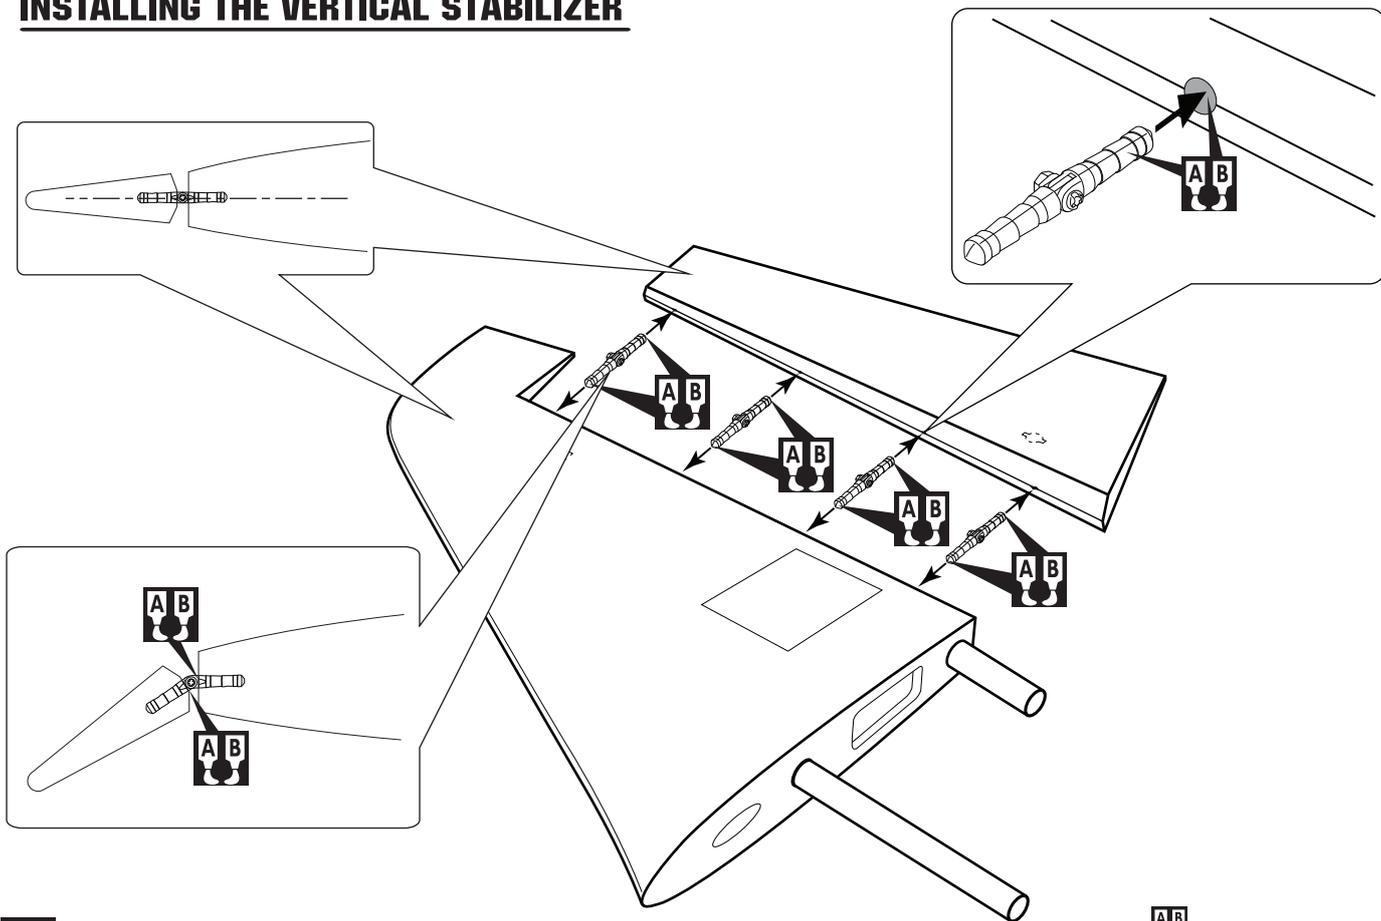





▶ Take off the main wing after put a rudder.



Apply epoxy glue

INSTALLING THE VERTICAL STABILIZER

SERVO






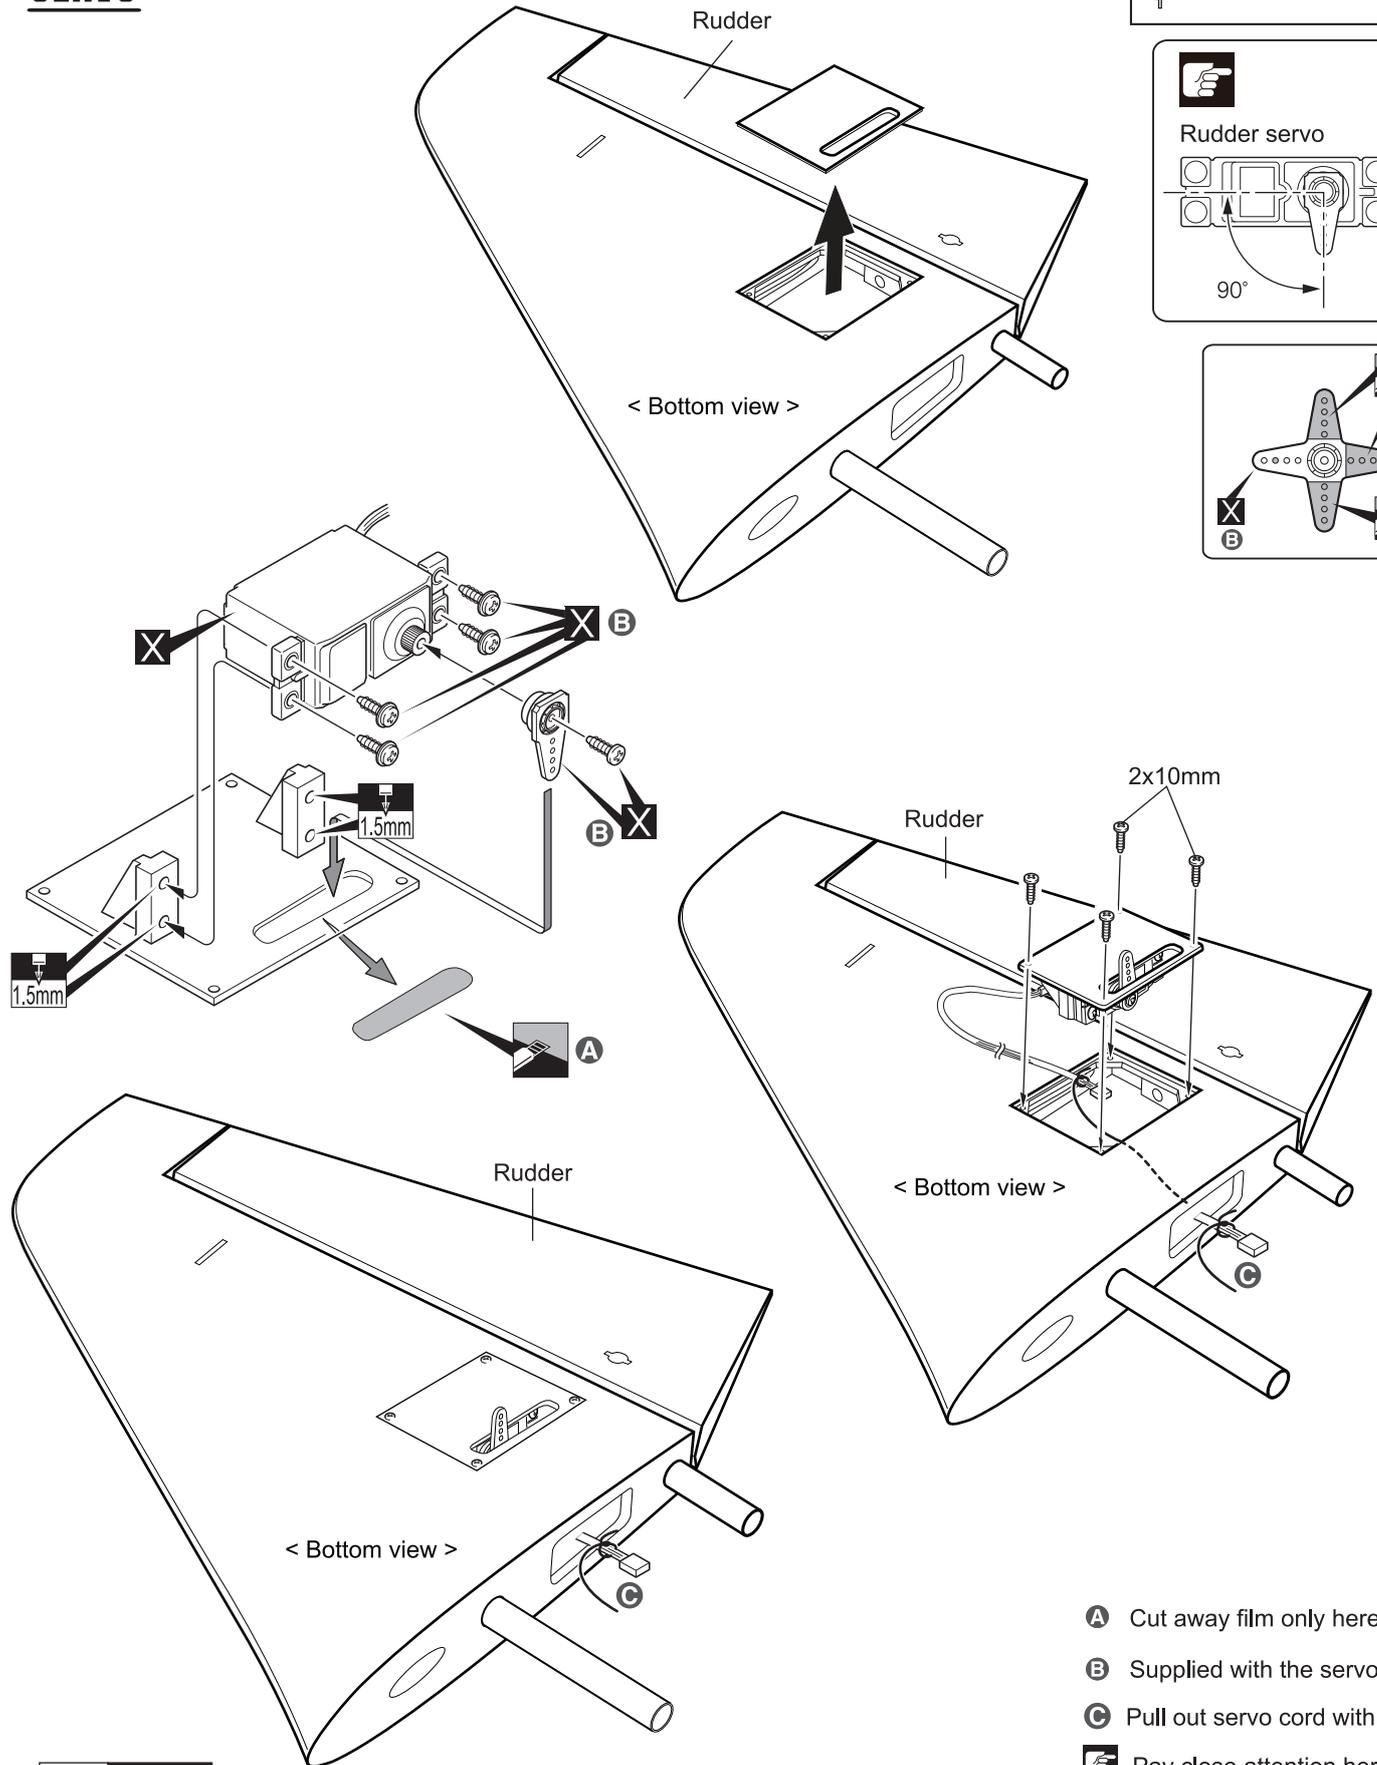
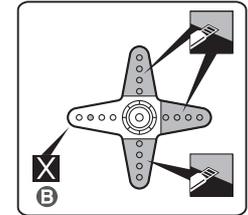
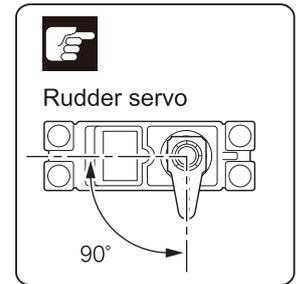



- A** Cut away film only here.
- B** Supplied with the servo
- C** Pull out servo cord with string.
- Pay close attention here!
- X** Must be purchased separately!
- Cut off shaded portion
- Drill holes with the specified diameter.




► Set all screws securely. If they come off during flight you will lose control of your aircraft!

INSTALLING THE VERTICAL STABILIZER PUSHROD

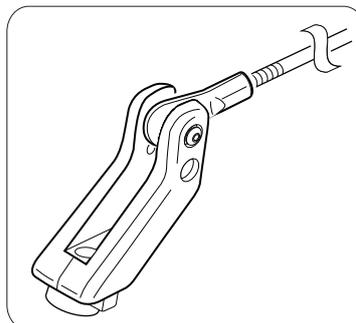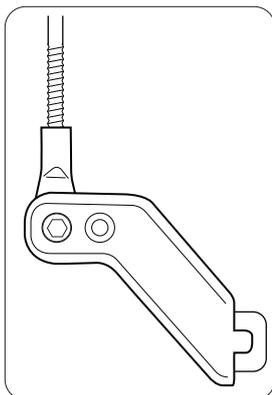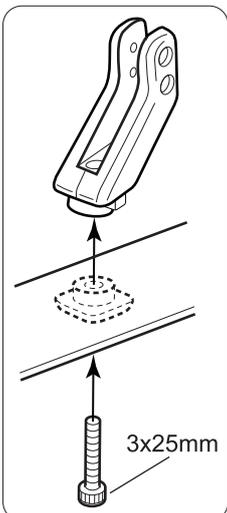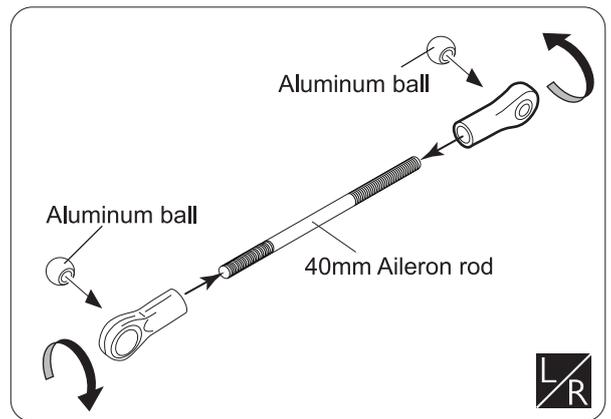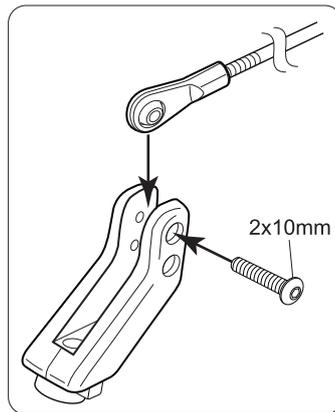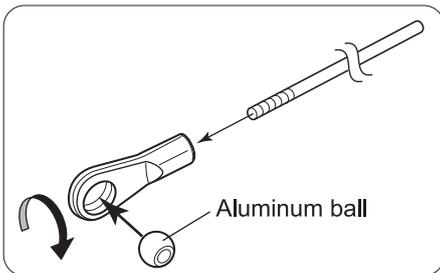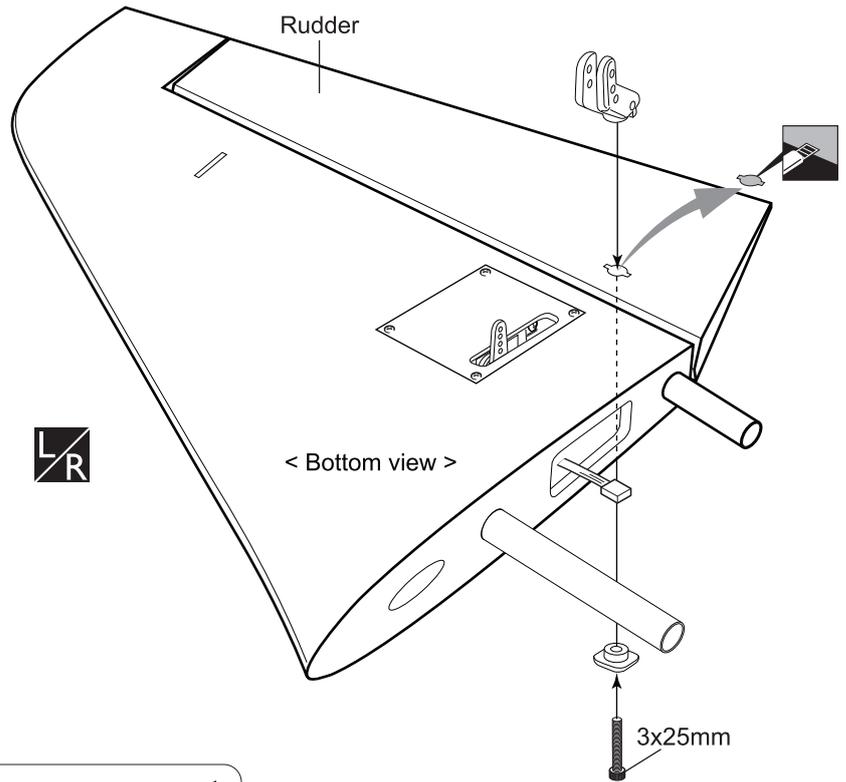
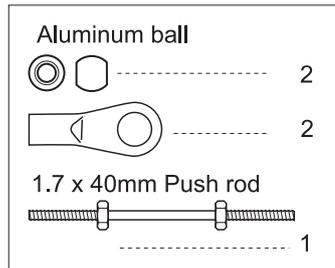
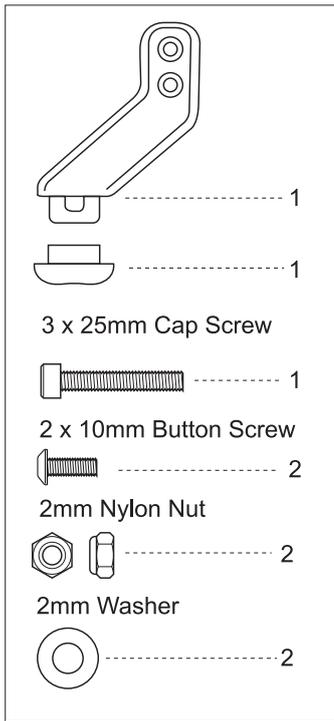


Cut off shaded portion
 Assemble left and right sides the same way


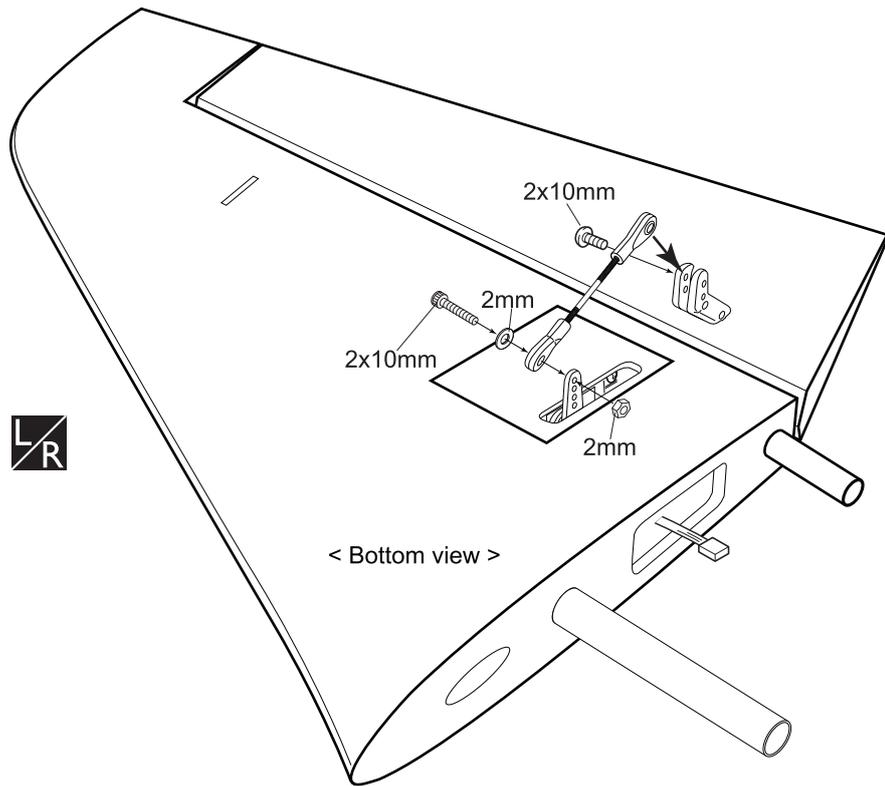


Warning!

► Set all screws securely. If they come off during flight you will lose control of your aircraft!

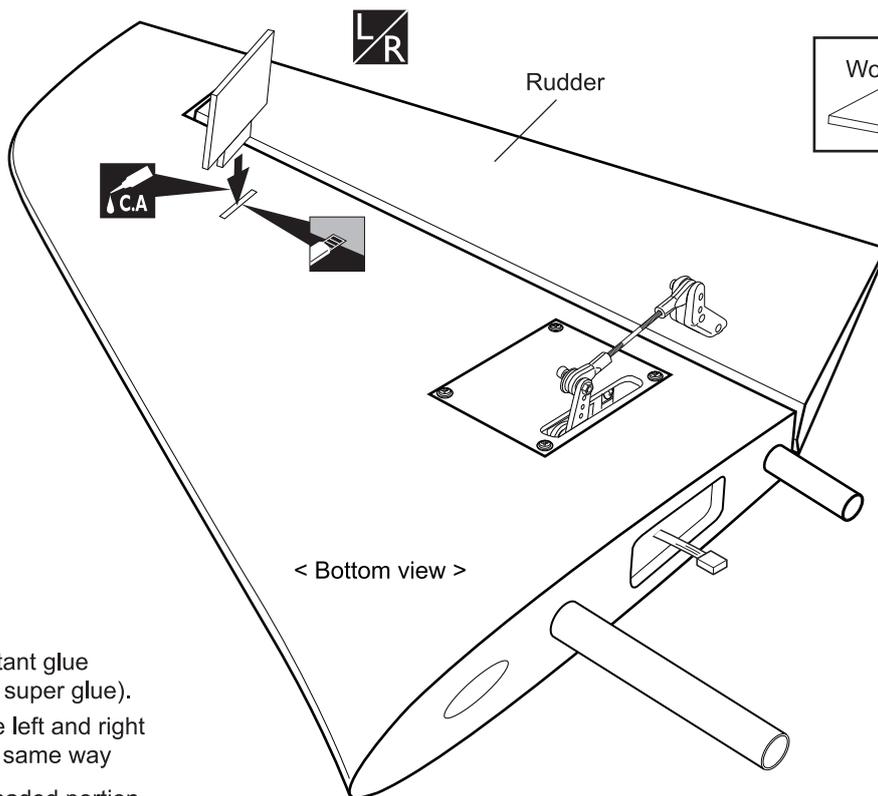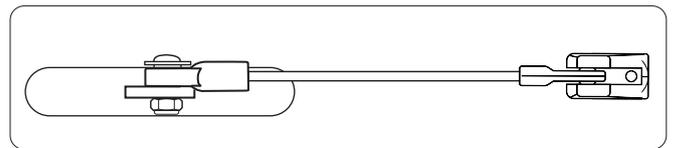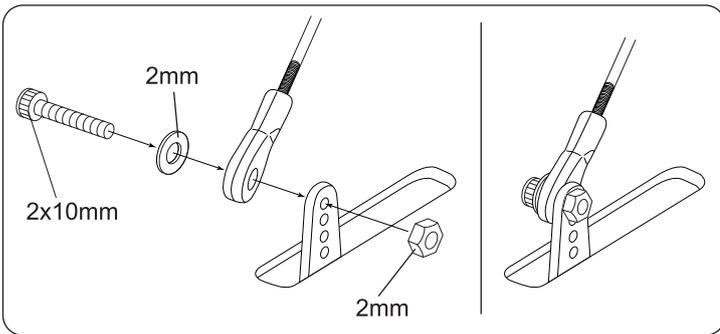

-  Apply instant glue (CA glue, super glue).
-  Assemble left and right sides the same way
-  Cut off shaded portion

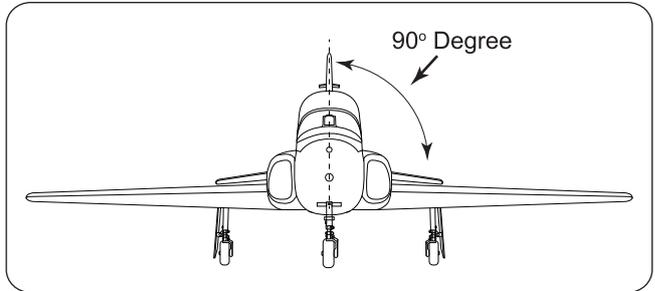
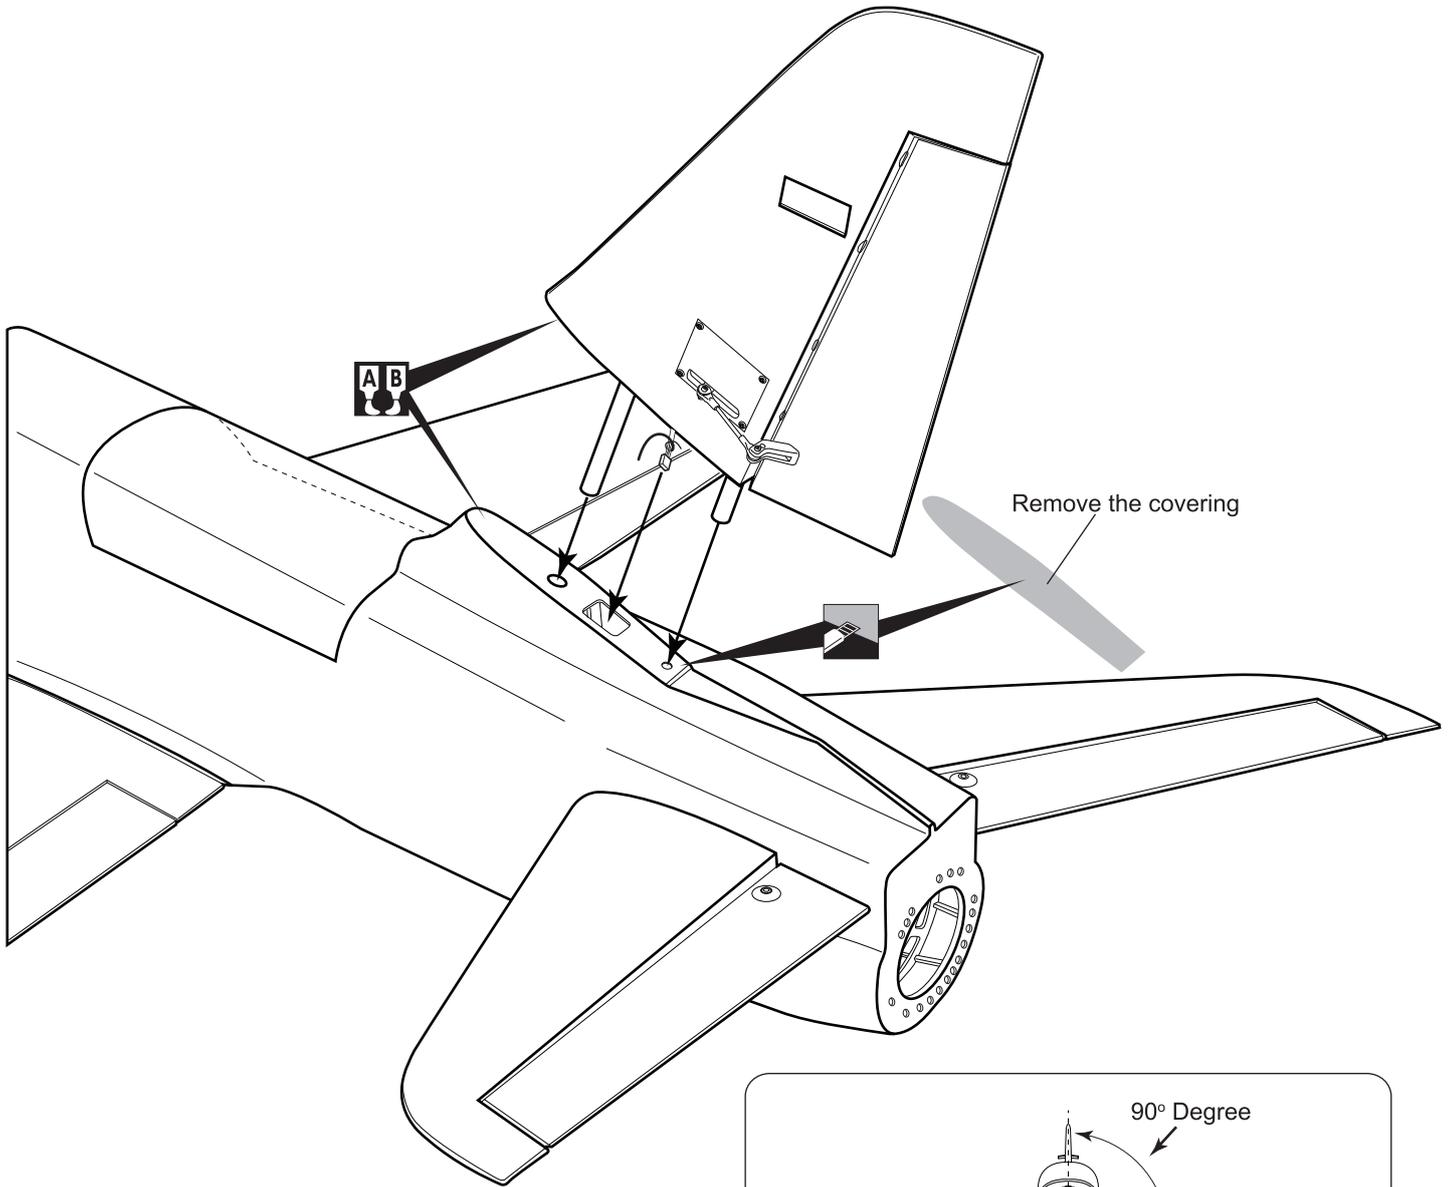





-  Apply epoxy glue
-  Cut off shaded portion

INSTALLING THE NOSE GEAR RETRACT

3 x 12mm Screw 1
 1
3mm Nylon Nut 1
  1
3mm Washer 1
 1
Aluminum ball 1
  1
 2
3 x 30mm Push rod 1
 1


4mm Spring Washer 4
 4
4mm Washer 4
 4
4 x 20mm Cap Screw 4
 4

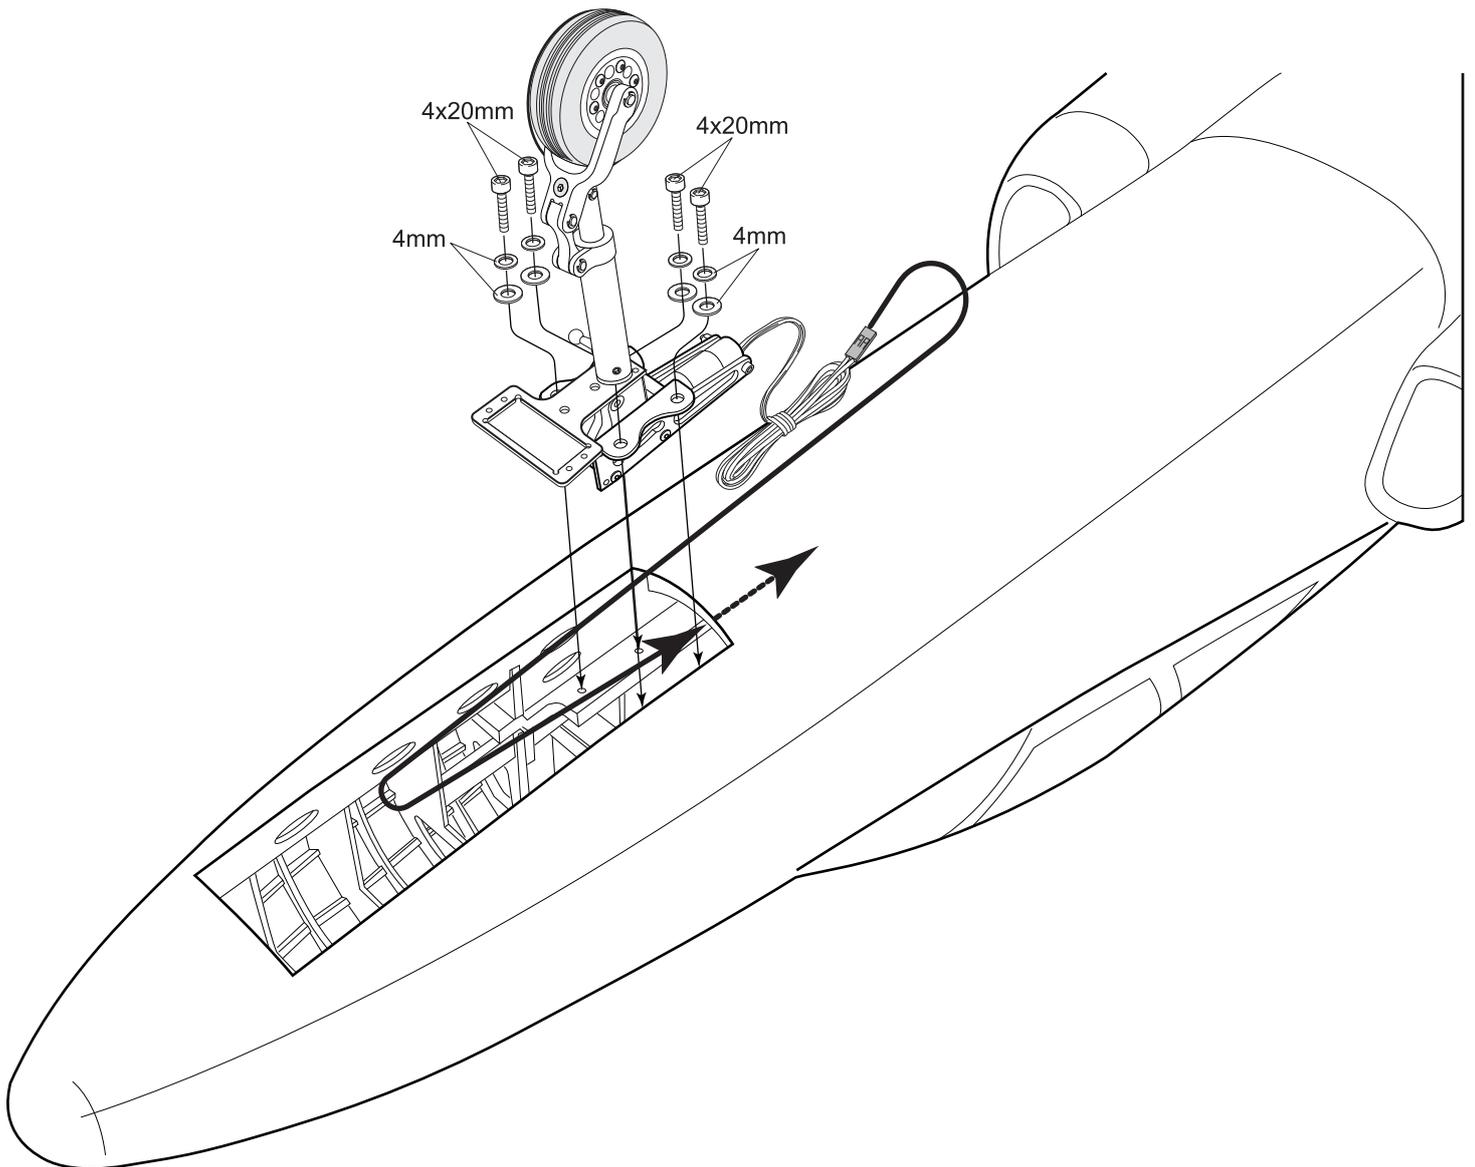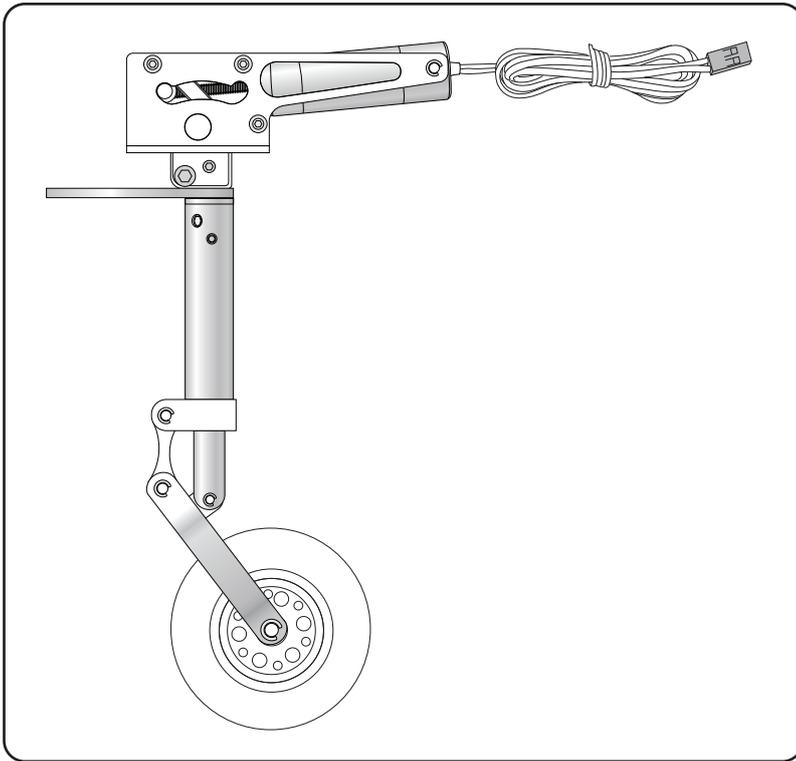

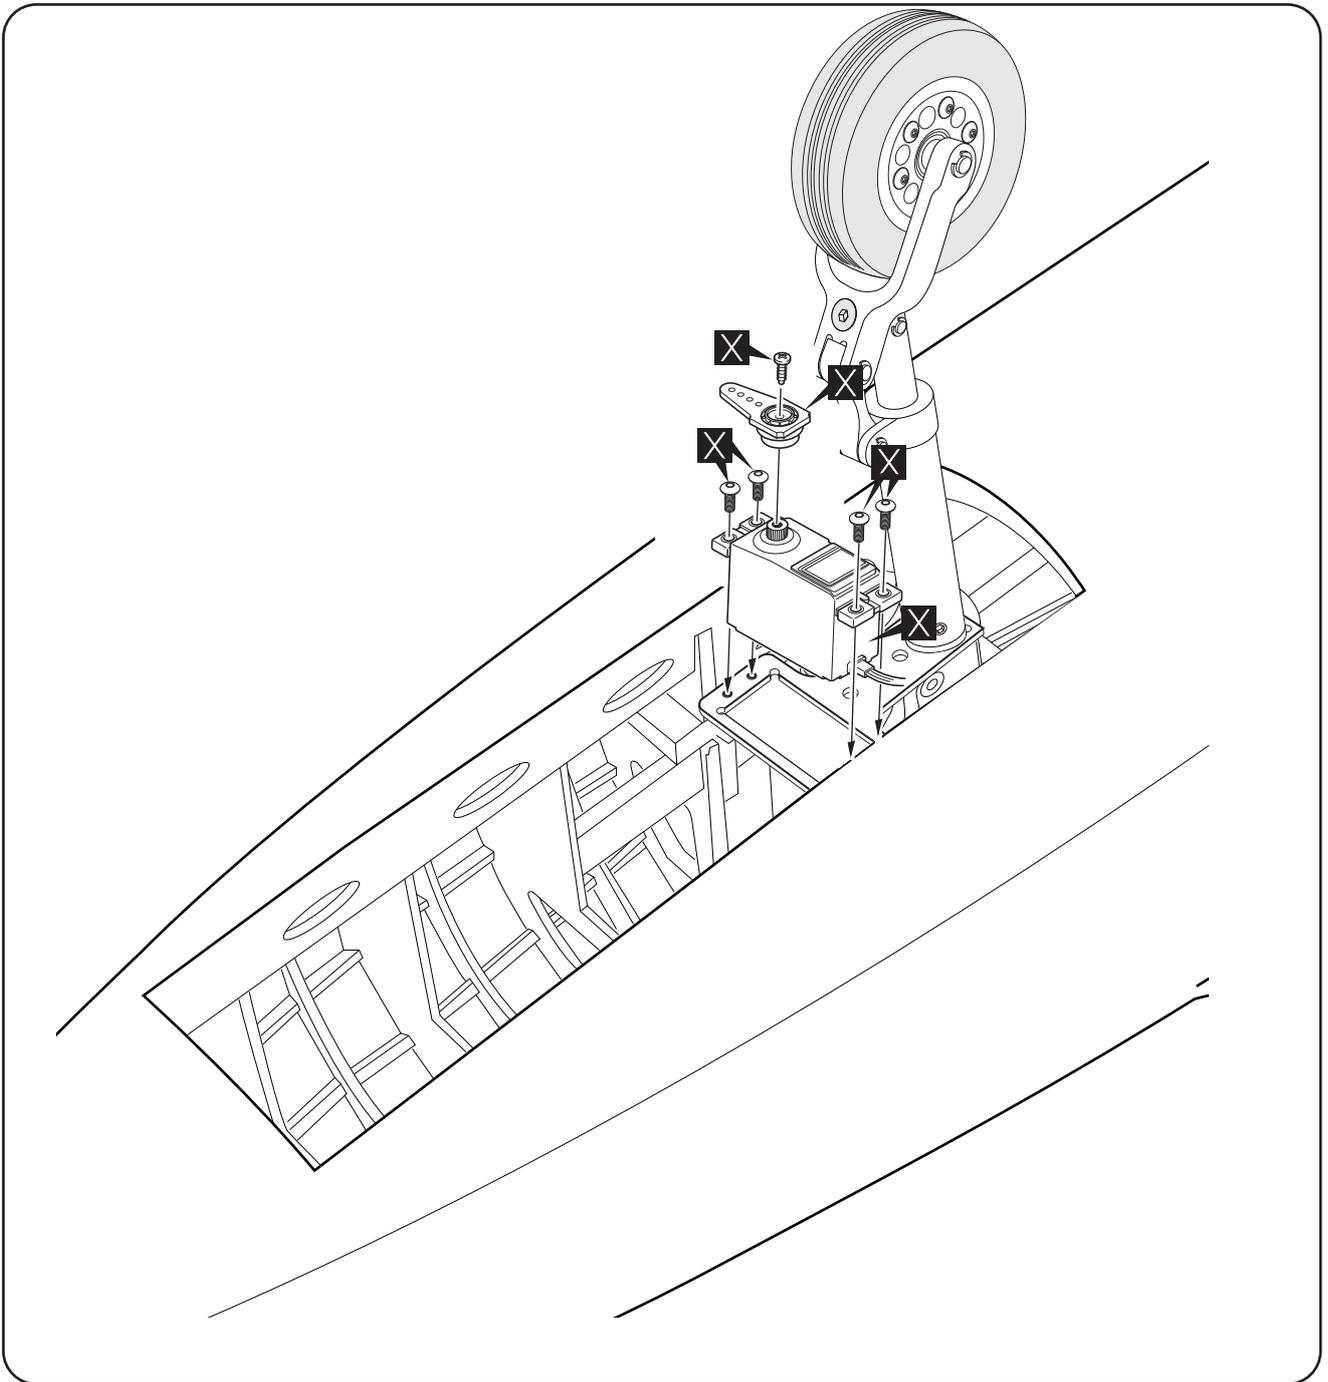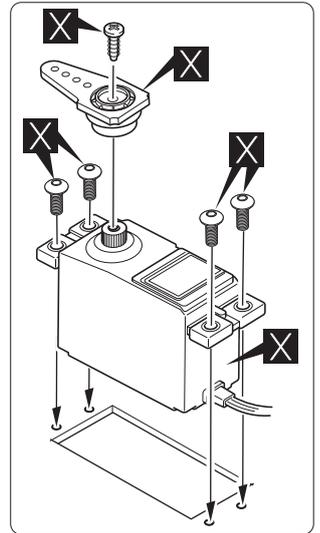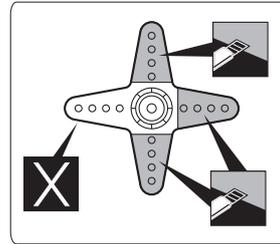





 Cut off shaded portion

 Must be purchased separately!


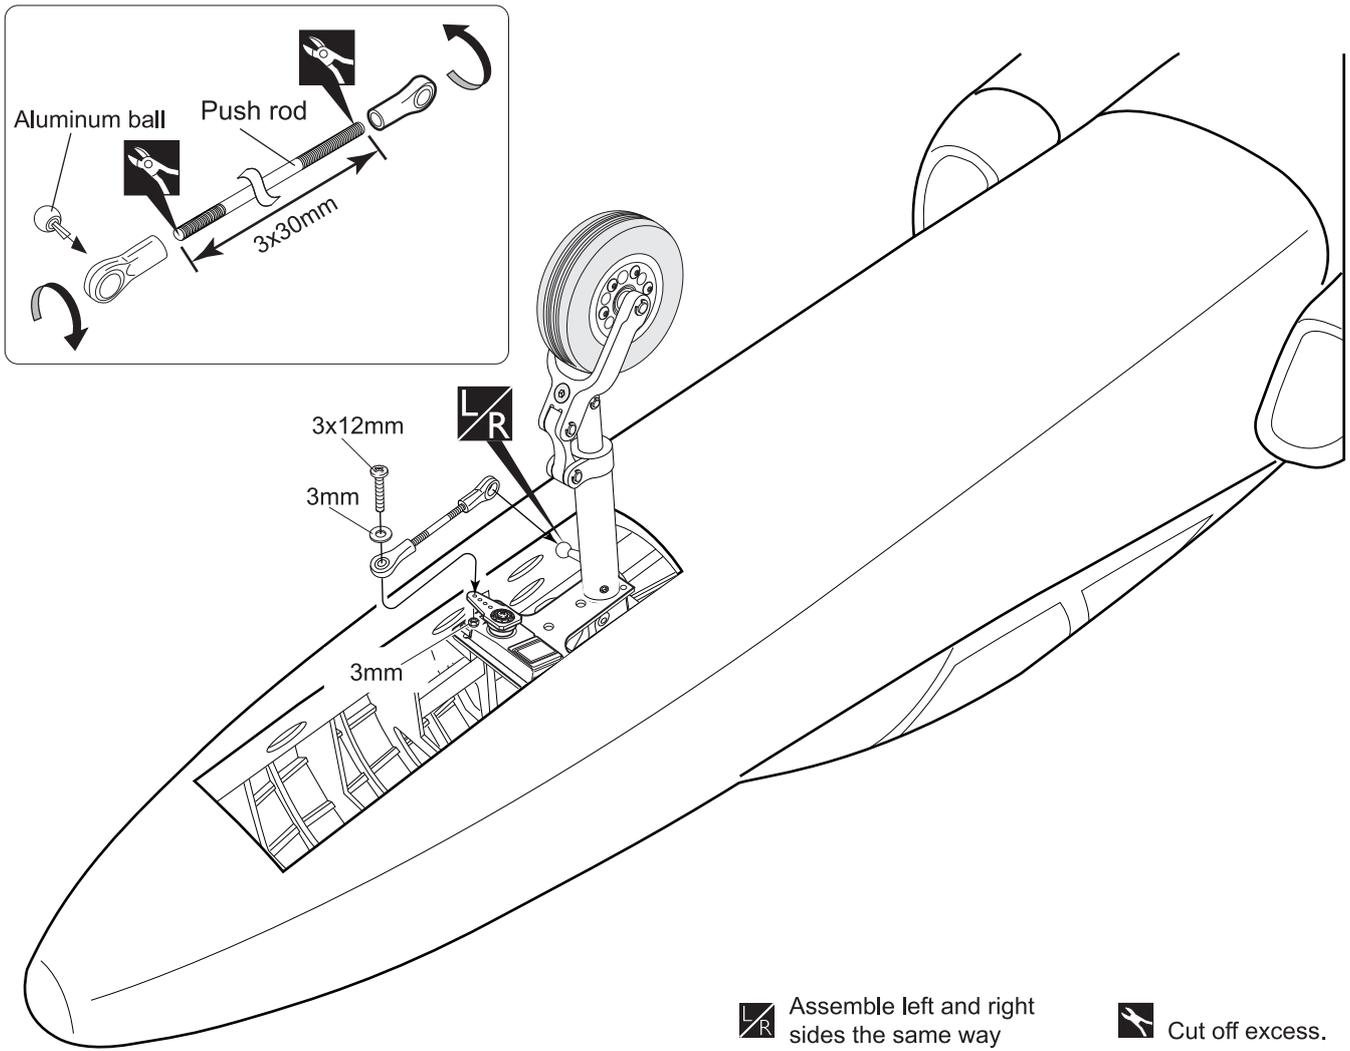





ELECTRIC RETRACT SYSTEM

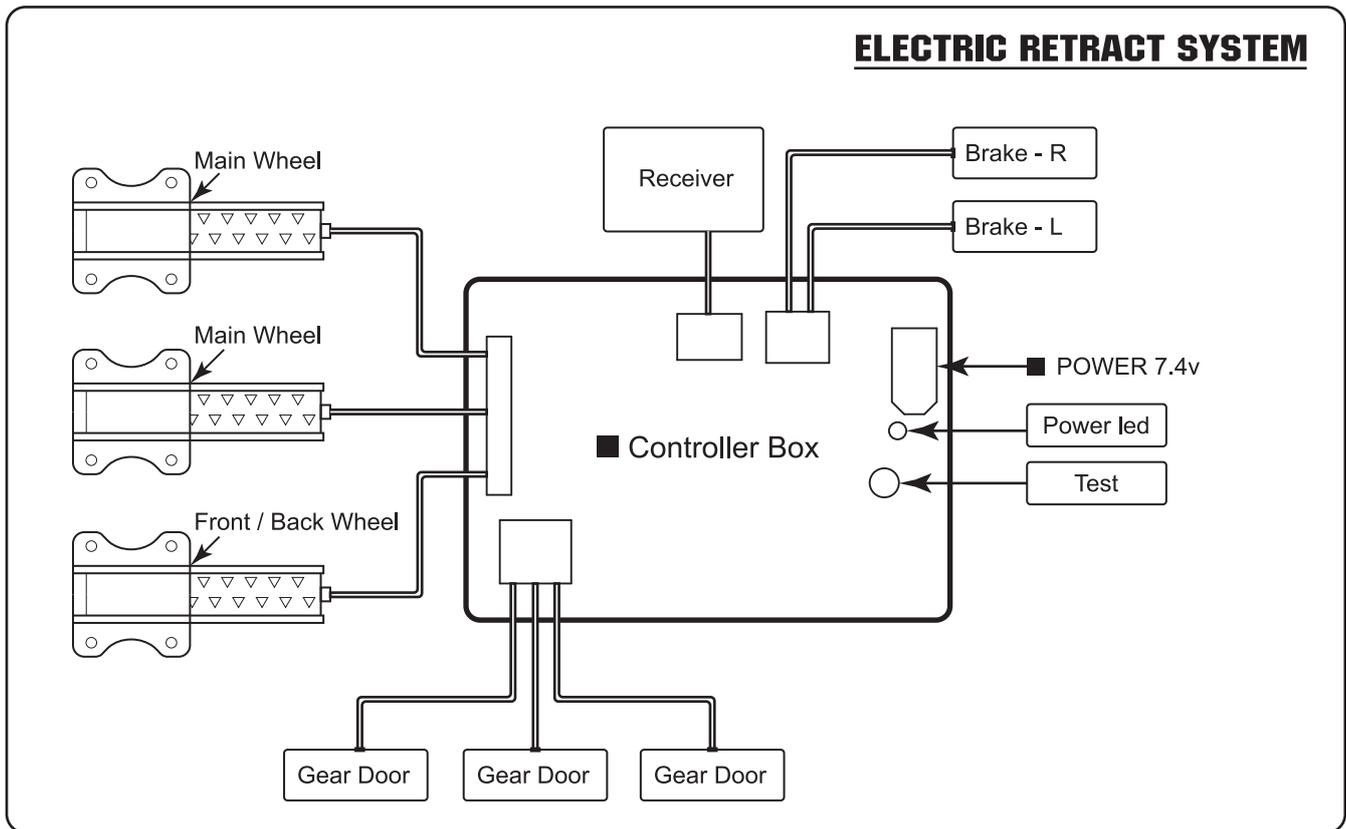


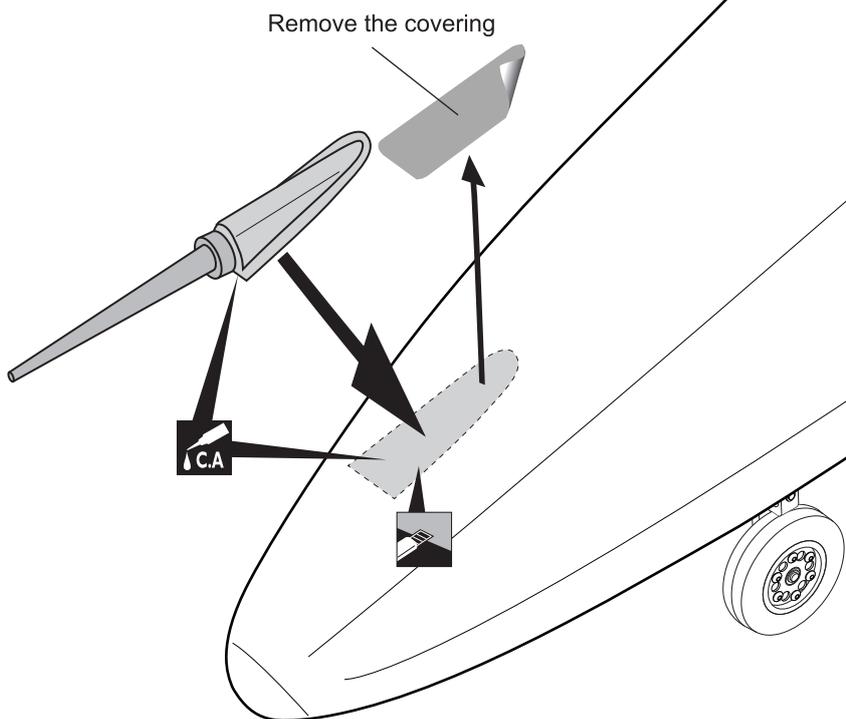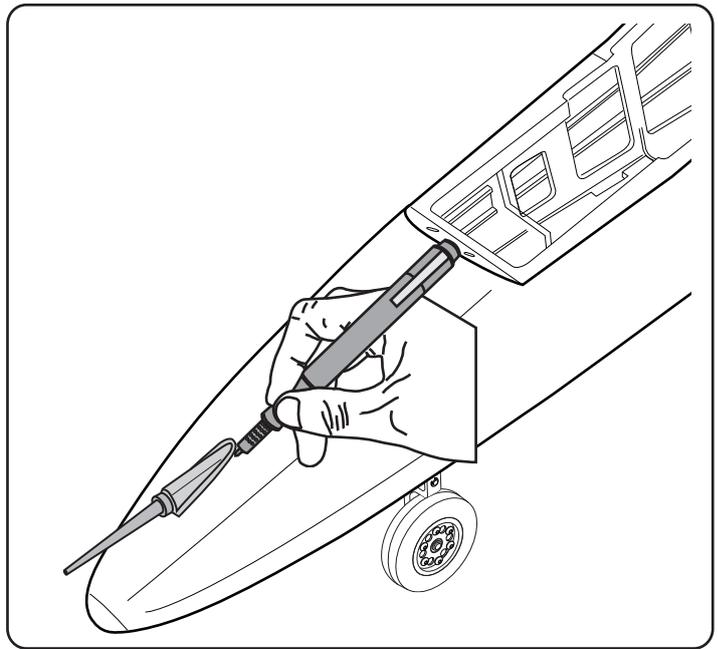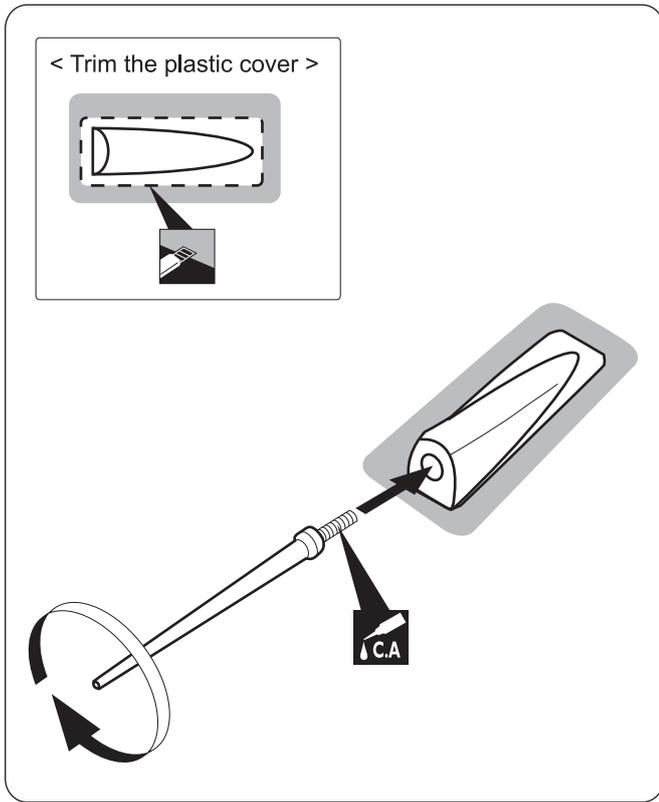

INSTALLING THE ENGINE

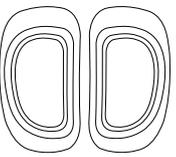
- Antena
 1
- Wooden
 2
- Plastic
 1
-  2
- Gun
 1

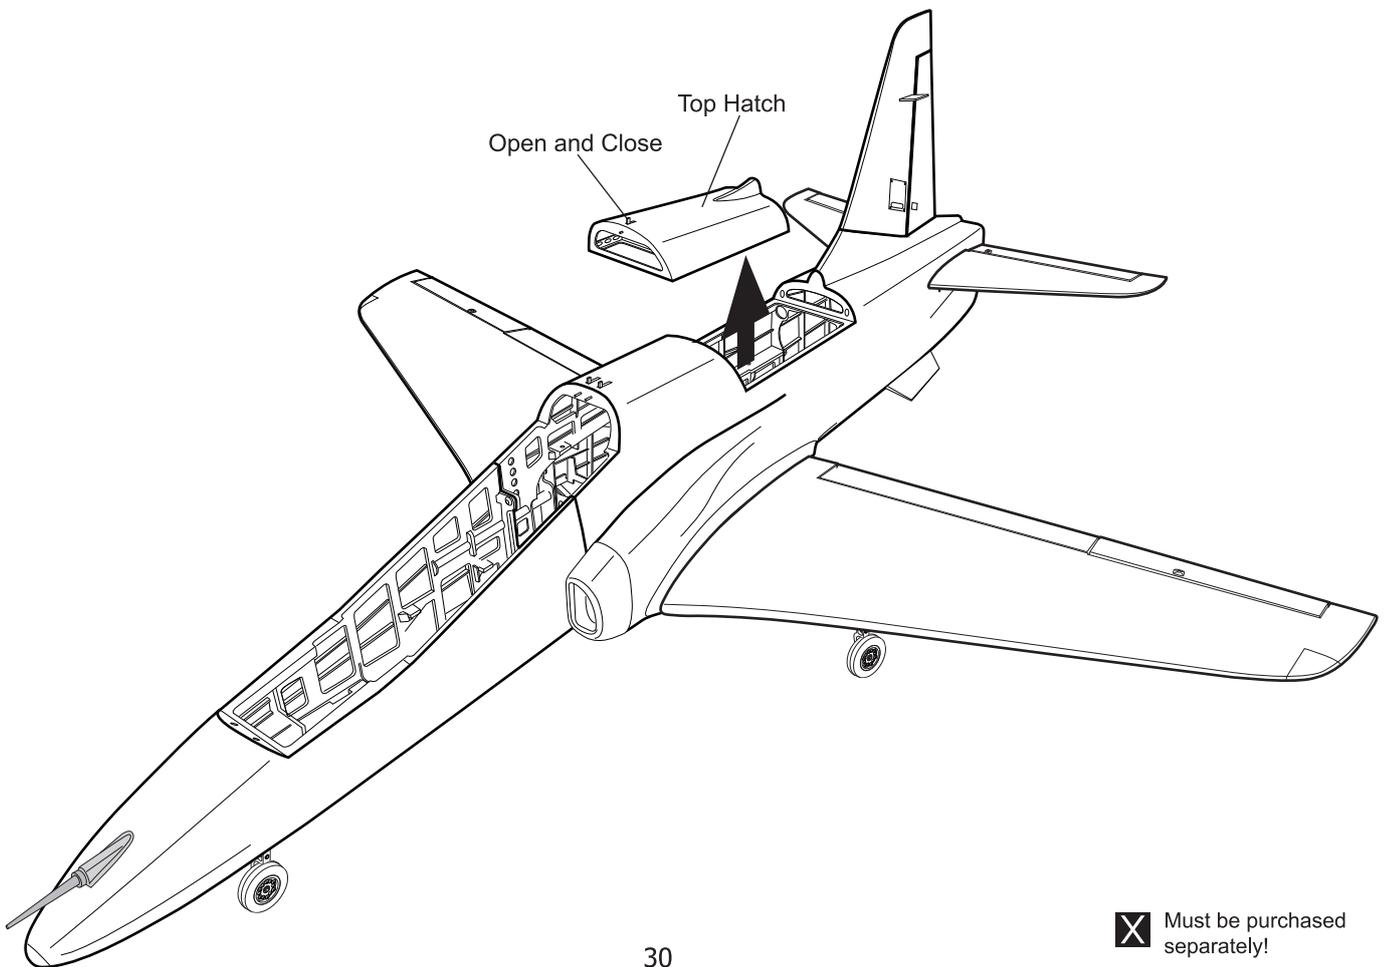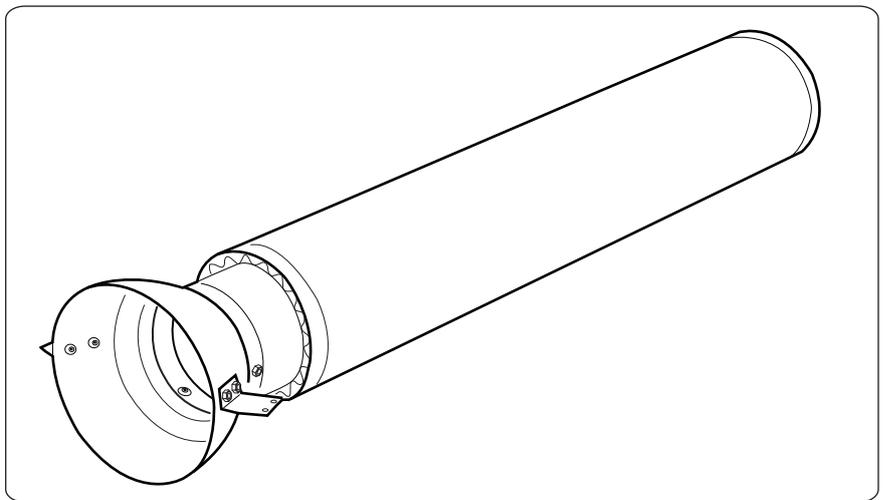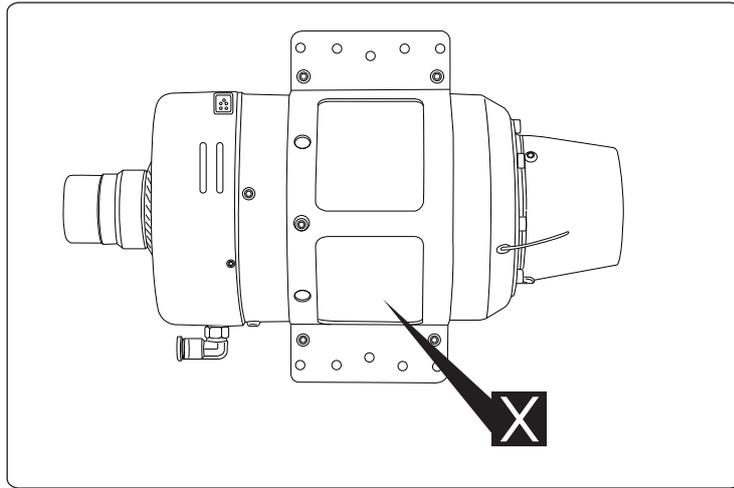

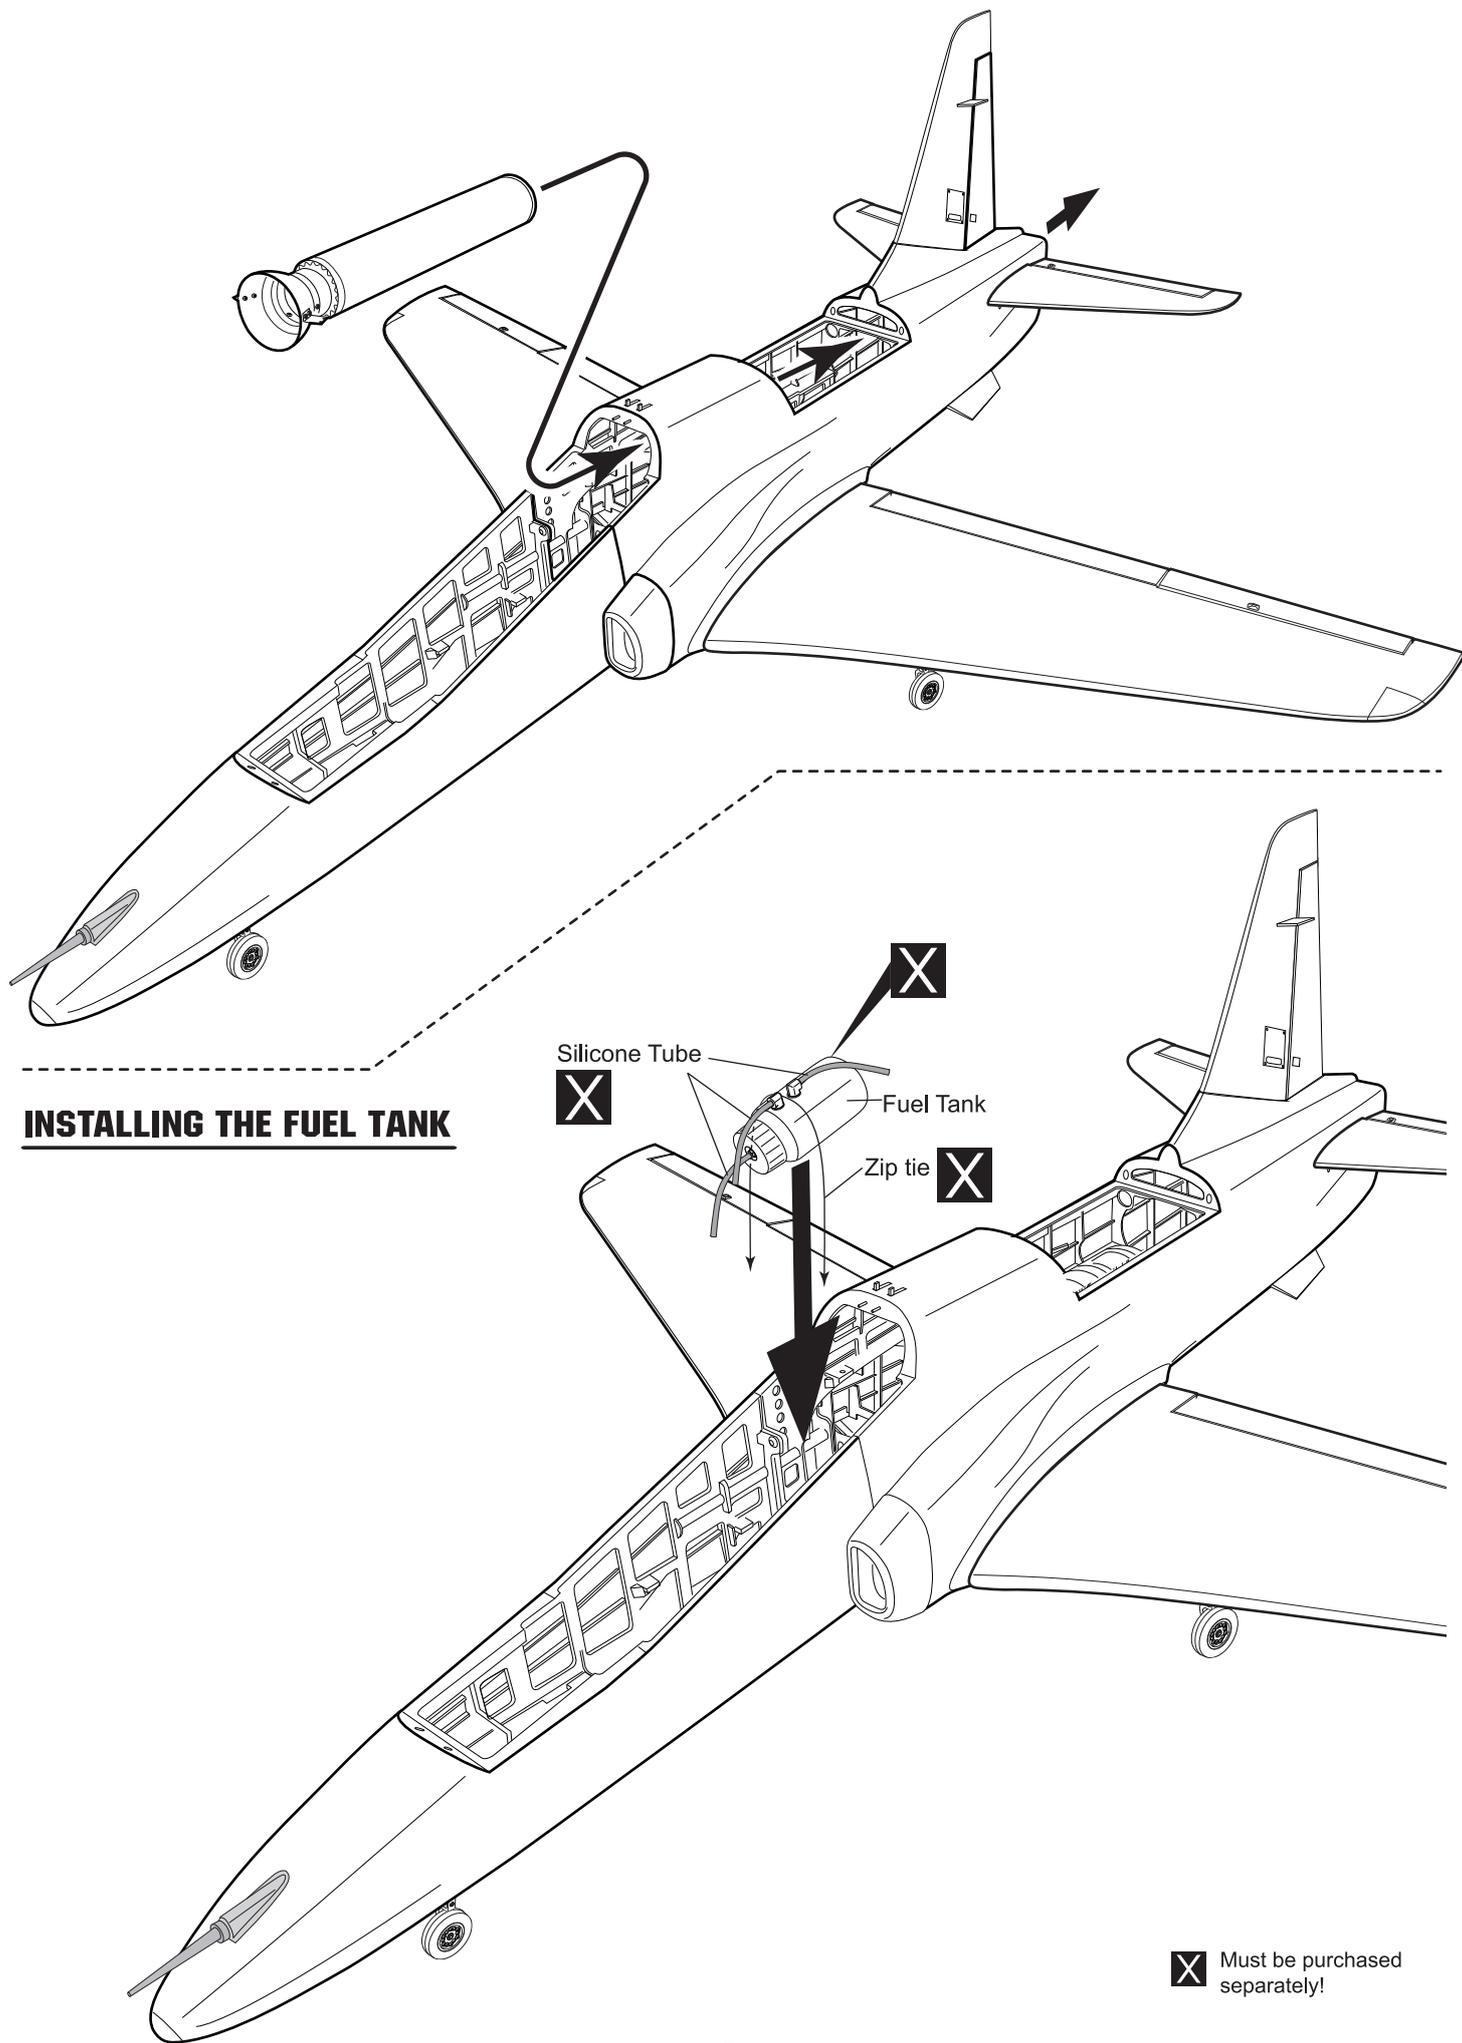



INSTALLING THE FUEL TANK

X Must be purchased separately!


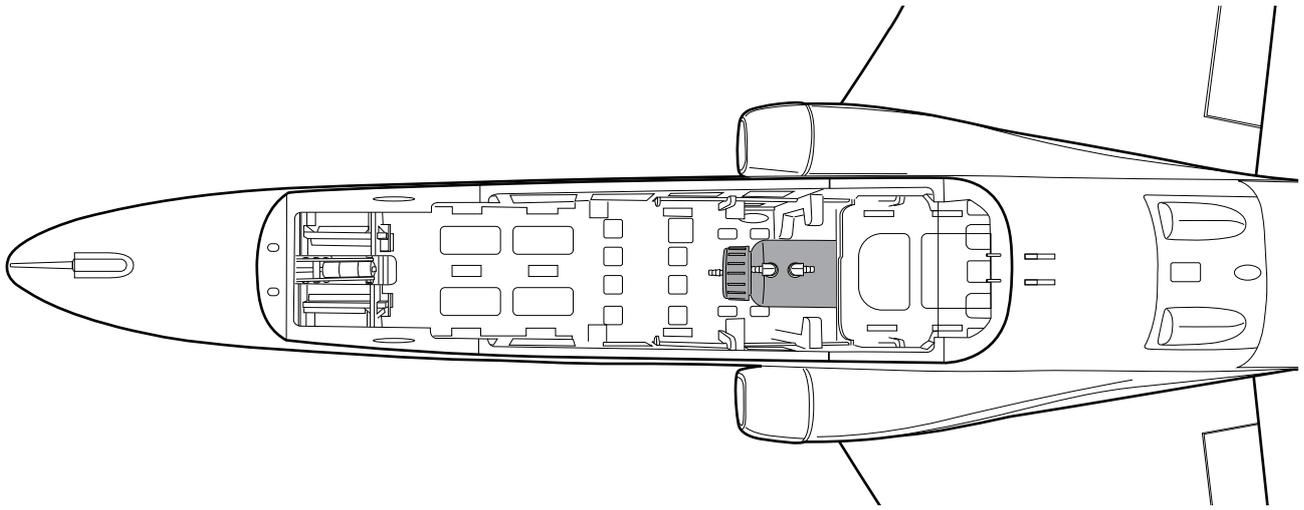


INSTALLING THE FUEL TANK



- Clunks 1
- Aluminum 1
- # 11 1
- Rubber 1
- Aluminum plate 1
- 4 x 60mm copper pipe 2
- 4 x 120mm copper pipe 1
- 3 x 25mm Cap Screw 1
- Velcro 2
- Zip Tie 6

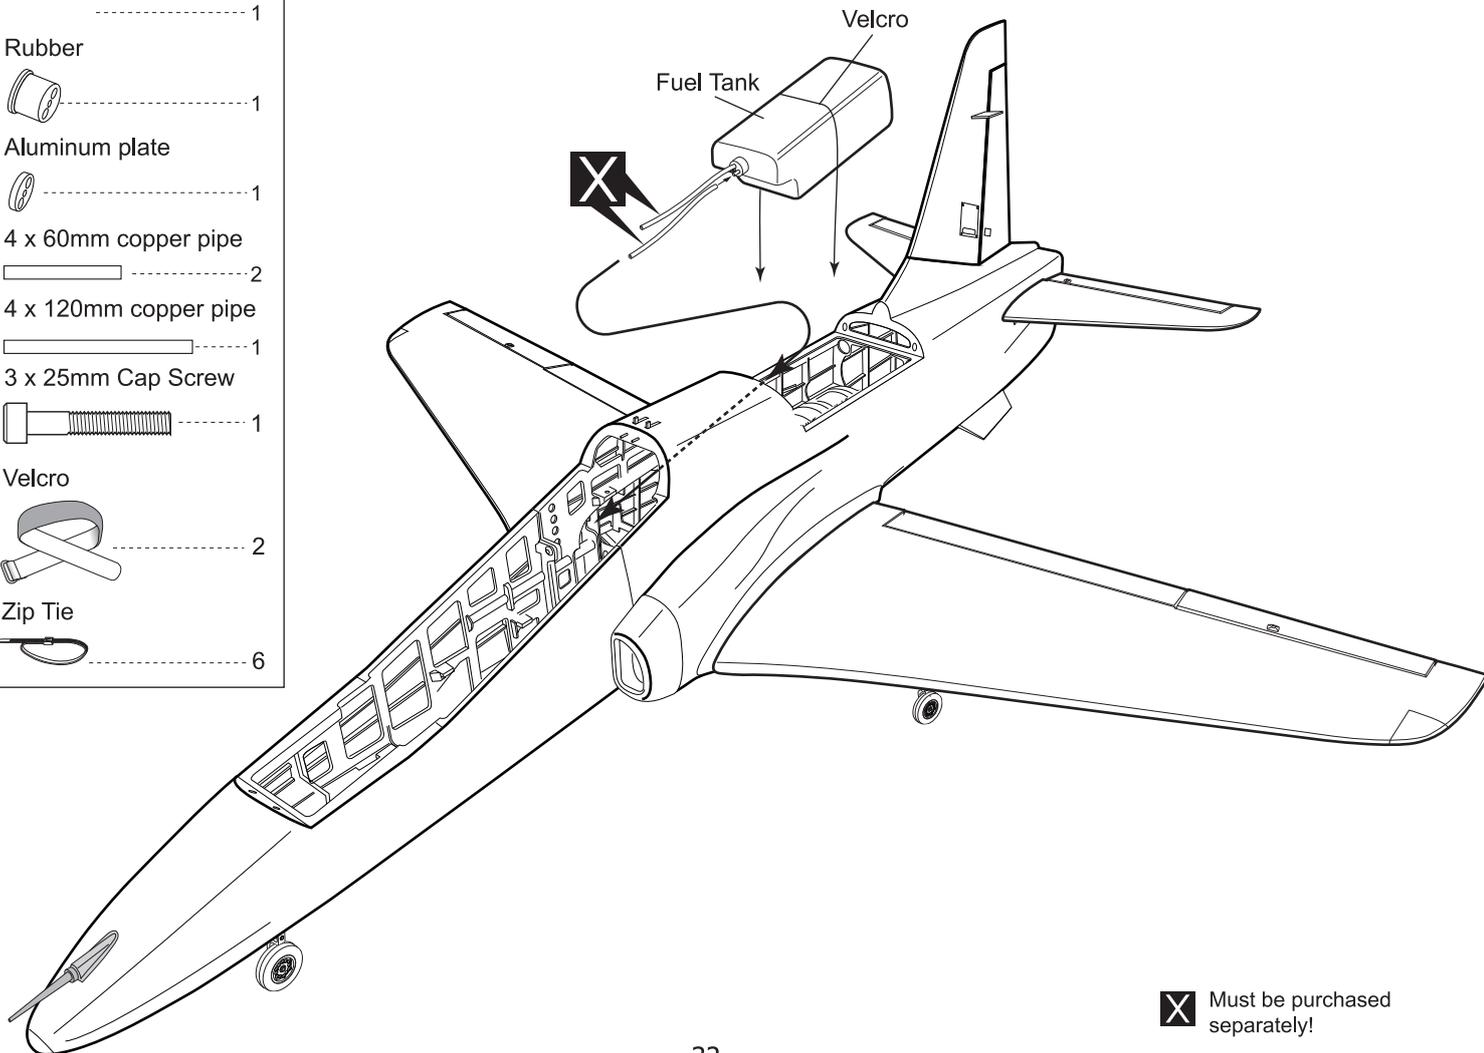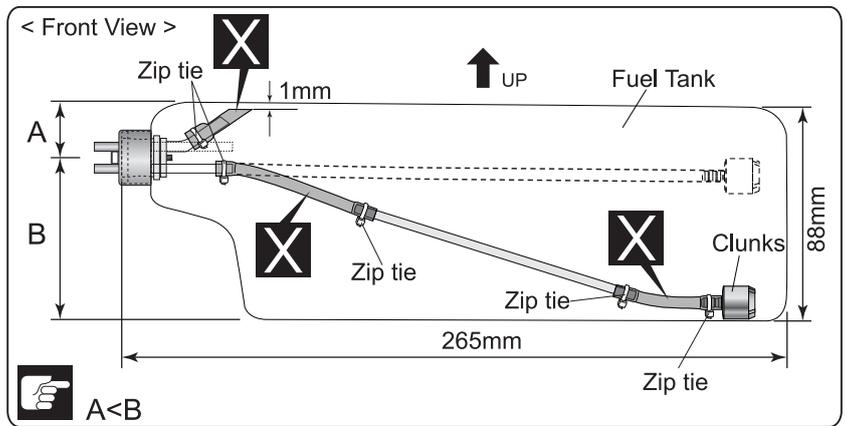




X Must be purchased separately!




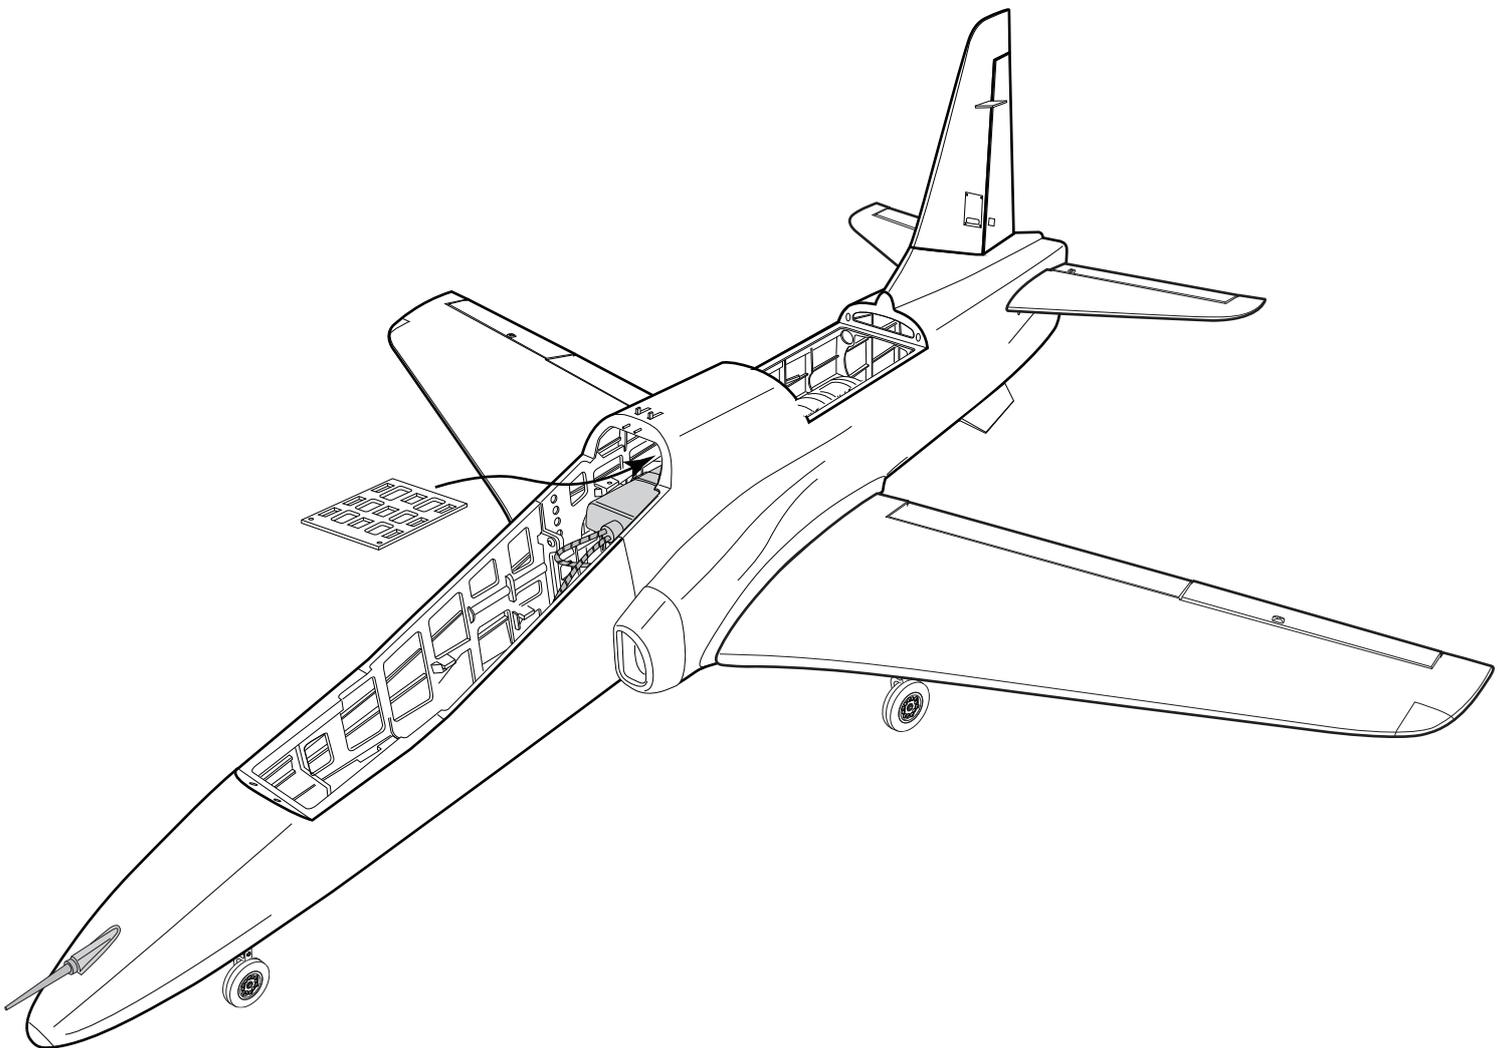
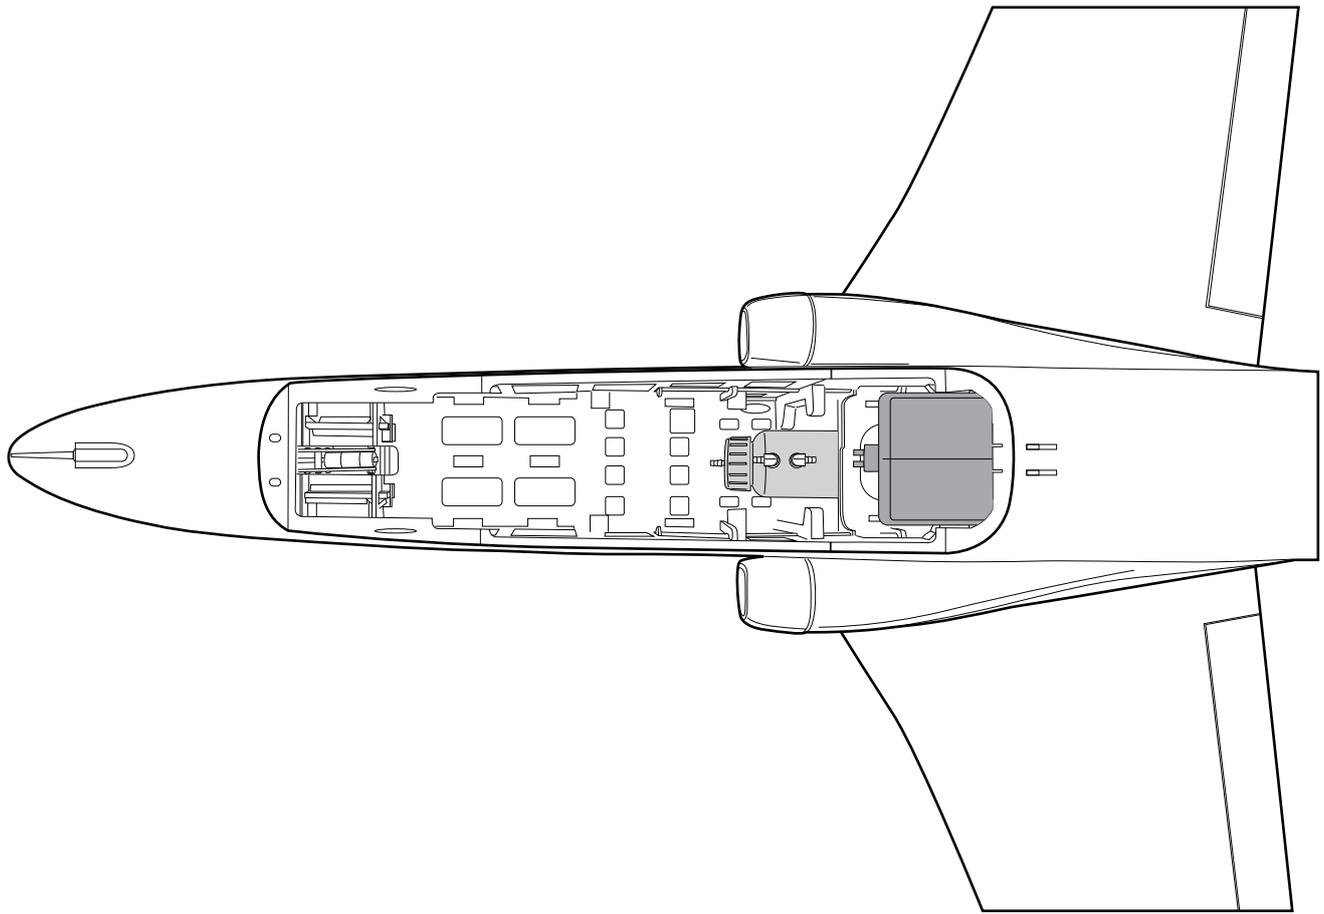


- 4 x 20mm Cap Screw 2
- 4mm Spring Washer 2
- 4mm Washer 2

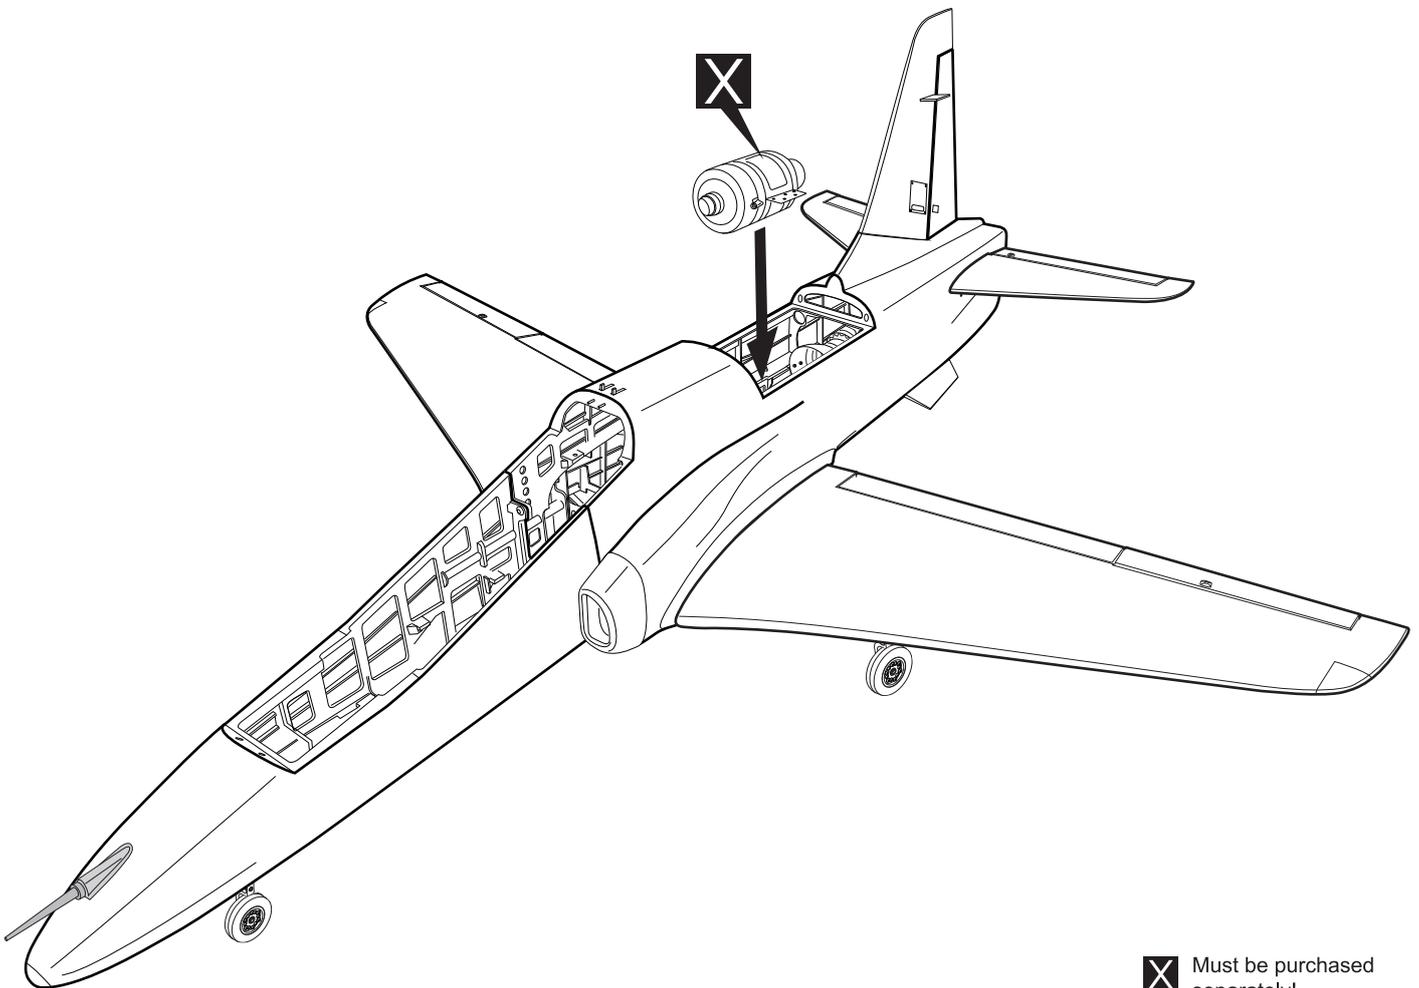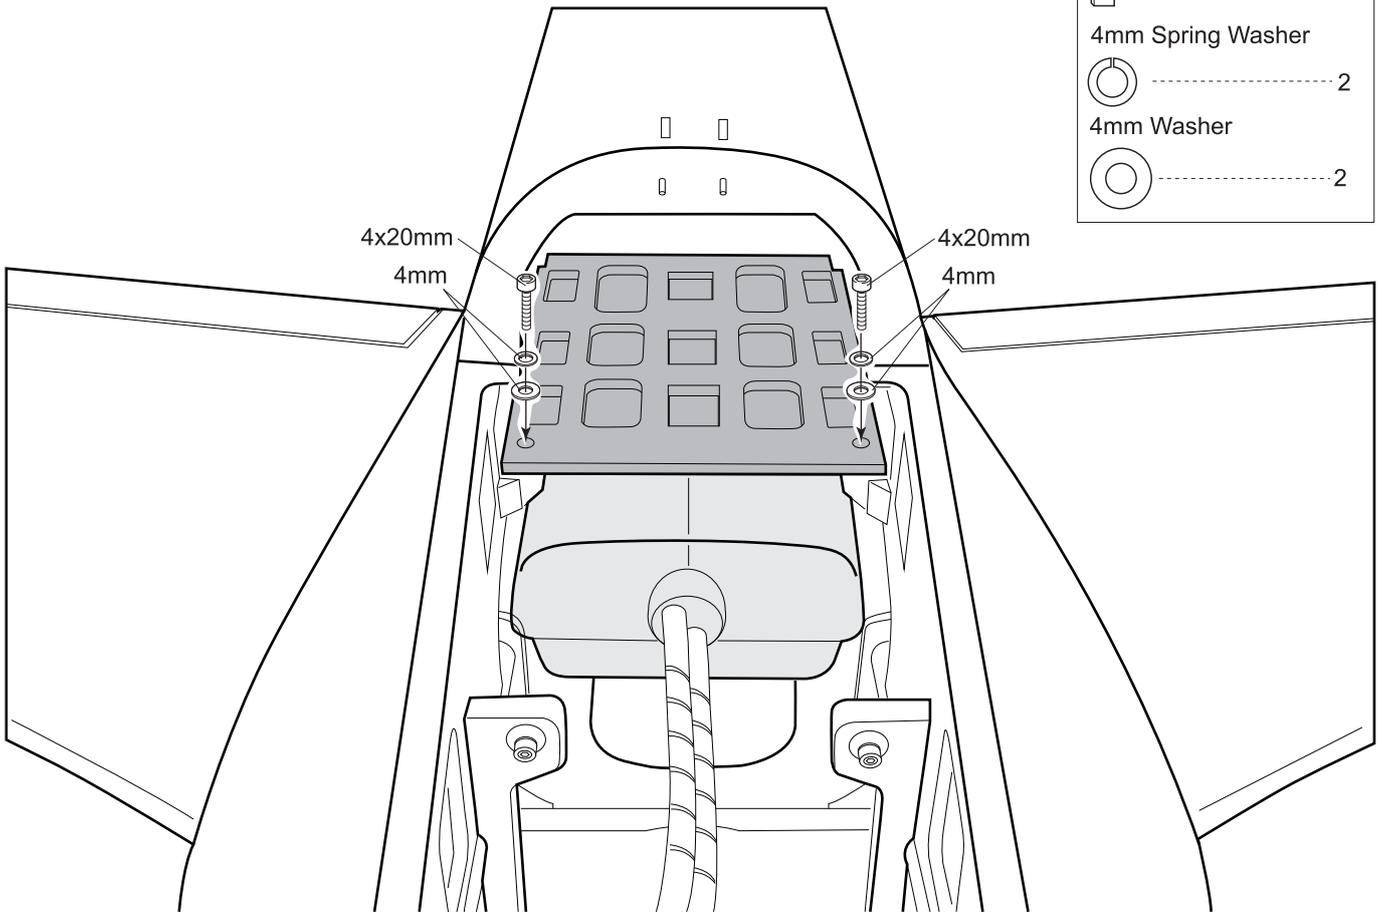

X Must be purchased separately!

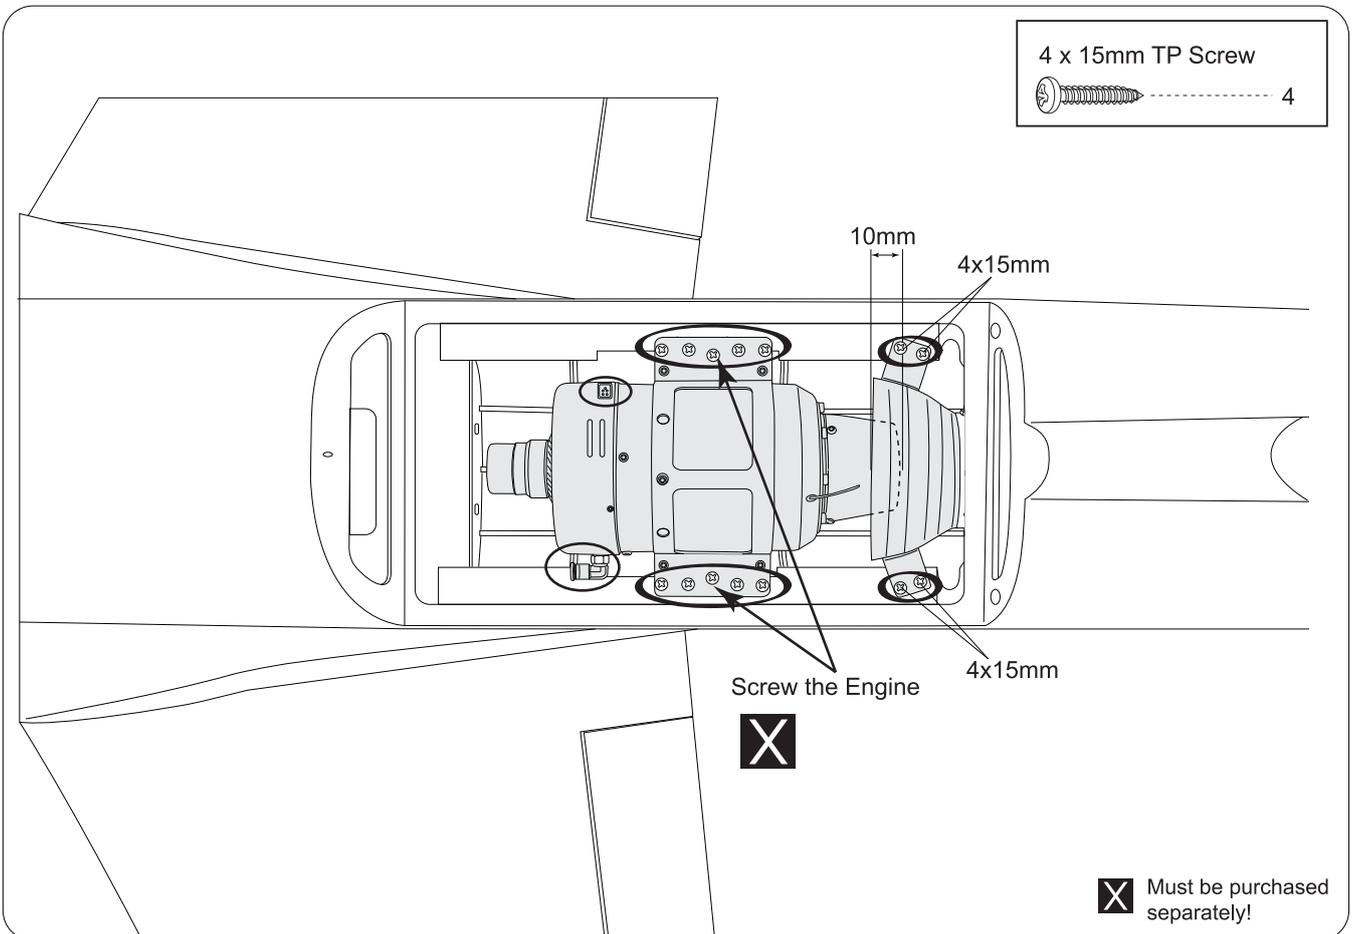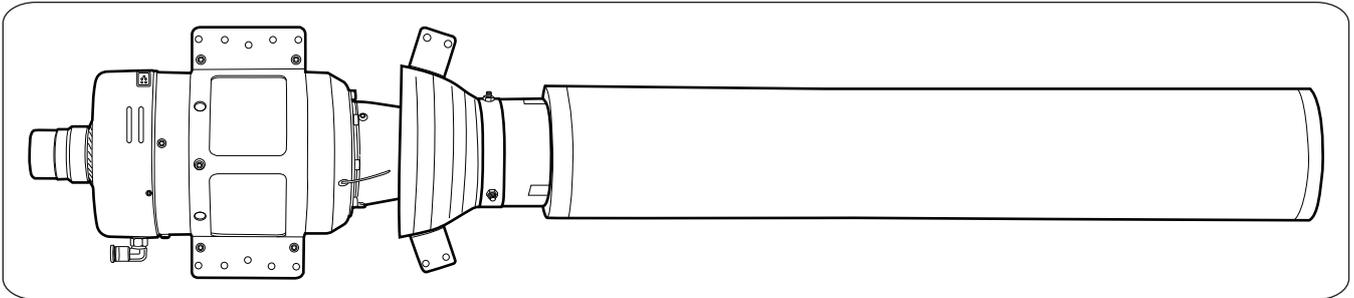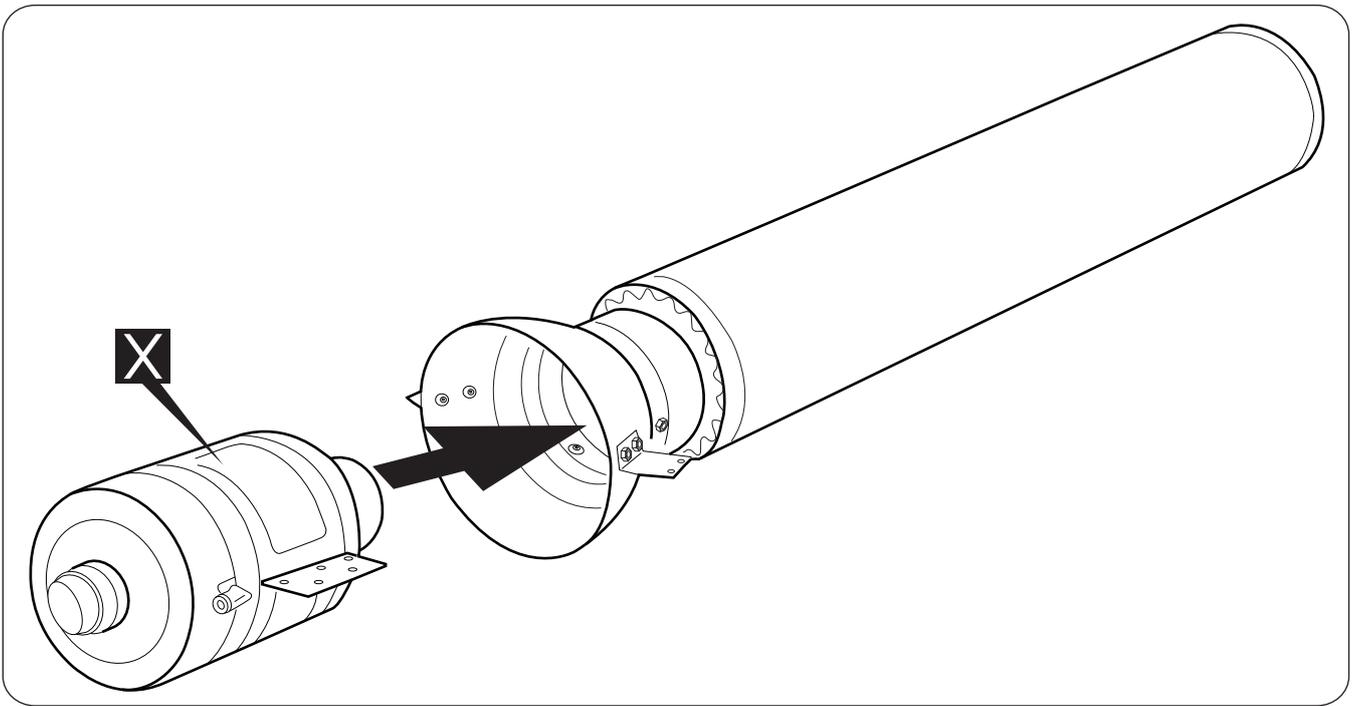

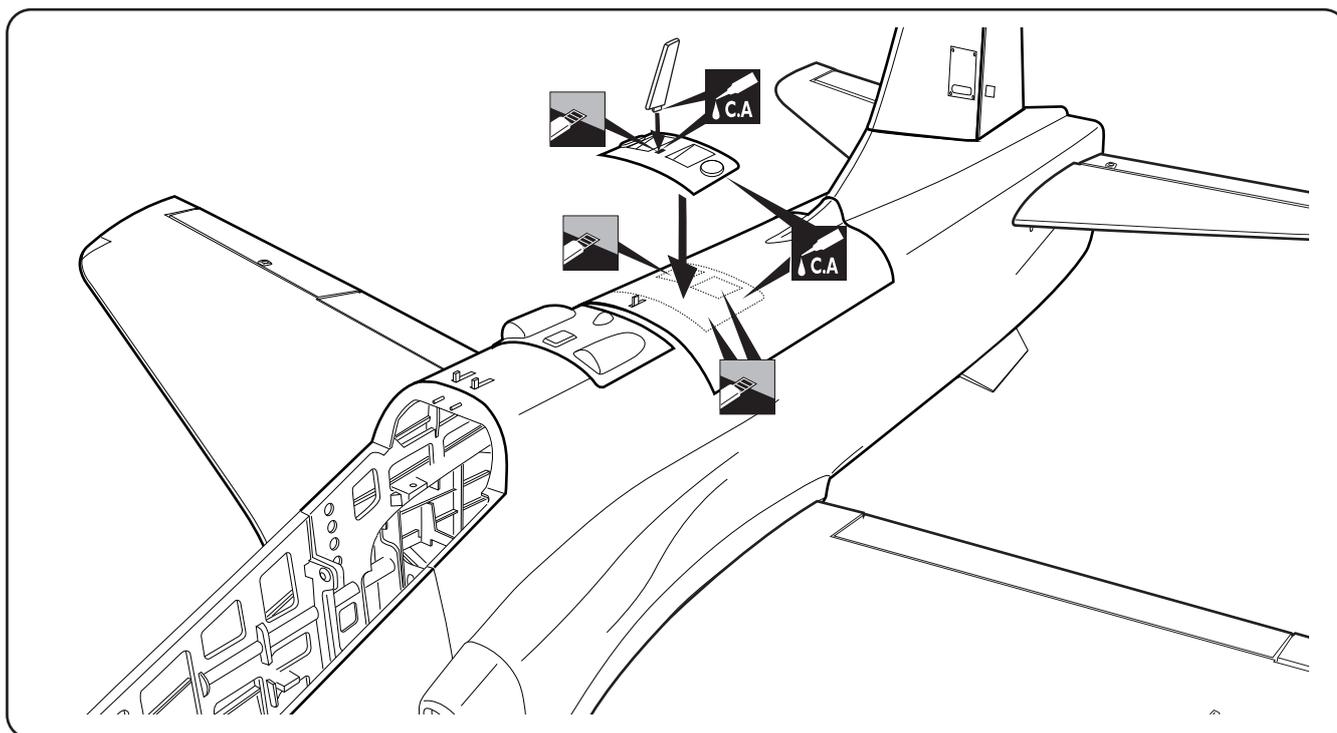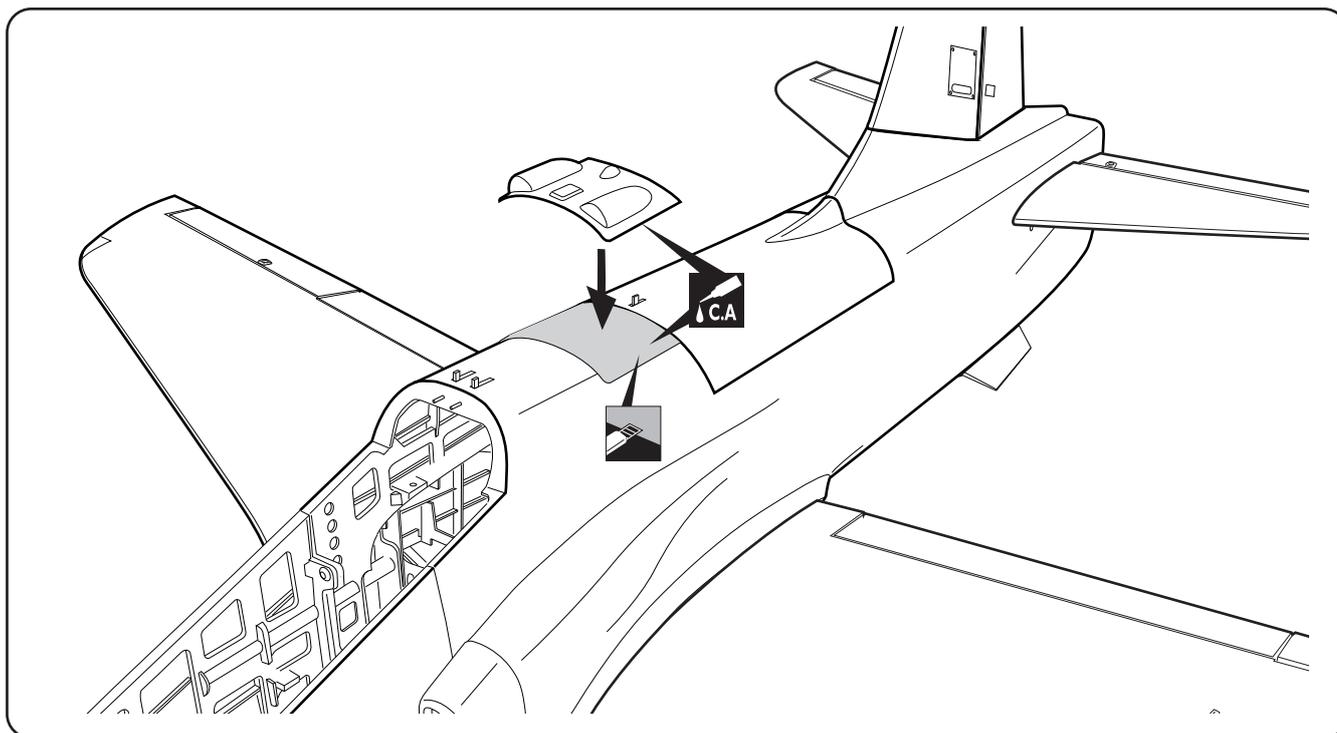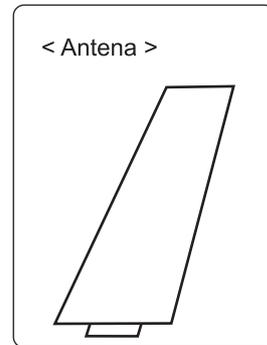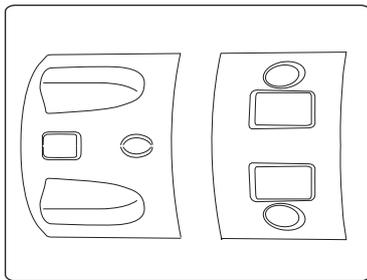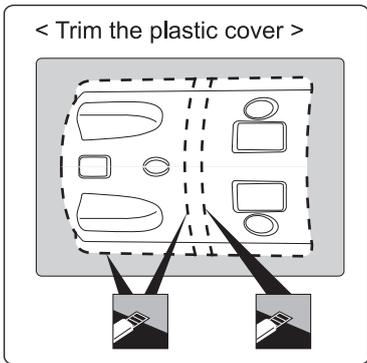

 Cut off shaded portion

 Apply instant glue (CA glue, super glue).

BALANCING

1. It is critical that your airplane be balanced correctly. Improper balance will cause your plane to lose control and crash.




THE CENTER OF GRAVITY IS LOCATED 227mm (8.93 in) BACK FROM THE LEADING EDGE OF THE WING, AT THE FUSELAGE. BALANCE A PLANE UPSIDE DOWN WITH THE FUEL TANK EMPTY.

2. If the nose of the plane falls, the plane is nose heavy. To correct this first move the battery pack further back in the fuselage. If this is not possible or does not correct it, stick small amounts of lead weight on the fuselage under the horizontal stabilizer. If the tail of the plane falls, the plane is tail heavy. To correct this, move the battery and receiver forward or if this is not possible, stick weight into the firewall. When balanced correctly, the airplane should sit level or slightly nose down when you lift it up with your fingers.



LATERAL BALANCE

 After you have balanced a plane on the C.G. You should laterally balance it. Doing this will help the airplane track straighter.

1. Turn the airplane upside down. Attach one loop of heavy string to the engine crankshaft and one to the tail wheel wire. With the wings level, carefully lift the airplane by the string. This may require two people to make it easier.
2. If one side of the wing fall, that side is heavier than the opposite. Add small amounts of lead weight to the bottom side of the lighter wing half's wing tip. Follow this procedure until the wing stays level when you lift the airplane.

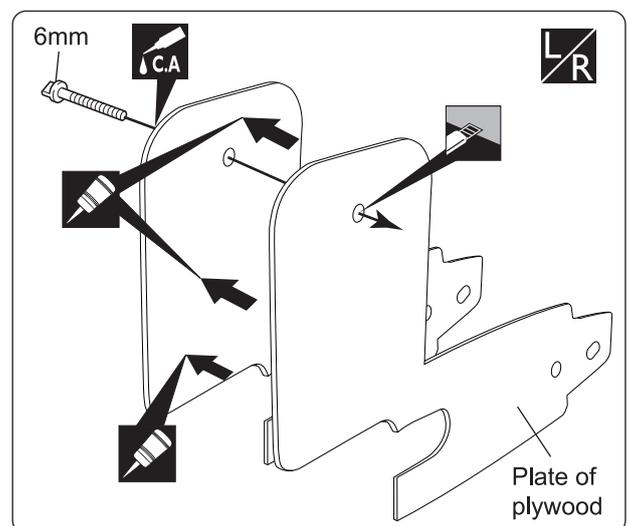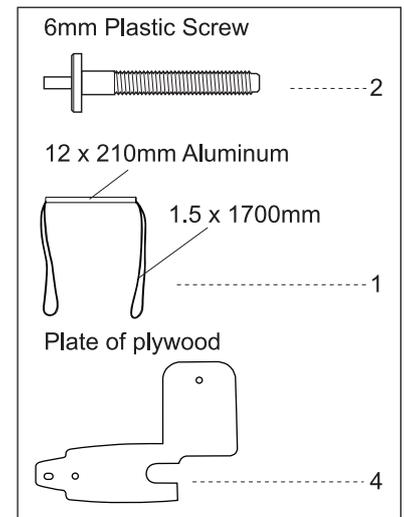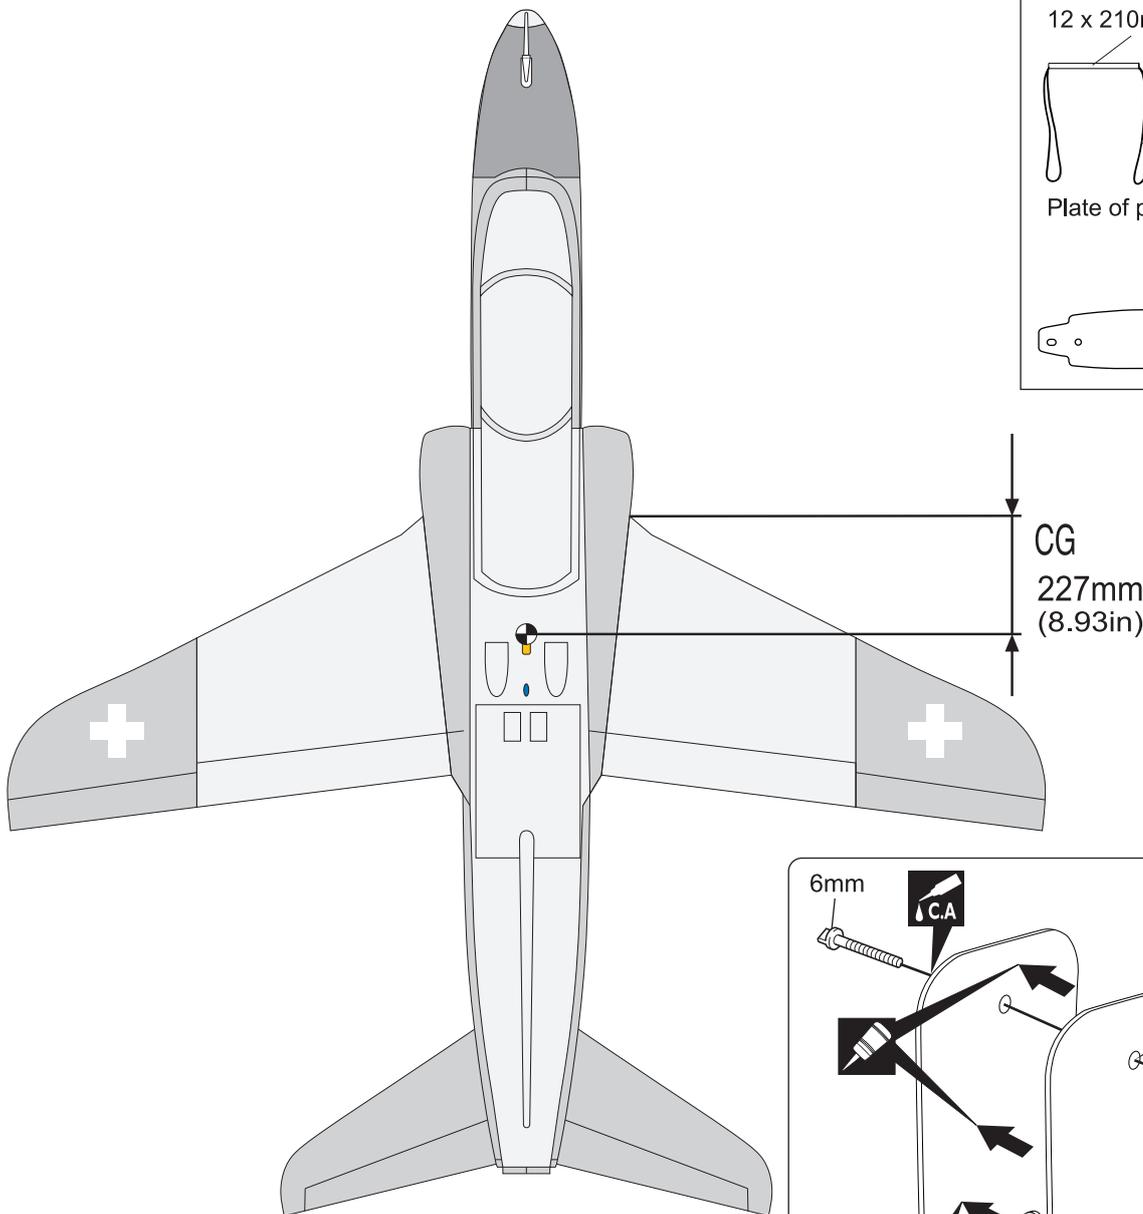

-  White glue
-  Apply instant glue (CA glue, super glue).
-  Assemble left and right sides the same way

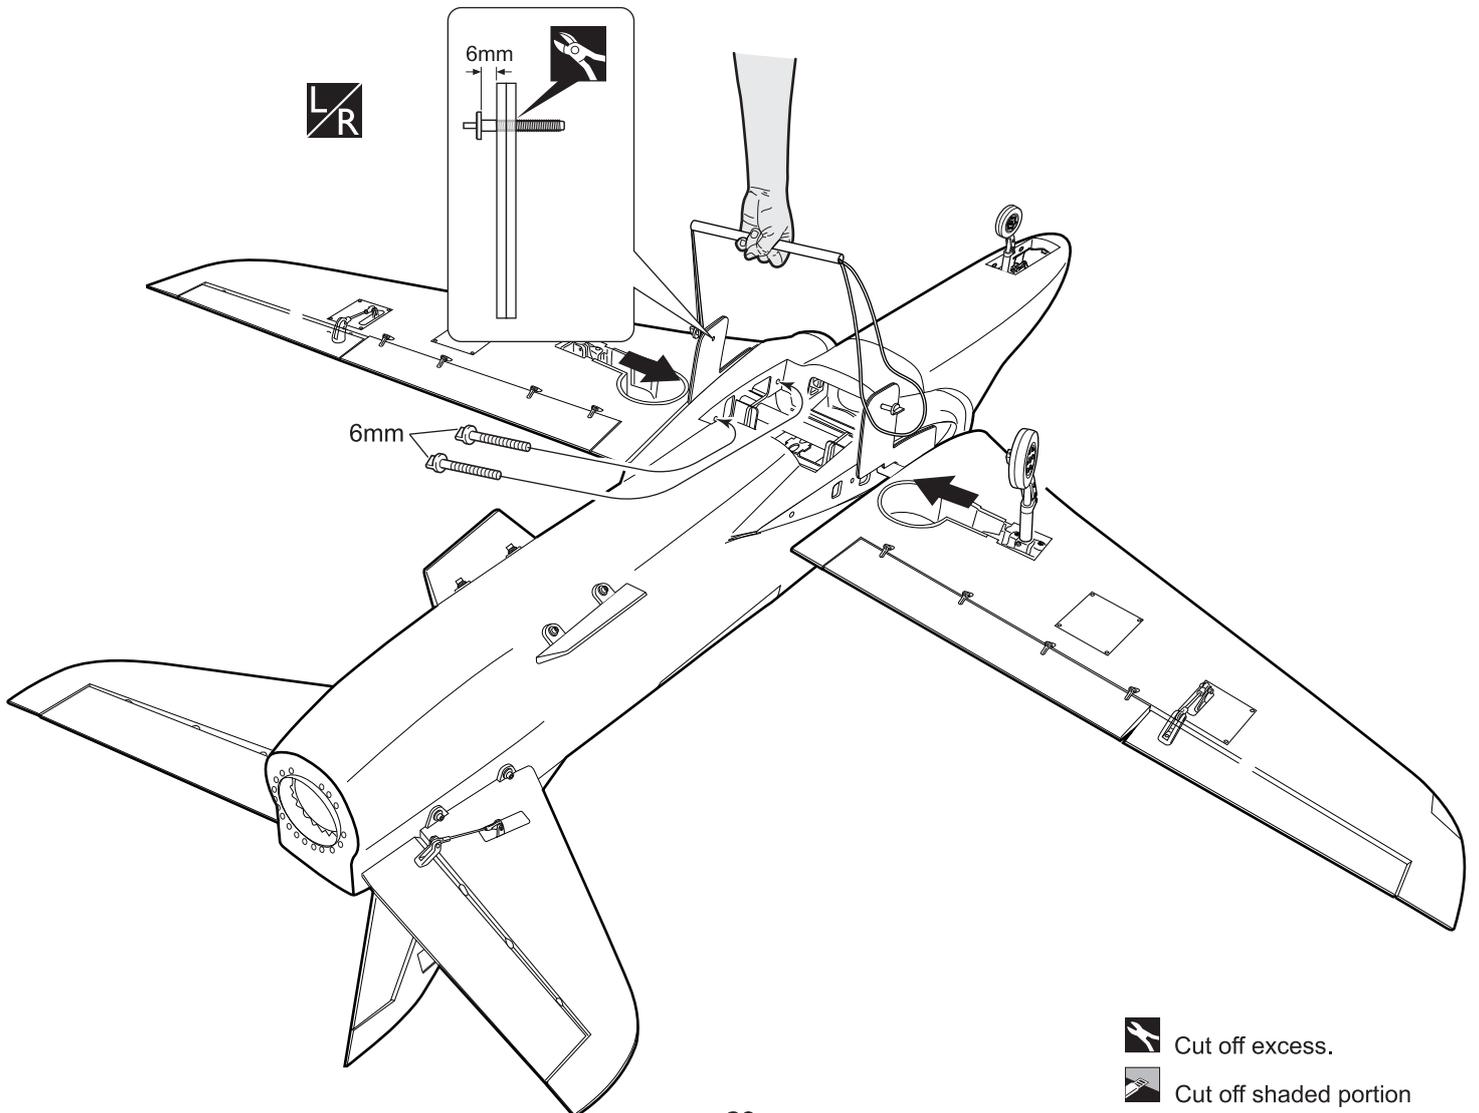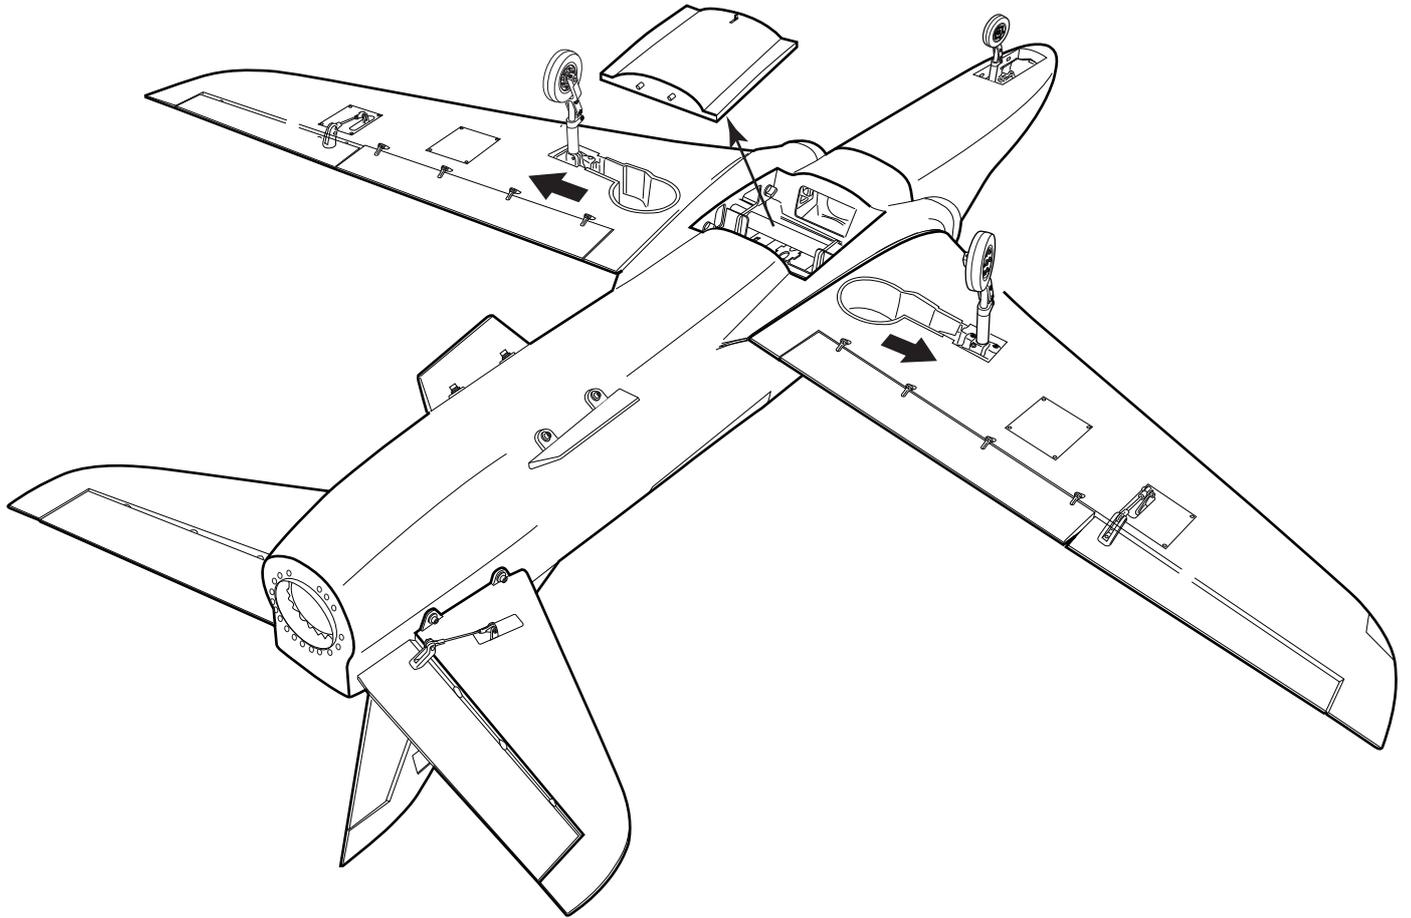





- ▶ In order to obtain the CG specified, reposition the receiver and other equipment.
- ▶ If not obtain the CG specified, add a weight and adjust.



Warning!

- ▶ Do not fly before confirming the correct location of the CG. If the CG is incorrect, you lose control of your airplane which leads to accidents.

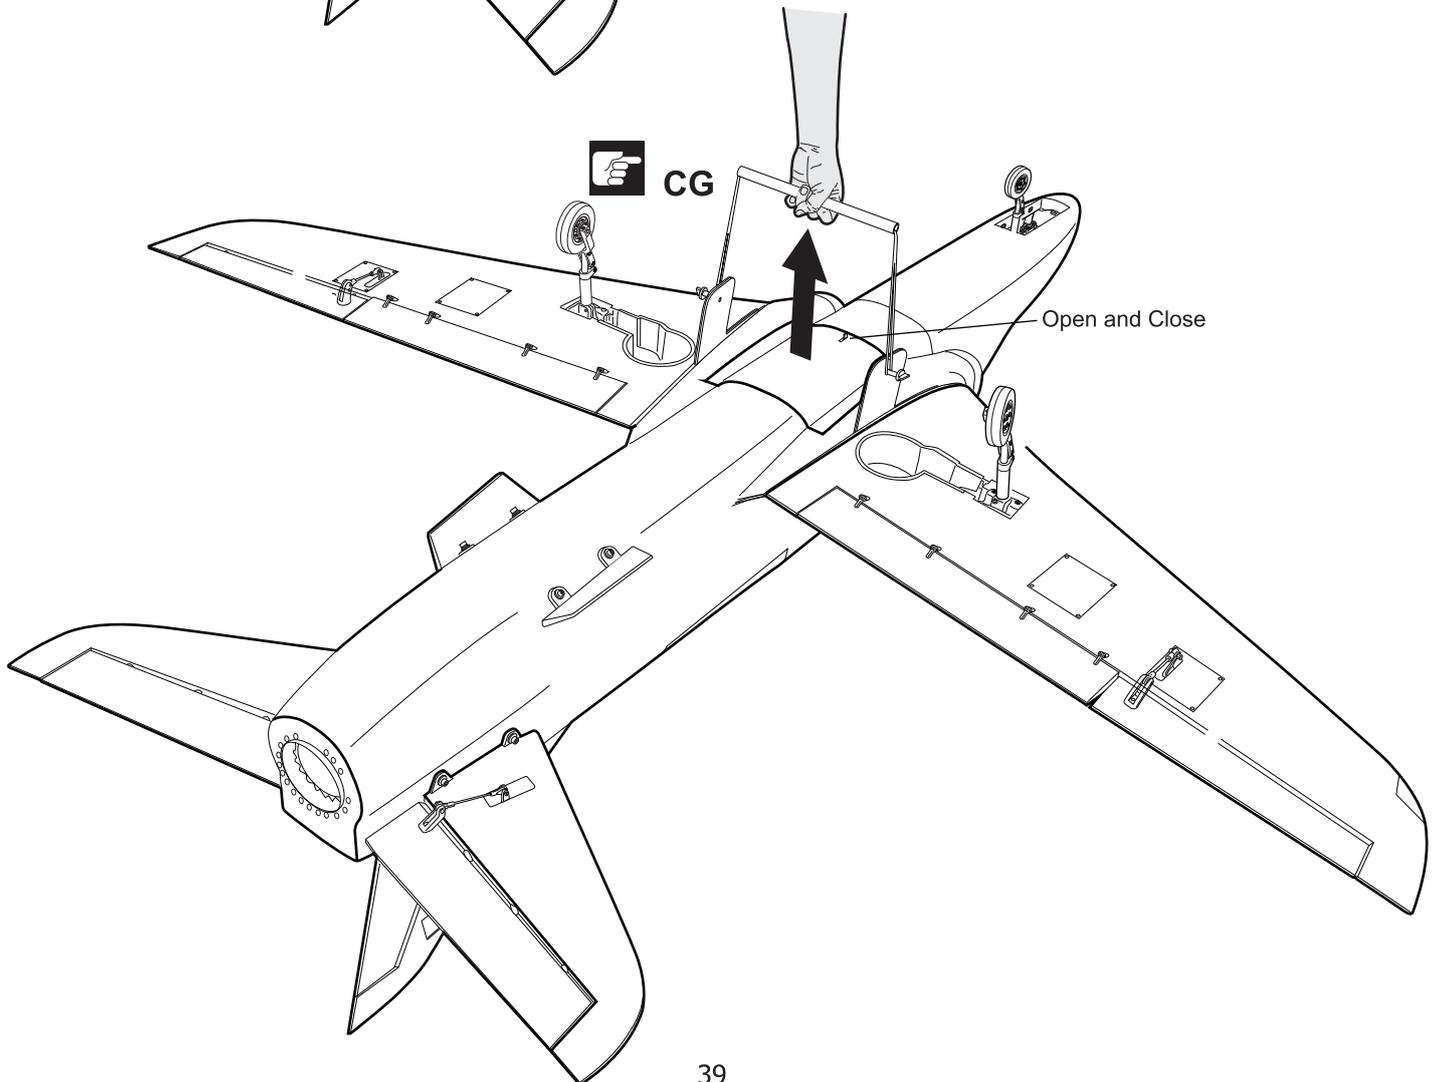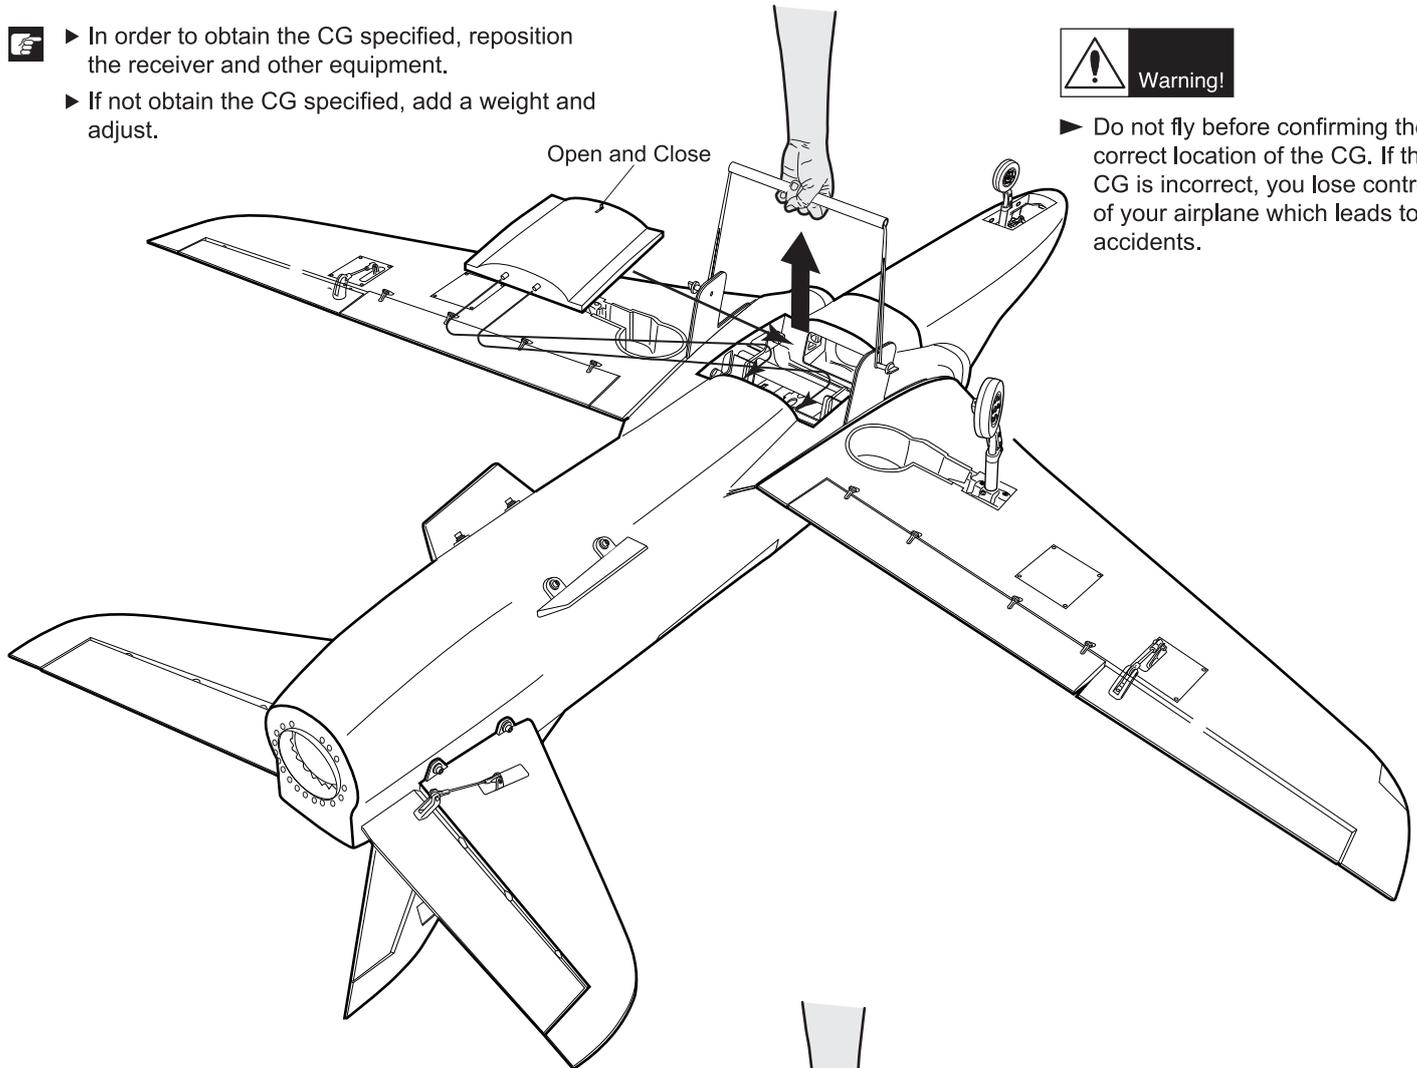

CONTROL THROWS



1. We highly recommend setting up a plane using the control throws listed.
2. The control throws should be measured at the widest point of each control surface.
3. Check to be sure the control surfaces move in the correct directions.

● **LOW RATE**



Aileron	14mm up	14mm down
Elevator	14mm up	14mm down
Rudder	15mm right	15mm left
Flap	20mm down	

● **HIGH RATE**



Aileron	15mm up	15mm down
Elevator	15mm up	15mm down
Rudder	18mm right	18mm left
Flap	30mm right	

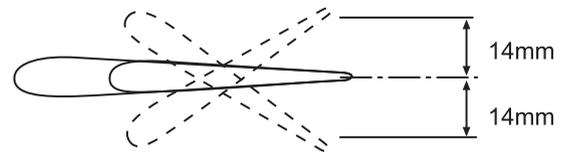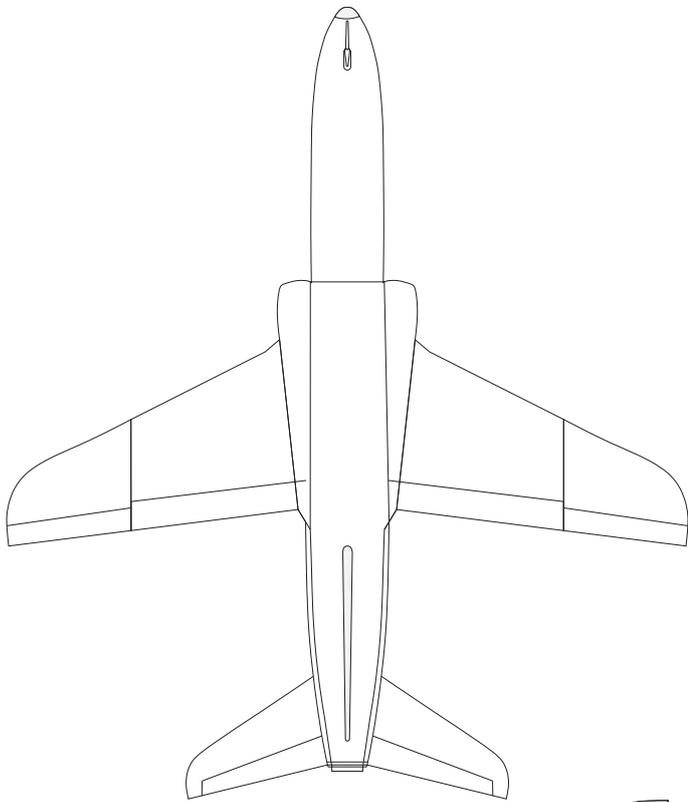



Aileron Control

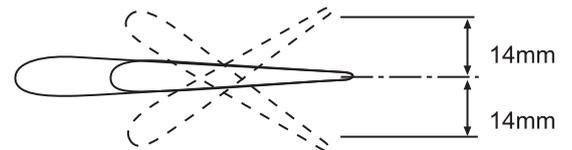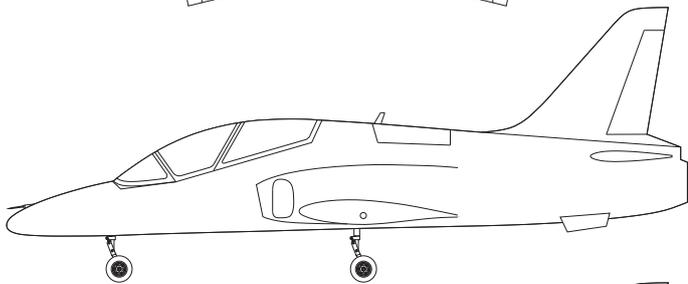

Elevator Control

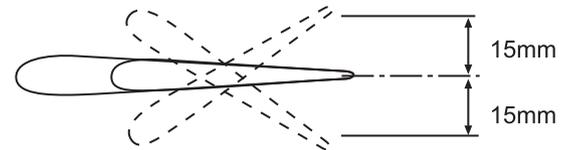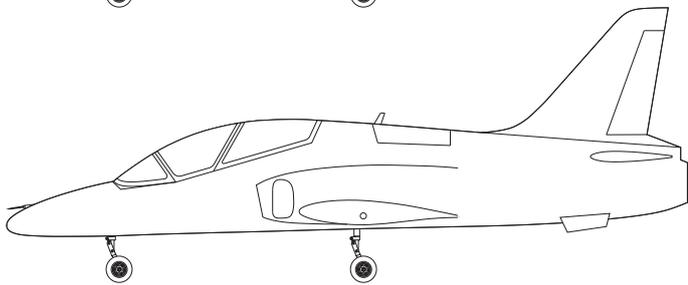


Rudder Control

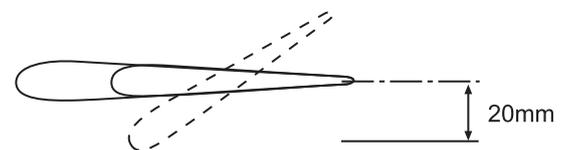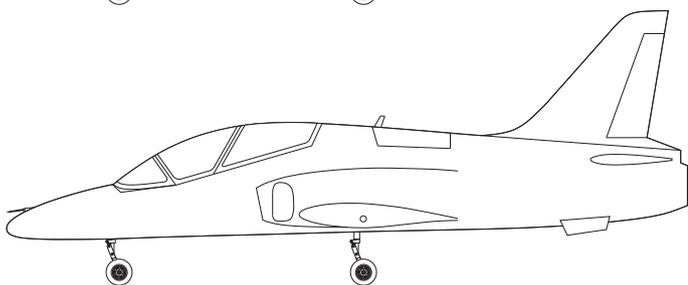

Flap Control

**4 CHANNEL RADIO SETUP
(STANDARD MODE 2)**

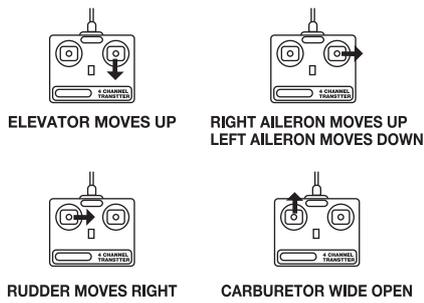


FLIGHT PREPARATION PRE FLIGHT CHECK

1. Completely charge your transmitter and receiver batteries before your first day of flying.
2. Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.
3. Double check the balance of the airplane
4. Check the control surface
5. Check the receiver antenna . It should be fully extended and not coiled up inside the fuselage.
6. Properly balance the propeller.

**FOR YOUR RADIO INSTALLATION
BASIC CONNECTION FOR AIRPLANE AND ADJUSTMENT OF SERVOS**


Example of connection

- For more information, refer to radio system instruction manual.
- Follow instruction manual of Engine and Battery.

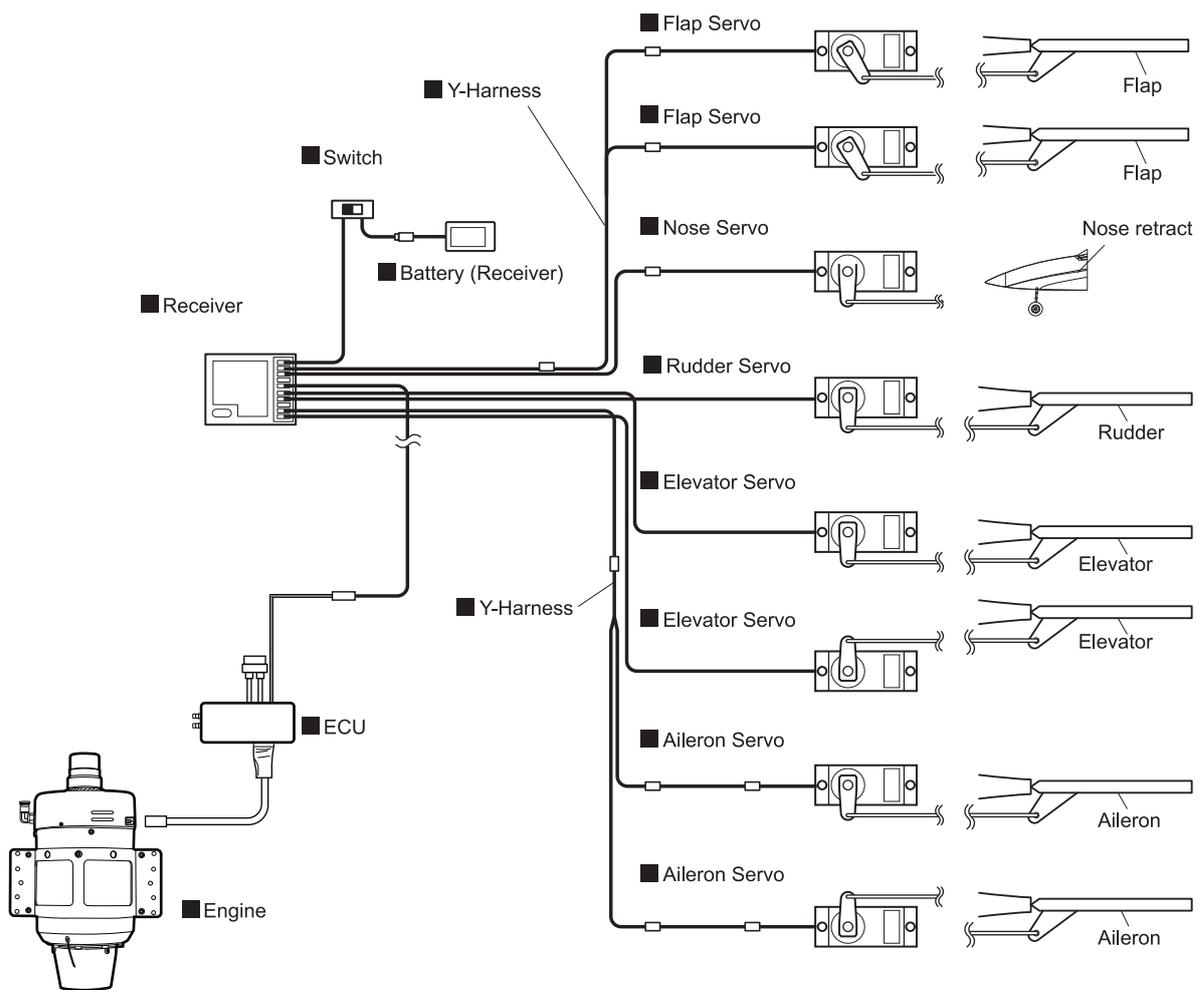


DECORATION


< Side view > Left

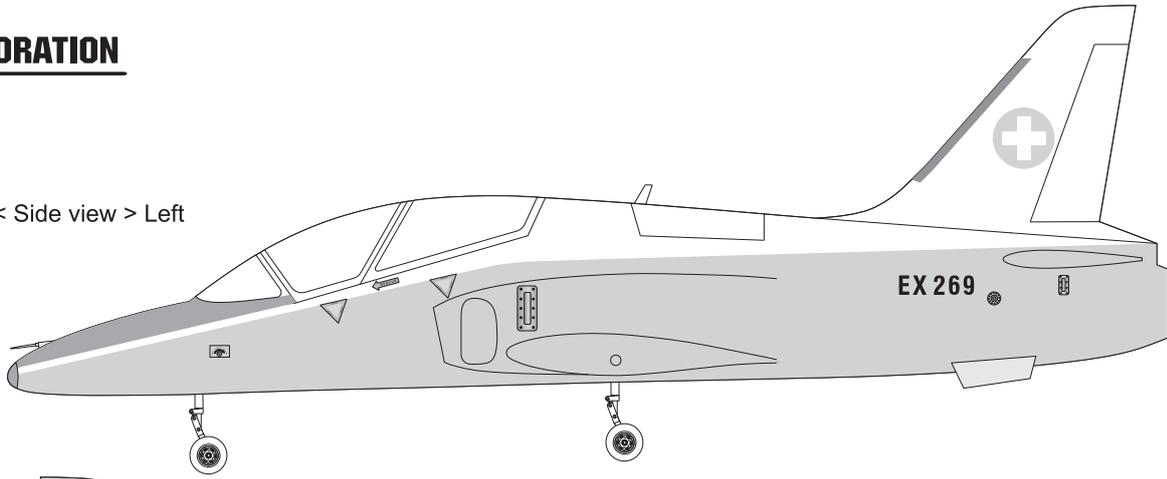


< Side view > Right

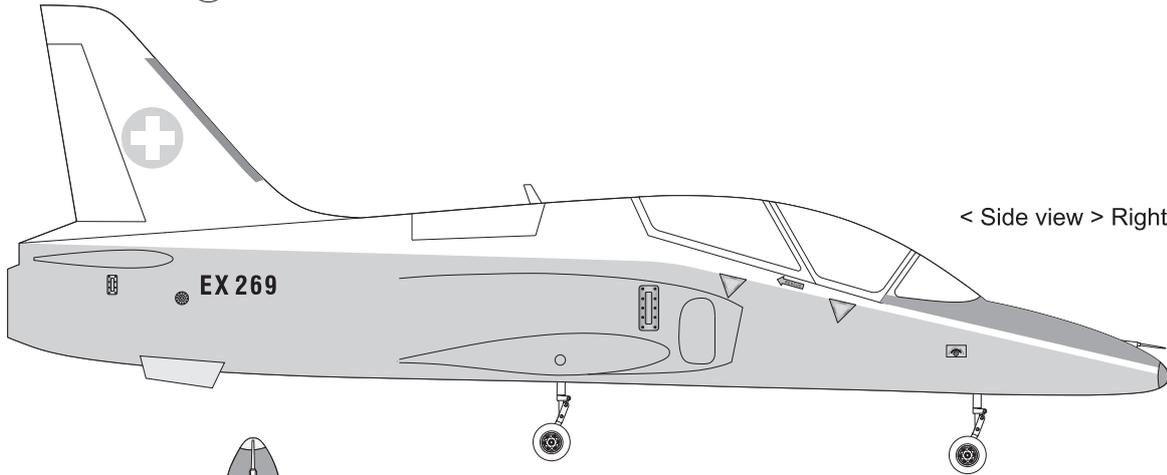


< Top view >

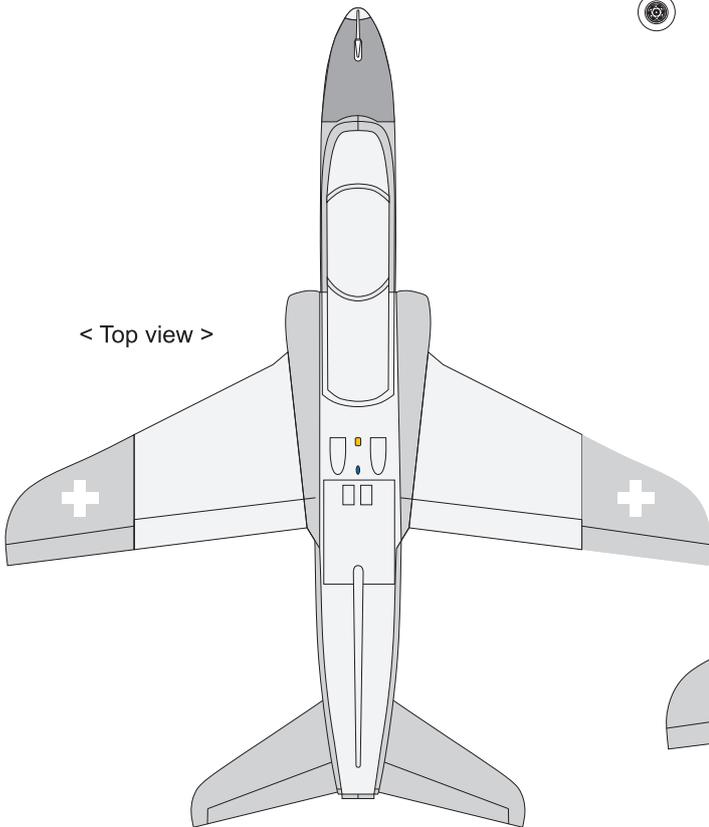


< Bottom view >

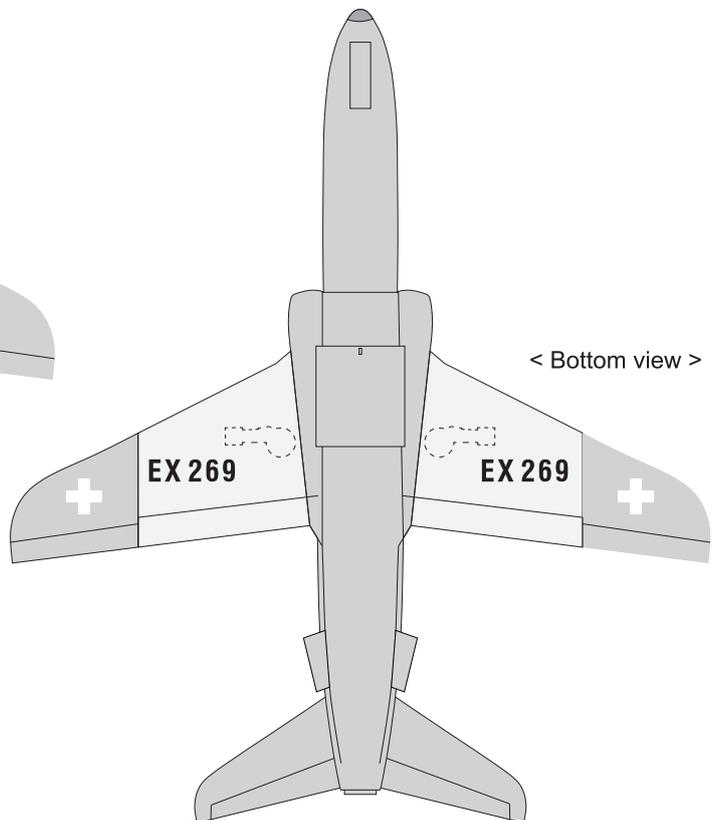








MAIN GEAR DIMENSIONAL DETAIL

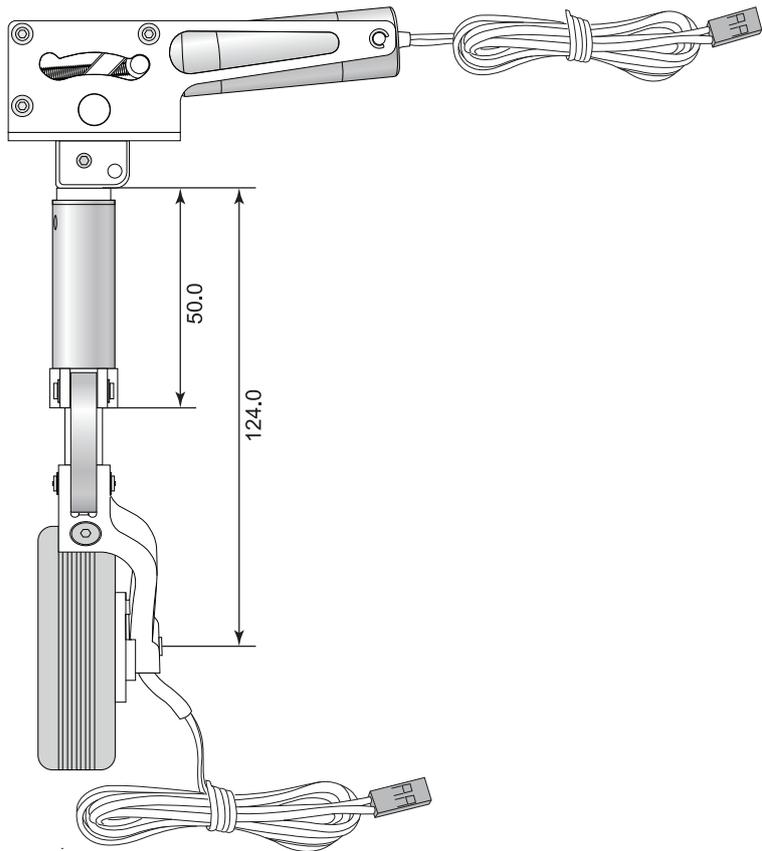

NOSE GEAR DIMENSIONAL DETAIL

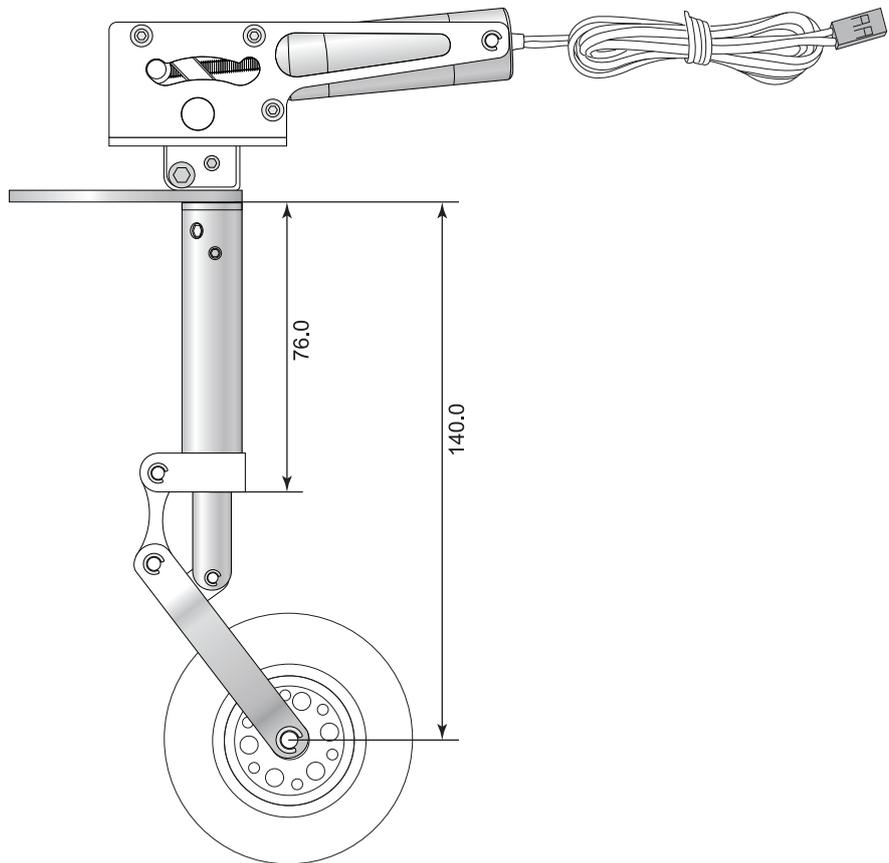


EXPLODED VIEW

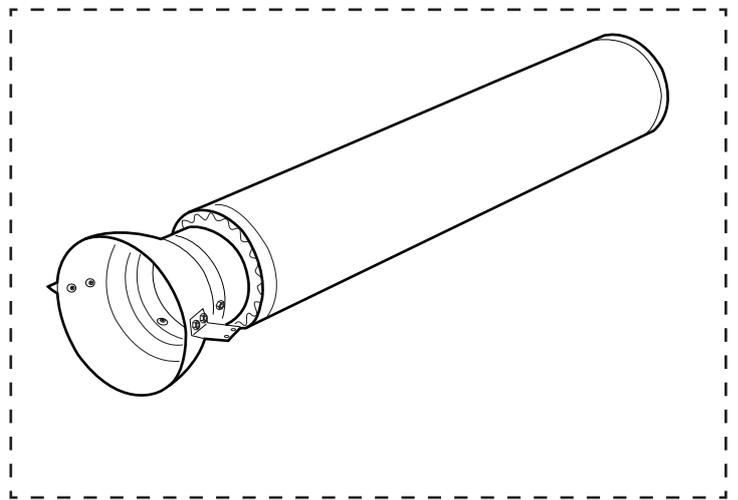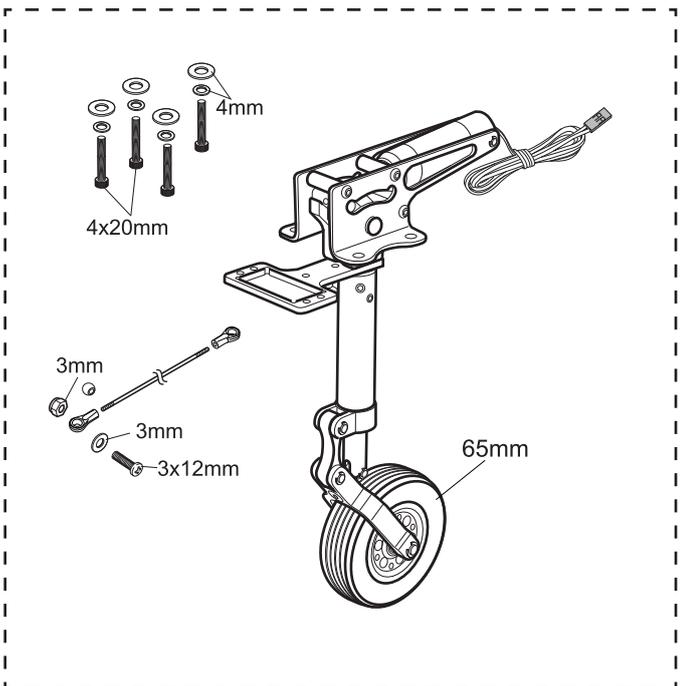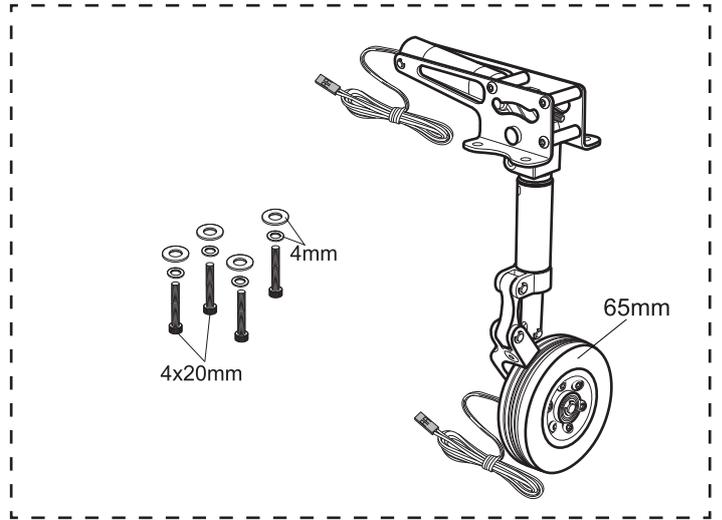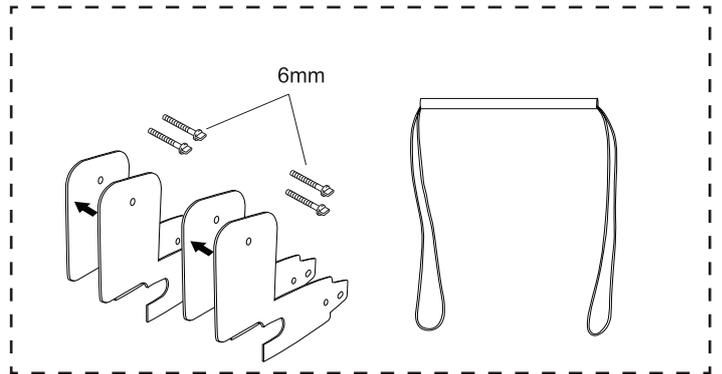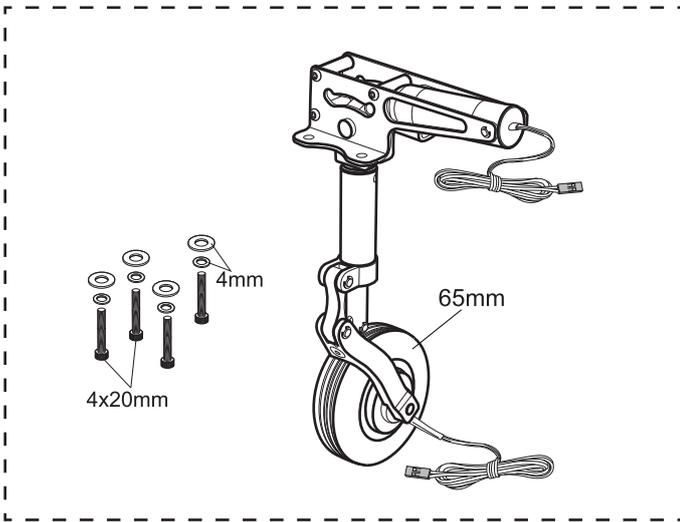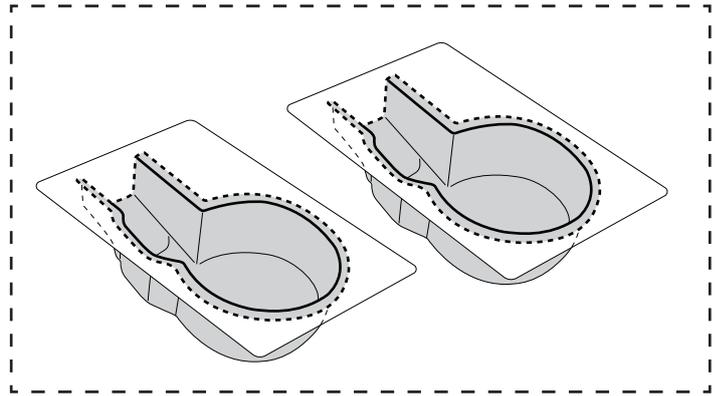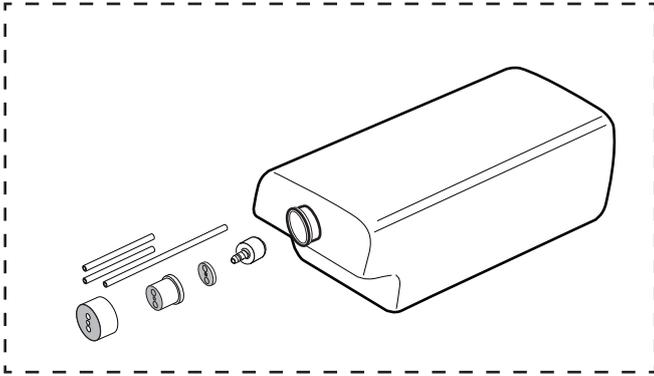


I/C FLIGHT WARNINGS



Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc. **NEVER** fly your aircraft close to people or built up areas.

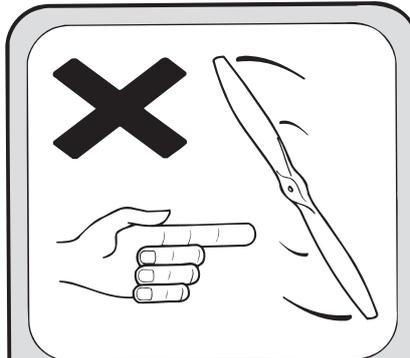


THE PROPELLER IS DANGEROUS
Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at **ALL** times.

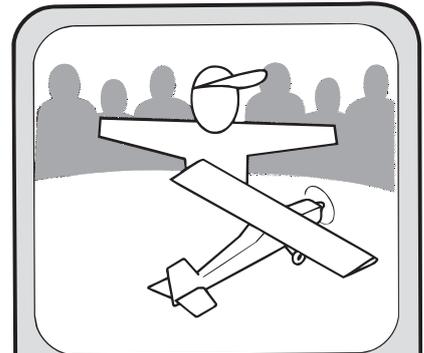


Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.




NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.

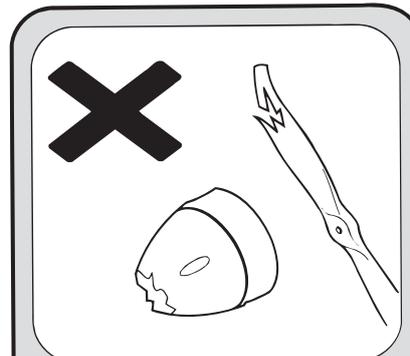


NEVER use damaged or deformed propellers or spinners.

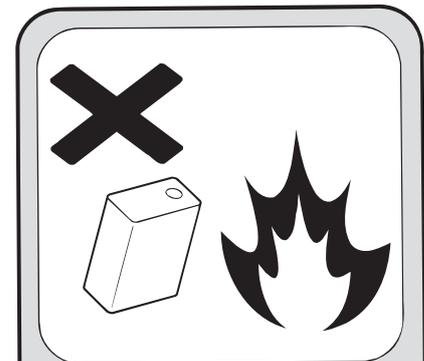

DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

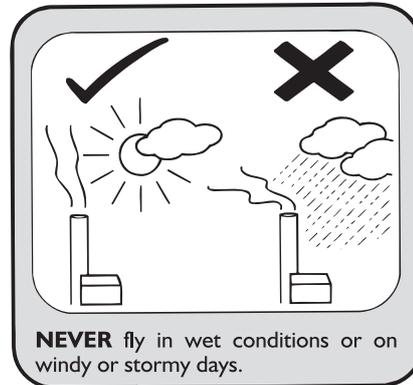

NEVER fly in wet conditions or on windy or stormy days.

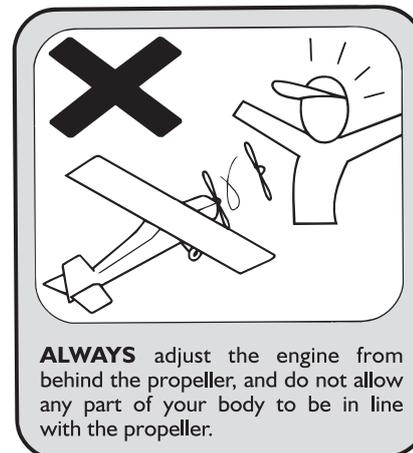

ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.

I/C FLIGHT GUIDELINES

