

# TUCANO TURBOPROP

103" W/Electric Retract ARF V2



**READ THROUGH THIS MANUAL  
BEFORE STARTING CONSTRUCTION.  
IT CONTAINS IMPORTANT INSTRUCTIONS  
AND WARNINGS CONCERNING THE  
ASSEMBLY AND USE OF THIS MODEL.**



## SPECIFICATION

- Wingspan: 2567mm (101 in)
- Length: 2209mm (86.2 in)
- Flying weight: 16700 - 17700 gr
- Wing area: 100 dm<sup>2</sup>
- Wing type: Naca airfoils
- Gear type: Electric Retract Gear With CNC Suspension Metal Struts, Electric Controller Box (included)
- Plastic Bomb not included (purchasing separately)
- Spinner 3 blades: 105mm (Included)
- Radio: 8 channel minimum (Not Included)
- Servo: 8 standard hi-torque servo: 2 aileron; 2 flap; 2 elevator; 1 rudder; 1 steering nose (Not included)
- Servo mount: 21mm x 42 mm
- Propeller: suit with your engine
- Engine: Turboprop Kingtech K-45 (Not Included)

- Gravity CG: 141 mm (5.5 in) Back from the leading edge of the wing, at the fuselage
- Control throw Ailerons: Low: 15mm up/down; High: 20mm up/down
- Control throw Elevators: Low: 15mm up/down; High: 20mm up/down
- Control throw Rudder: Low: 30mm right/left; High: 45mm right/left
- Control throw Flaps: Mid: 25mm down; Landing: 35mm down
- Experience level: Intermediate
- Plane type: Scale Military



## **UNDER SAFETY PRECAUTIONS**

**This radio control model is not a toy!**

- It is highly recommended that first-time builders seek advice of experienced modelers before beginning assembly.
- Assemble this kit only in places out of children's reach!
- Take enough safety precautions prior to operating this model. You are responsible for this model's assembly and safe operation!
- Always keep this instruction manual ready at hand for quick reference, even after completing the assembly.

## TABLE OF CONTENTS

Introduction .....	1	Rudder installation .....	21
Warranty.....	2	Installing the rudder pushrod .....	22
Disclaimer.....	2	Installing the navigation gear light .....	24
Safety precaution .....	2	Installing the nose gear retract .....	26
Important building notes.....	2	Secure the wing to the fuselage .....	29
Suggestion.....	2	Installing the engine .....	30
Flight warnings.....	2	Mounting the cowl .....	30
Flight warnings.....	3	Installing the spinner .....	32
Covering tools.....	3	Installing the fuel tank.....	33
Adhesives and required tools .....	3	Balancing .....	36
Academy of model aeronautics national model aircraft safety code.....	3	Lateral balance .....	38
Installing the light wing.....	5	Control throws .....	38
Light Installing (Optional) .....	7	Flight preparation pre flight check .....	38
Preparations .....	7	Main Gear Dimensional Detail .....	39
Installing the ailerons and flaps.....	8	Nose Gear Dimensional Detail .....	39
Installing the ailerons and flaps servos .....	8	Exploded view .....	40
Installing the ailerons and flaps linkages .....	9	Exploded view .....	41
Installing the plastic cover.....	13	Exploded view .....	42
Installing the main landing gear .....	13		
Electric retract system.....	16		
Joining the fuselage .....	17		
Installing the elevator servo .....	18		
Installing the elevator linkages .....	18		
Horizontal stabilizer installation .....	21		

## INTRODUCTION

Thank you for purchasing Phoenix Model products. With over 20 years experience in production and fly testing, Phoenix Model is committed to bring the best quality products and good service to customers. Along with a team of creative engineers and skilled workers, we will always accompany with customers by our great experiences, fully enthusiasm... which will burn our passion!! Joining with us to explore and conquer challenges in the sky ...

Your satisfaction is our success. Please read through this manual before starting construction.

**Academy of Model Aeronautics:** If you are not already a member of the AMA, please join! The AMA is the governing body of model aviation and membership provides liability insurance coverage, protects modelers' rights and interests and is required to fly at most R/C sites.

**Academy of Model Aeronautics**  
5151 East Memorial Drive Muncie, IN 47302-9252

Tele. (800) 435-9262  
Fax (765) 741-0057  
Or via the Internet at: <http://www.modelaircraft.org>



**WARRANTY**

Phoenix Model guarantees the component parts in this kit to be free from defects in both material and workmanship at the date of purchase by the purchaser.

This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product.

This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Phoenix Model.

Further, Phoenix Model reserves the right to change or modify this warranty without notice.

**DISCLAIMER**

Read this disclaimer carefully before using this product. Please strictly follow the instruction manual to assemble and use this.

In that Phoenix Model has no control over the final assembly or material used for final assembly, Phoenix Model is not responsible for loss of use, or other incidental or consequential damages.

Furthermore, Phoenix Model cannot be held liable for personal injury or property damage caused by the use or misuse of Phoenix Model products. By the act of using the user-assembled products, the user accepts all resulting liability.

**SAFETY PRECAUTION**

- This is not a toy and pilots must be over the age of 14
- Be sure that no other flyers are using your radio frequency.
- Do not smoke near fuel
- Store fuel in a cool, dry place, away from children and pets.
- Wear safety glasses.
- The glow plug clip must be securely attached to the glow plug.
- Do not flip the propeller with your fingers.
- Keep loose clothing and wires away from the propeller.
- Do not start the engine if people are near. Do not stand in line with the side of the propeller.
- Make engine adjustments from behind the propeller only. Do not reach around the spinning propeller.
- Moisture causes damage to electronics. Avoid water exposure to all equipment not specifically designed and protected for this purpose.

**IMPORTANT BUILDING NOTES**

- Please trial fit all the parts. Make sure you have the correct parts and that they fit and are aligned properly before gluing! This will assure proper assembly. This kit is hand made from natural materials, every plane is unique and minor adjustments may have to be made. However, you should find the fit superior and assembly simple.

- The painted and plastic parts used in this kit are fuel proof. However, they are not tolerant of many harsh chemicals including the following: paint thinner, C/A glue accelerator, C/A glue debonder and acetone. Do not let these chemicals come in contact with the colors on the covering and the plastic parts.

- Some parts included in this kit such as the cowl or wheel pants are made of fiberglass, the fibers of which may cause eye, skin and respiratory tract irritation. Never blow into a part to remove fiberglass dust, as the dust will blow back into your eyes. Always wear safety goggles, a particle mask and rubber gloves when grinding, drilling and sanding fiberglass parts. Vacuum the parts and the work area thoroughly after working with fiberglass parts.

**SUGGESTION**

To avoid scratching your new airplane, do not unwrap the pieces until they are needed for assembly. Cover your workbench with an old towel or brown paper, both to protect the aircraft and to protect the table. Keep a couple of jars or bowls handy to hold the small parts after you open the bag.

**FLIGHT WARNINGS**

- Always operate in open areas, away from factories, hospitals, schools, buildings and houses etc.
- NEVER fly your aircraft close to people or built up areas.
- NEVER fly near power lines, aerials or other dangerous areas including airports, motorways etc.
- NEVER fly in wet conditions or on windy or stormy days.
- ALWAYS adjust the engine from behind the propeller, and do not allow any part of your body to be in line with the propeller.
- **THE PROPELLER IS DANGEROUS** Keep fingers, clothing (ties, shirt sleeves, scarves) or any other loose objects that could be caught or drawn in, away from the propeller. Take care at ALL times.
- NEVER use damaged or deformed propellers or spinners.
- Keep all onlookers (especially small children and animals) well back from the area of operation. This is a flying aircraft, which will cause serious injury in case of impact with a person or animal.
- DO NOT dispose of empty fuel containers on a fire, this can lead to an explosion.

## FLIGHT WARNINGS

- When ready to fly, first extend the transmitter aerial.
- Switch on the transmitter.
- Switch on the receiver.
- Check that the wings are correctly fitted to the fuselage.
- Operate the control sticks on the transmitter and check that the control surfaces move freely and in the CORRECT directions.
- Check that the transmitter batteries have adequate power.
- ALWAYS take off into the wind.
- If the model does not respond correctly to the controls, land it as soon as possible and correct the fault.
- ALWAYS land the model INTO the wind, this ensures that the model lands at the slowest possible speed.
- Switch off the receiver.
- Switch off the transmitter.
- Empty the fuel tank after flying, fuel left in the tank can cause corrosion and lead to engine problems.

## COVERING TOOLS

- Top Flite® MonoKote® Sealing Iron
- Top Flite Hot Sock Iron Cover
- Top Flite MonoKote Trim Seal Iron
- Top Flite MonoKote Heat Gun

## ADHESIVES AND REQUIRED TOOLS

- Thin CA
- 30-minute epoxy
- 6-minute epoxy
- Threadlocker thread locking cement
- Mixing sticks
- Mixing cups (GPMR8056)
- Epoxy brushes
- Denatured alcohol
- Canopy Glue
- Felt-tipped pen or pencil
- Flat screwdriver
- Adjustable wrench
- Drill
- Hobby knife
- Masking tape
- Phillips screwdriver (large)
- Phillips screwdriver (small)
- Ruler
- Sandpaper
- Soldering iron
- Solder
- Hex wrench
- Drill bit: 1/16-inch (1.5mm), 5/64-inch (2mm), 1/8-inch (3.2mm), 3/16-inch (4.8mm), 11/64-inch (4.5mm), 13/64-inch (5.2mm), 1/4-inch (6.4mm)

## Academy of Model Aeronautics National Model Aircraft Safety Code

## Effective January 1, 2014

A. GENERAL: A model aircraft is a non-human-carrying aircraft capable of sustained flight in the atmosphere. It may not exceed limitations of this code and is intended exclusively for sport, recreation, education and/or competition. All model flights must be conducted in accordance with this safety code and any additional rules specific to the flying site.

1. Model aircraft will not be flown:
  - (a) In a careless or reckless manner.
  - (b) At a location where model aircraft activities are prohibited.
2. Model aircraft pilots will:
  - (a) Yield the right of way to all human-carrying aircraft.
  - (b) See and avoid all aircraft and a spotter must be used when appropriate. (AMA Document #540-D.)
  - (c) Not fly higher than approximately 400 feet above ground level within three (3) miles of an airport without notifying the airport operator.
  - (d) Not interfere with operations and traffic patterns at any airport, heliport or seaplane base except where there is a mixed use agreement.
  - (e) Not exceed a takeoff weight, including fuel, of 55 pounds unless in compliance with the AMA Large Model Airplane program. (AMA Document 520-A.)
  - (f) Ensure the aircraft is identified with the name and address or AMA number of the owner on the inside or affixed to the outside of the model aircraft. (This does not apply to model aircraft flown indoors.)
  - (g) Not operate aircraft with metal-blade propellers or with gaseous boosts except for helicopters operated under the provisions of AMA Document #555.
  - (h) Not operate model aircraft while under the influence of alcohol or while using any drug that could adversely affect the pilot's ability to safely control the model.
  - (i) Not operate model aircraft carrying pyrotechnic devices that explode or burn, or any device which propels a projectile or drops any object that creates a hazard to persons or property.

## Exceptions:

- Free Flight fuses or devices that burn producing smoke and are securely attached to the model aircraft during flight.
- Rocket motors (using solid propellant) up to a G-series size may be used provided they remain attached to the model during flight. Model rockets may be flown in accordance with the National Model Rocketry Safety Code but may not be launched from model aircraft.

- Officially designated AMA Air Show Teams (AST) are authorized to use devices and practices as defined within the Team AMA Program Document. (AMA Document #718.)
- (j) Not operate a turbine-powered aircraft, unless in compliance with the AMA turbine regulations. (AMA Document #510-A.)
- 3. Model aircraft will not be flown in AMA sanctioned events, air shows or model demonstrations unless:
  - (a) The aircraft, control system and pilot skills have successfully demonstrated all maneuvers intended or anticipated prior to the specific event.
  - (b) An inexperienced pilot is assisted by an experienced pilot.
- 4. When and where required by rule, helmets must be properly worn and fastened. They must be OSHA, DOT, ANSI, SNELL or NOCSAE approved or comply with comparable standards.

**B. RADIO CONTROL (RC)**

1. All pilots shall avoid flying directly over unprotected people, vessels, vehicles or structures and shall avoid endangerment of life and property of others.
2. A successful radio equipment ground-range check in accordance with manufacturer's recommendations will be completed before the first flight of a new or repaired model aircraft.
3. At all flying sites a safety line(s) must be established in front of which all flying takes place. (AMA Document #706.)
  - (a) Only personnel associated with flying the model aircraft are allowed at or in front of the safety line.
  - (b) At air shows or demonstrations, a straight safety line must be established.
  - (c) An area away from the safety line must be maintained for spectators.
  - (d) Intentional flying behind the safety line is prohibited.
4. RC model aircraft must use the radio-control frequencies currently allowed by the Federal Communications Commission (FCC). Only individuals properly licensed by the FCC are authorized to operate equipment on Amateur Band frequencies.
5. RC model aircraft will not knowingly operate within three (3) miles of any pre-existing flying site without a frequency-management agreement. (AMA Documents #922 and #923.)
6. With the exception of events flown under official AMA Competition Regulations, excluding takeoff and landing, no powered model may be flown outdoors closer than 25 feet to any individual, except for the pilot and the pilot's helper(s) located at the flightline.
7. Under no circumstances may a pilot or other person touch an outdoor model aircraft in flight while it is still under power, except to divert it from striking an individual.
8. RC night flying requires a lighting system providing the pilot with a clear view of the model's attitude and orientation at all times. Hand-held illumination systems are inadequate for night flying operations.
9. The pilot of an RC model aircraft shall:
  - (a) Maintain control during the entire flight, maintaining visual contact without enhancement other than by corrective lenses prescribed for the pilot.
  - (b) Fly using the assistance of a camera or First-Person View (FPV) only in accordance with the procedures outlined in AMA Document #550.
  - (c) Fly using the assistance of autopilot or stabilization system only in accordance with the procedures outlined in AMA Document #560.

**C. FREE FLIGHT**



1. Must be at least 100 feet downwind of spectators and automobile parking when the model aircraft is launched.
2. Launch area must be clear of all individuals except mechanics, officials, and other fliers.
3. An effective device will be used to extinguish any fuse on the model aircraft after the fuse has completed its function.

**D. CONTROL LINE**

1. The complete control system (including the safety thong where applicable) must have an inspection and pull test prior to flying.
2. The pull test will be in accordance with the current Competition Regulations for the applicable model aircraft category.
3. Model aircraft not fitting a specific category shall use those pull-test requirements as indicated for Control Line Precision Aerobatics.
4. The flying area must be clear of all utility wires or poles and a model aircraft will not be flown closer than 50 feet to any above-ground electric utility lines.
5. The flying area must be clear of all nonessential participants and spectators before the engine is started.



**INSTALLING THE LIGHT WING**

&lt; Trim the plastic cover &gt;

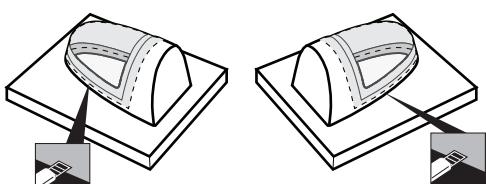


L/R

2 x 10mm TP Screw

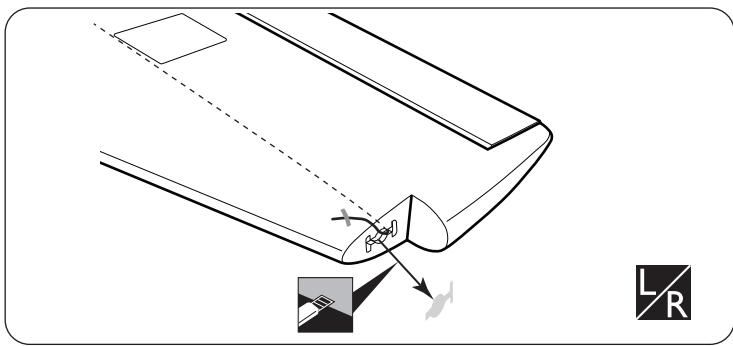


L/R

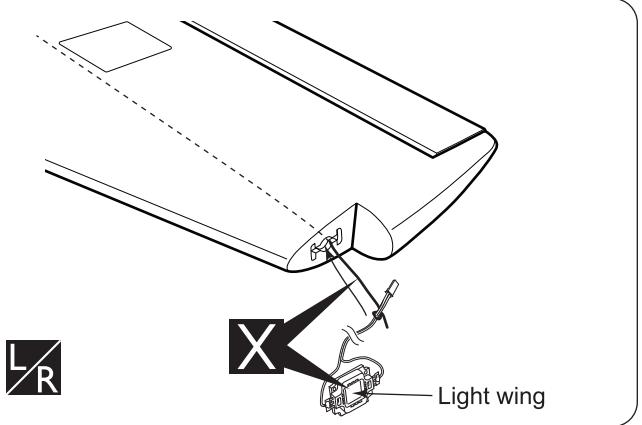

L/R




Light wing

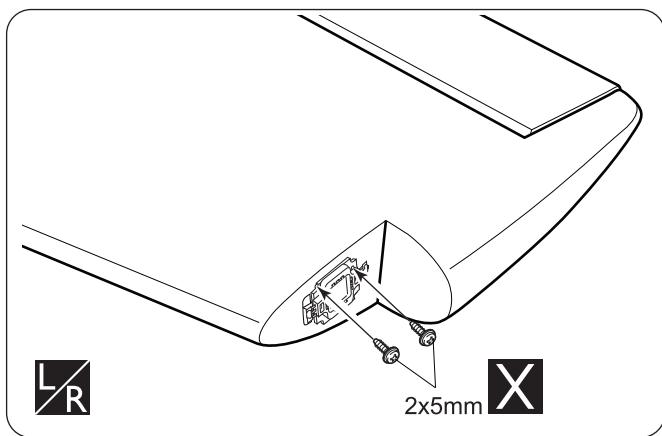

L/R



2x5mm

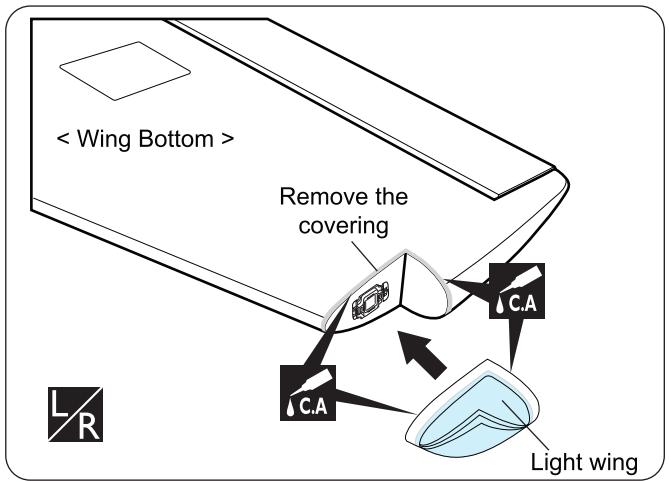


L/R

Remove the covering




Light wing

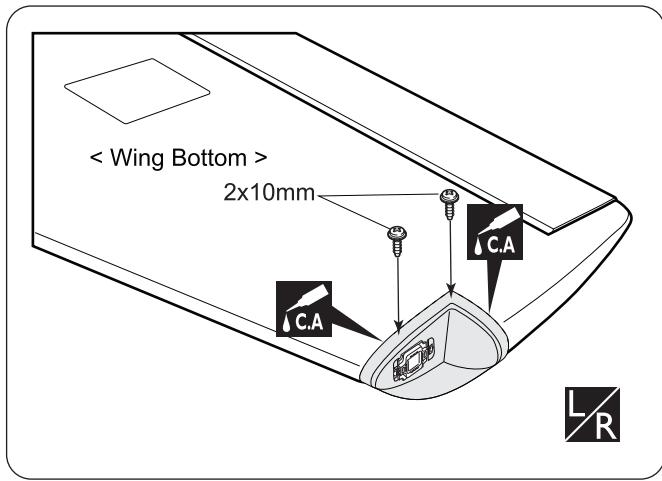

L/R

&lt; Wing Bottom &gt;

2x10mm

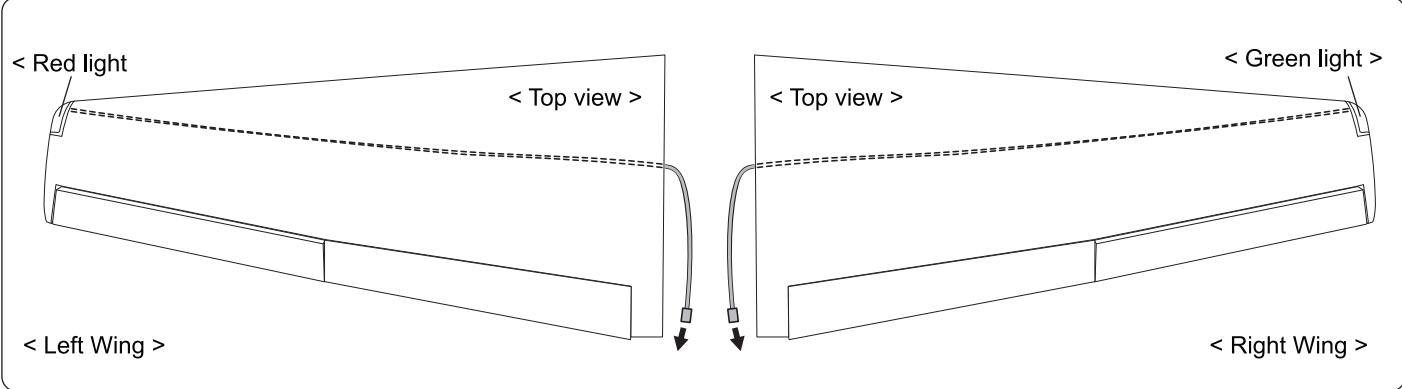

&lt; Top view &gt;

&lt; Green light &gt;

&lt; Red light &gt;

&lt; Left Wing &gt;

&lt; Top view &gt;



&lt; Right Wing &gt;

X Must be purchased separately!


L/R Assemble left and right sides the same way

Apply instant glue (CA glue, super glue).

Cut off shaded portion

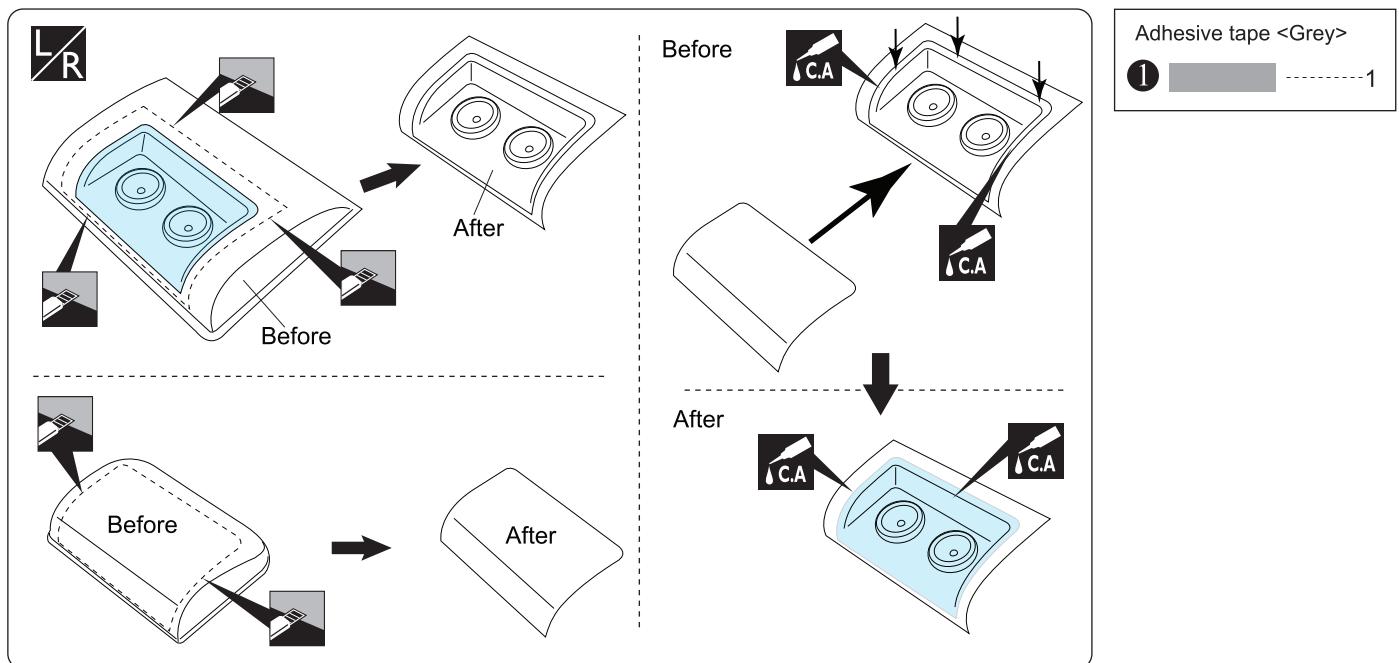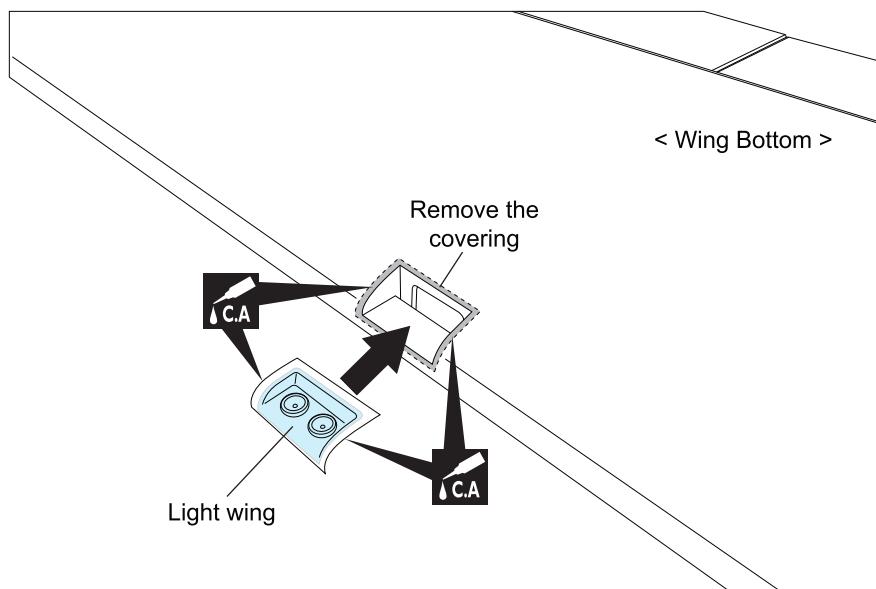**Apply instant glue light wing**

L/R

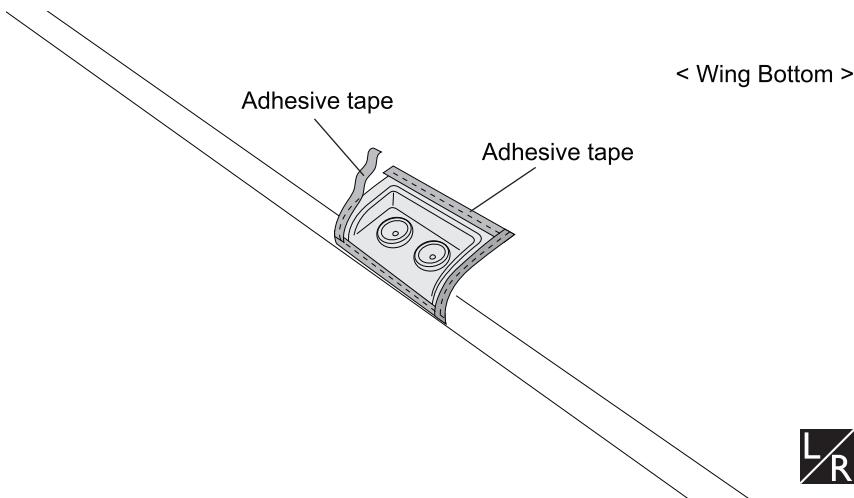
**Decoration for light wing**

L/R

- Cut off shaded portion
- Apply instant glue (CA glue, super glue).
- Assemble left and right sides the same way


## **LIGHT INSTALLING (OPTIONAL)**

**\* LIGHT NOT INCLUDED (MUST BE PURCHASE SEPARATELY):**


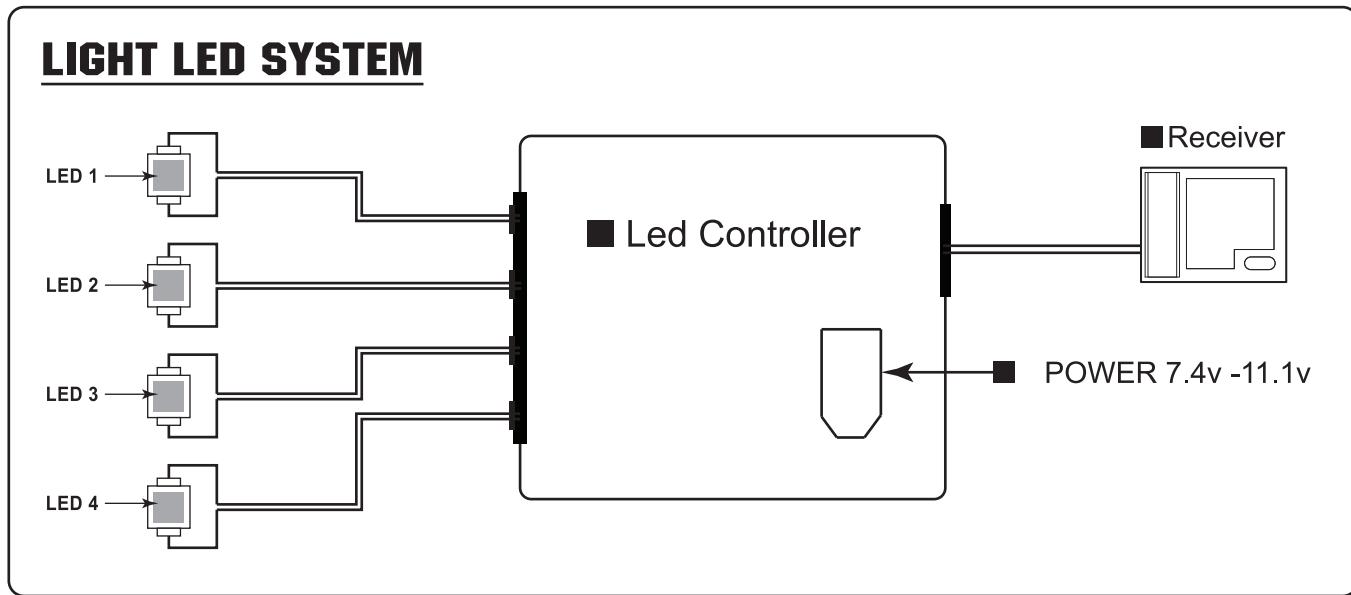


## **PREPARATIONS**

Use a covering iron with a covering sock on high heat to tighten the covering if necessary. Apply pressure over sheeted areas to thoroughly bond the covering to the wood.

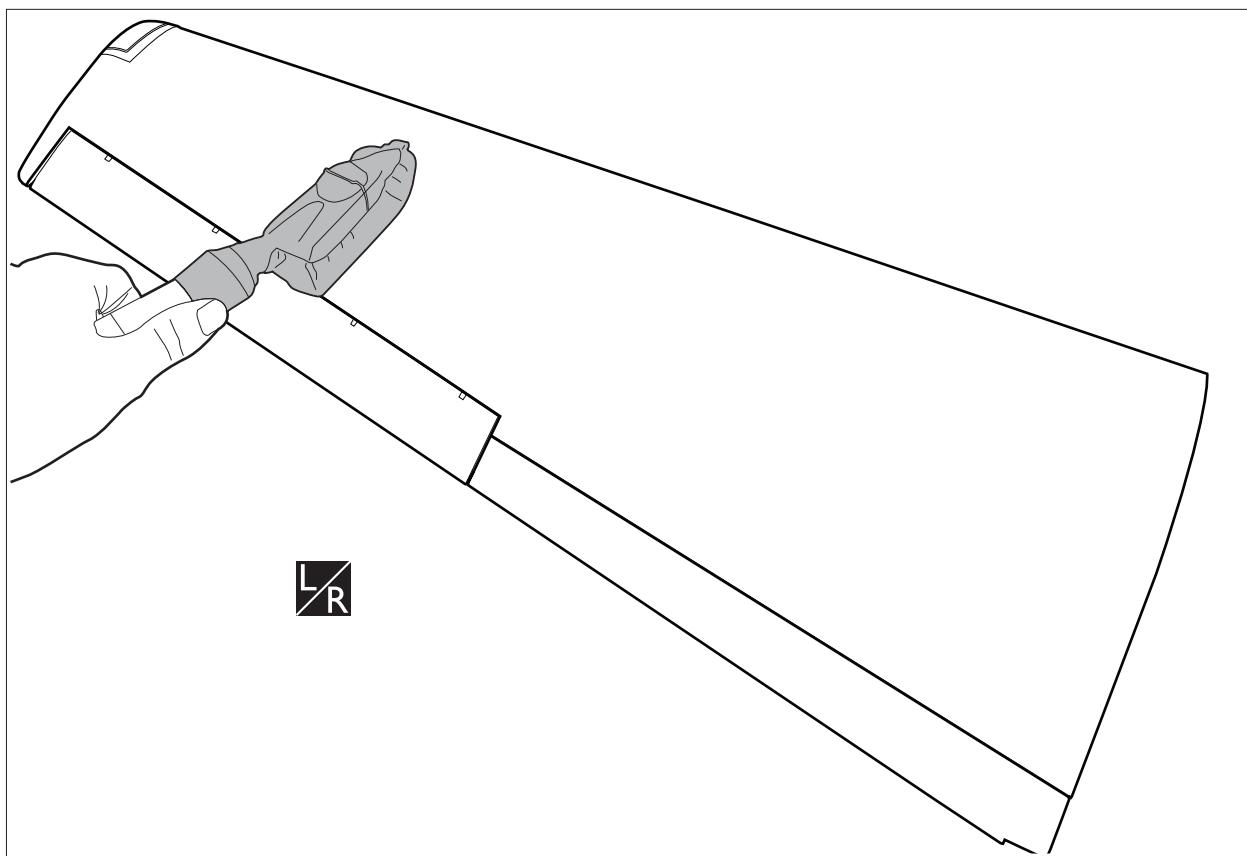

 Assemble left and right sides the same way

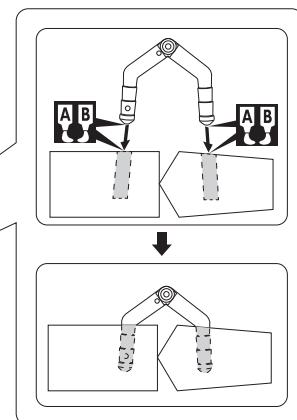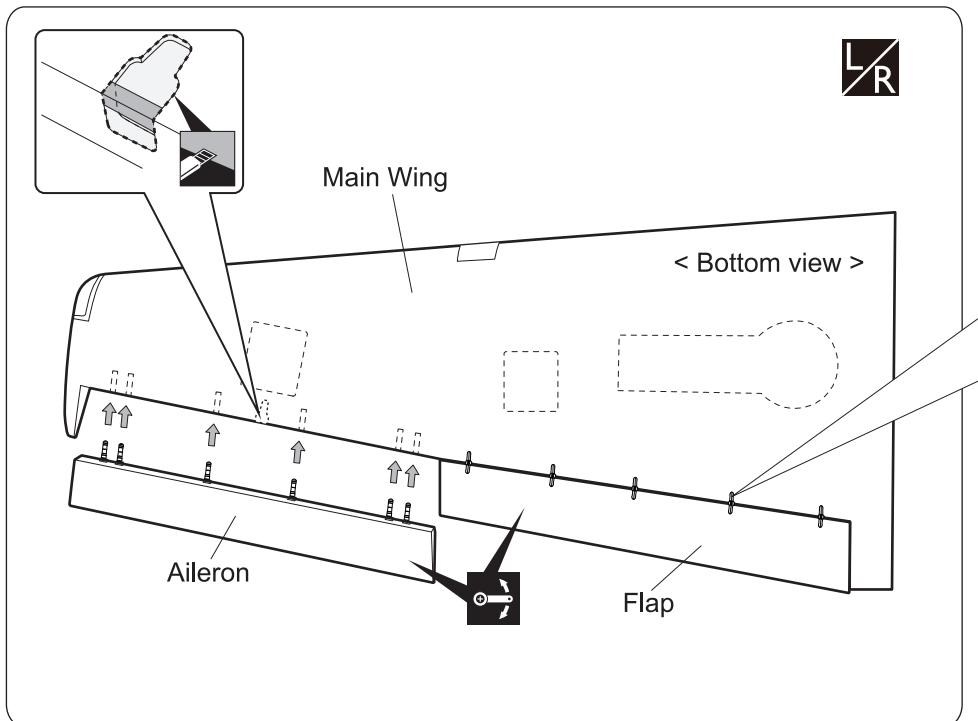**INSTALLING THE AILERONS AND FLAPS**



► Make certain the hinges are adequately secured with glue.  
If they come loose in flight accidents may result.

Assemble left and right sides the same way






Cut off shaded portion

Apply epoxy glue.

Ensure smooth, non-binding movement when assembling.

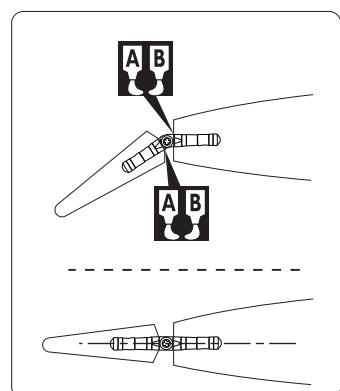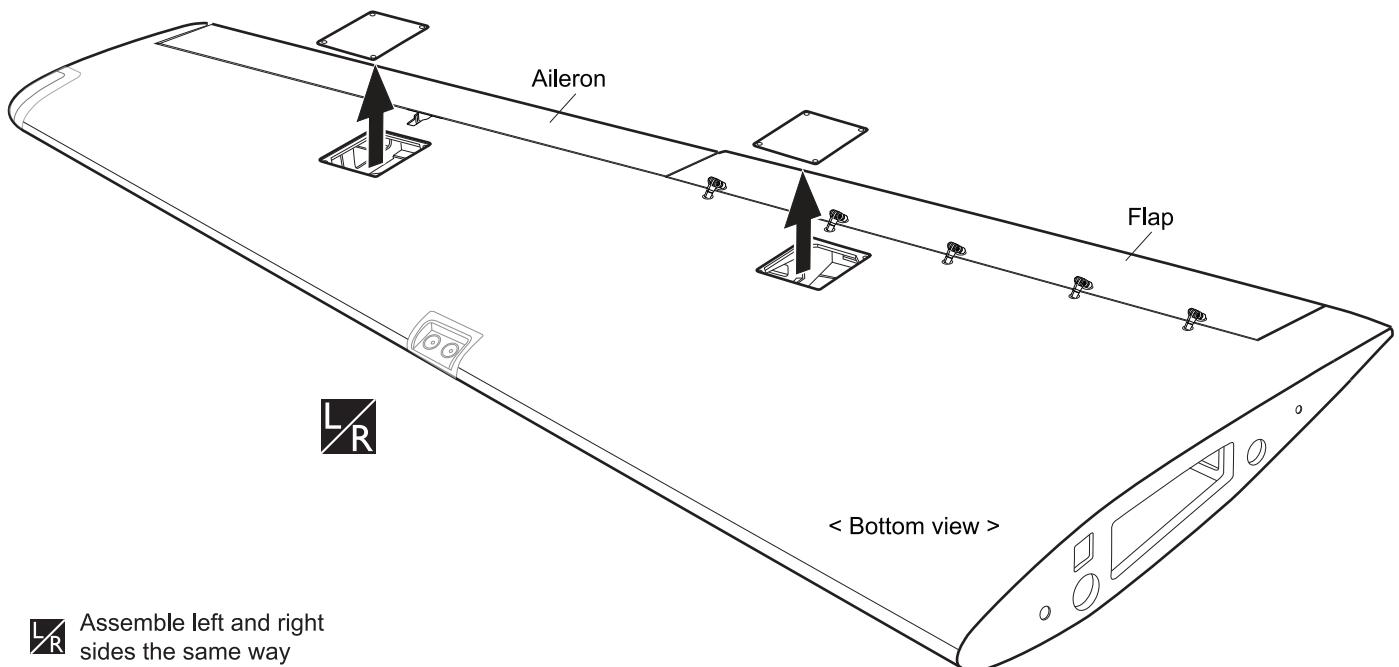**INSTALLING THE AILERONS AND FLAPS SERVOS**

Assemble left and right sides the same way

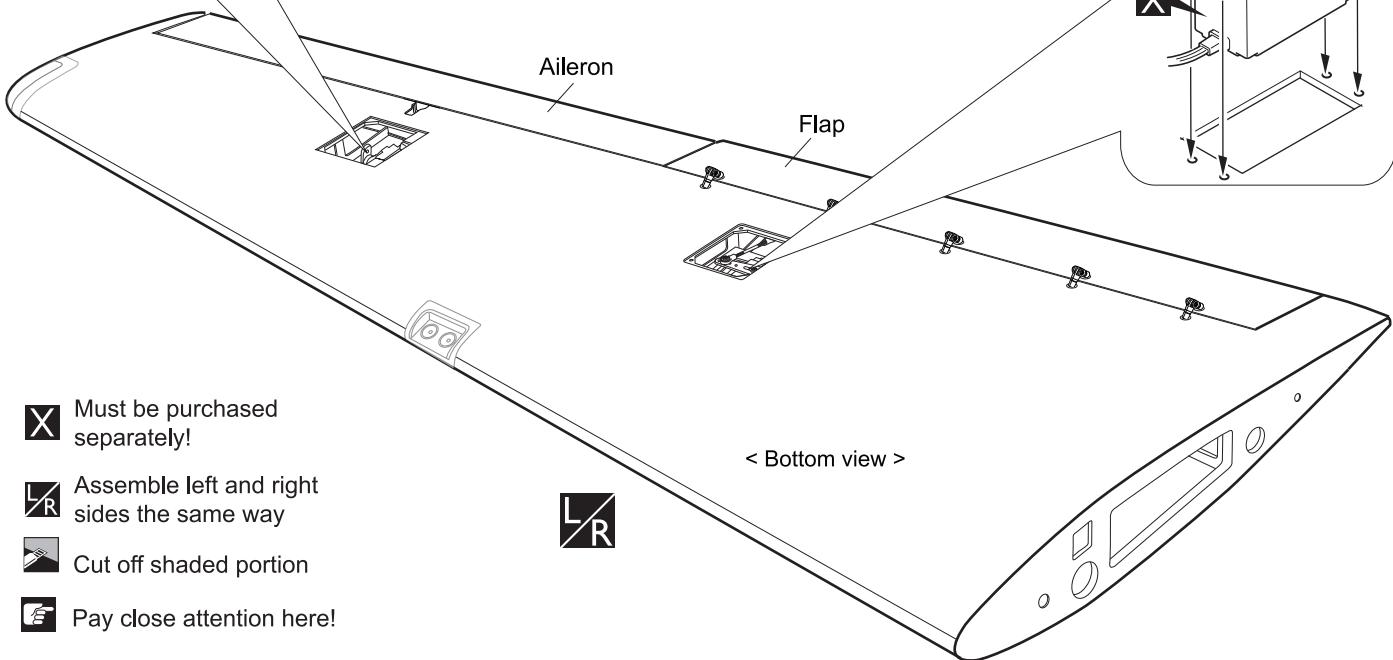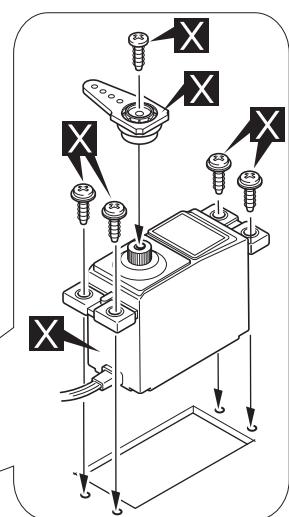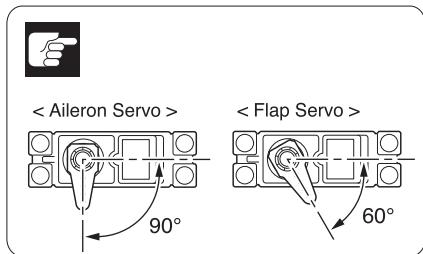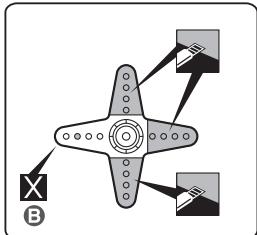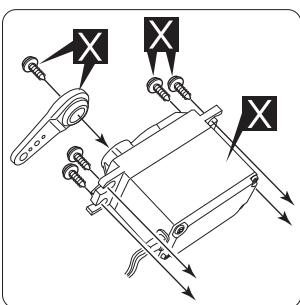



**X** Must be purchased separately!

**L/R** Assemble left and right sides the same way

**Cut off shaded portion**

**Pay close attention here!**

## INSTALLING THE AILERONS AND FLAPS LINKAGES

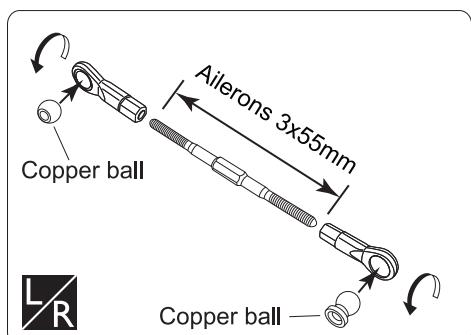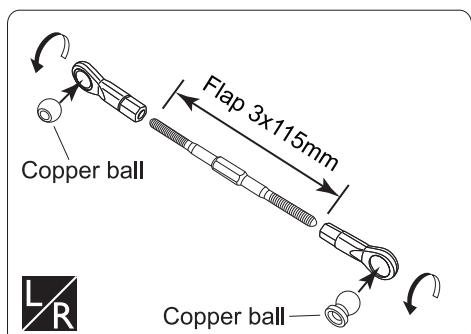

**L/R** Assemble left and right sides the same way

### Control horn <Flap>



3 x 12mm Button Screw



3 x 16mm Button Screw



3mm Nut



Copper ball




Copper ball



3 x 15mm TP Screw



3 x 115mm Push rod




### Control horn <Aileron>



3 x 12mm Button Screw



3 x 16mm Button Screw



3mm Nut



Copper ball



Copper ball



3 x 15mm TP Screw



3 x 55mm Push rod







## WARNINGS


1

3x15mm

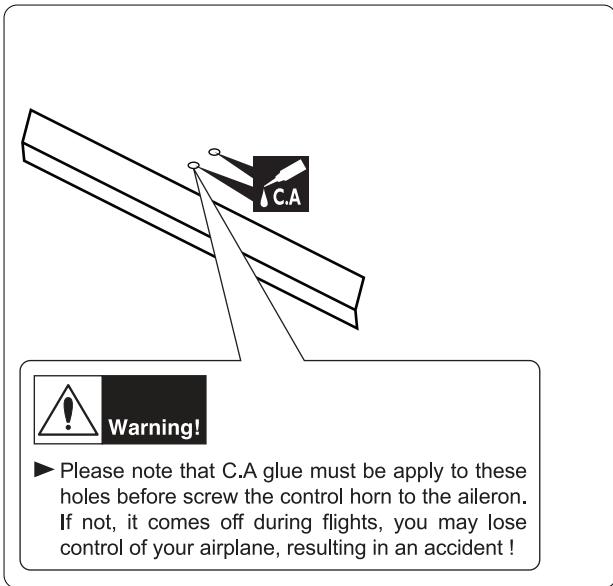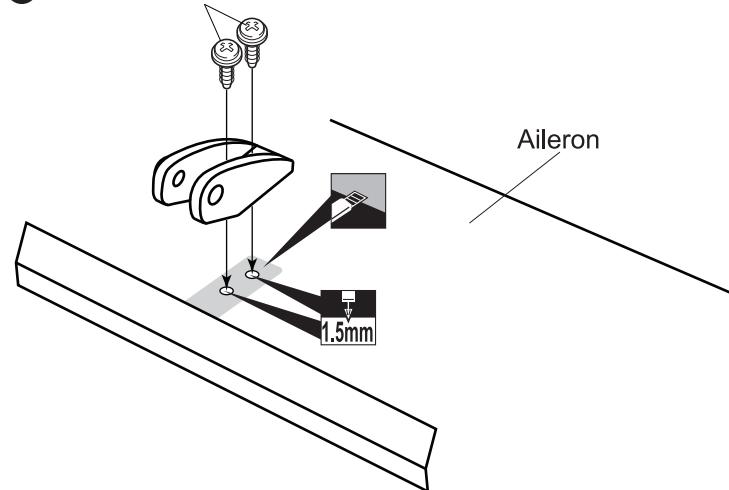

2

L/R

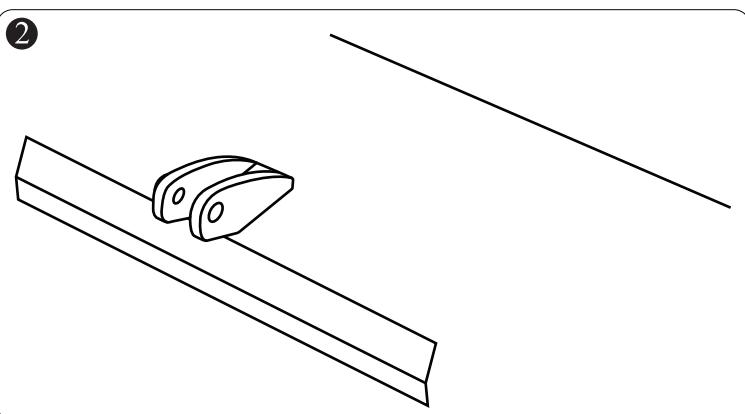

3


Aileron

3x12mm

4

Aileron




L/R

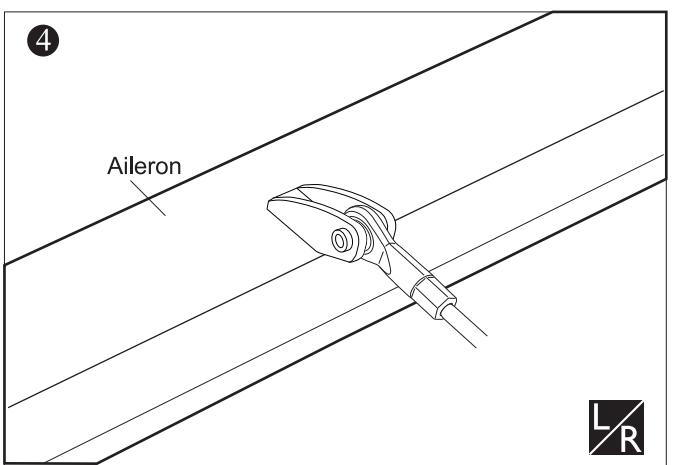

Cut off shaded portion

 Apply instant glue  
(CA glue, super glue).





 Assemble left and right  
sides the same way

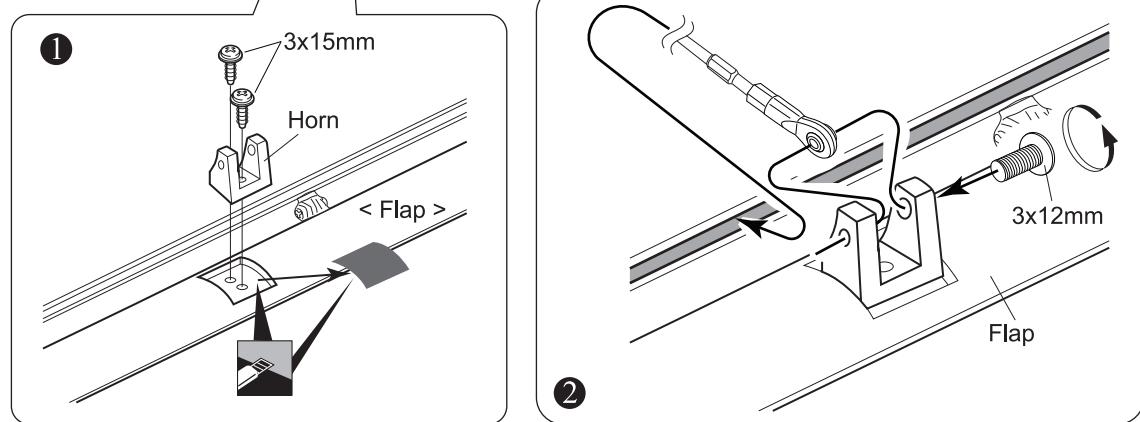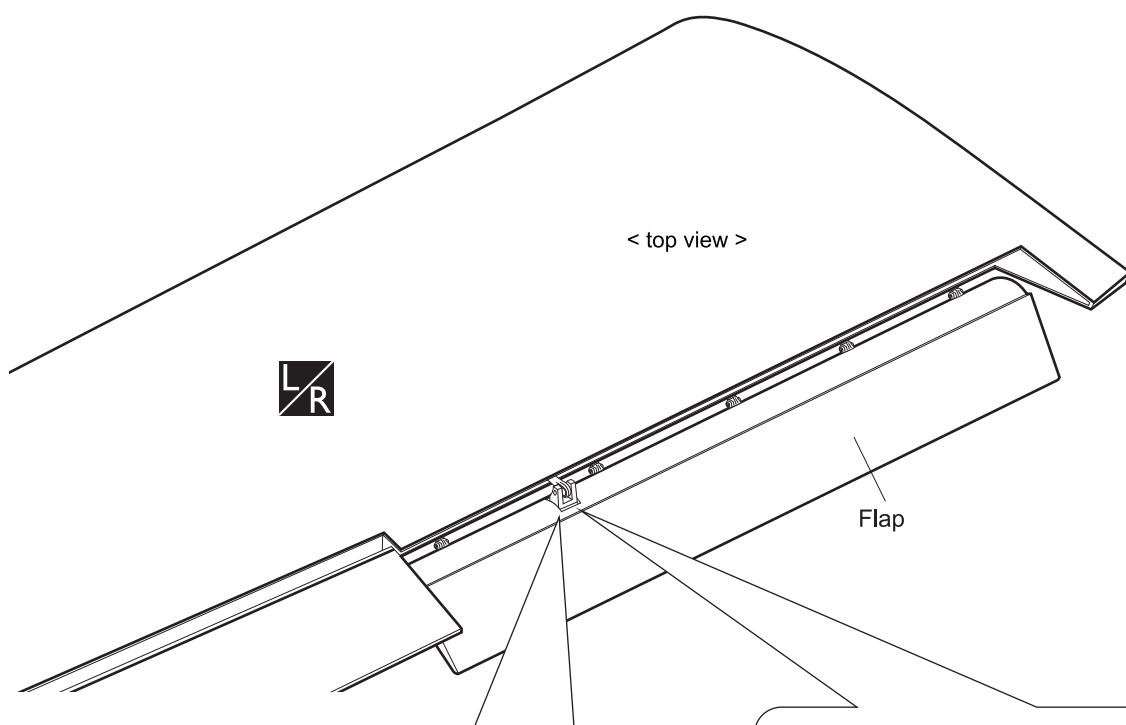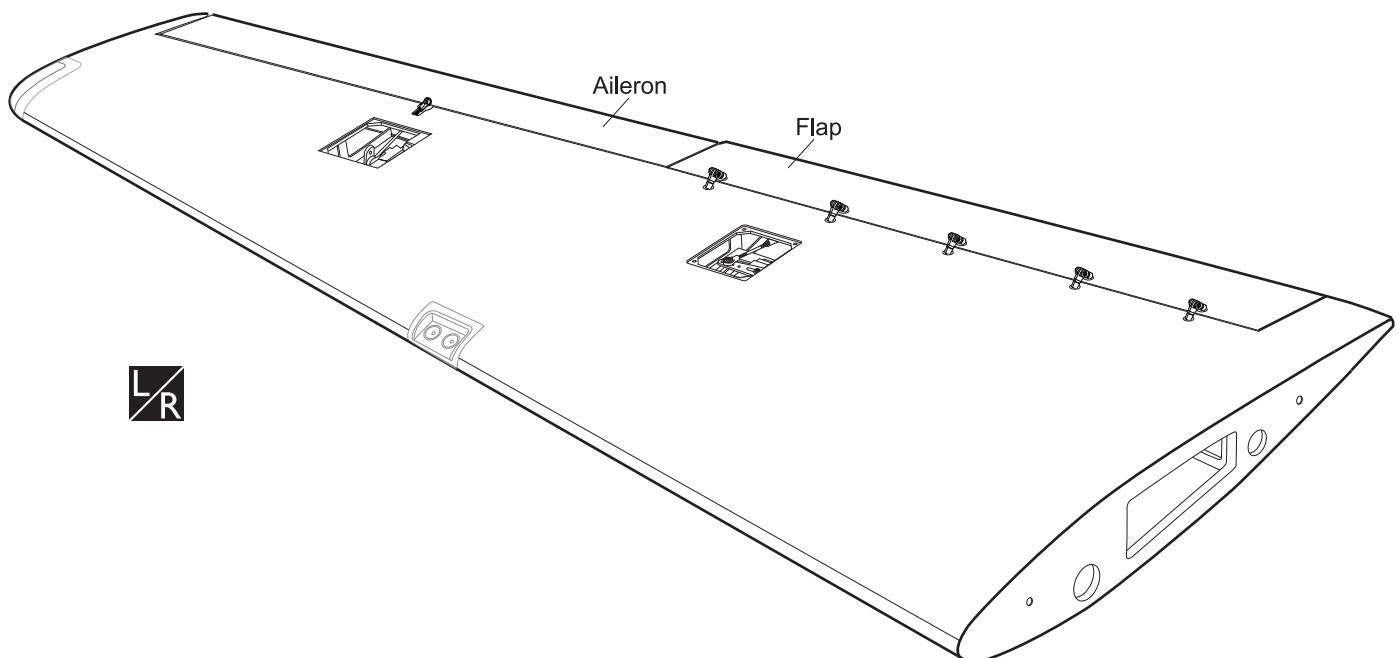


Cut off shaded portion

Assemble left and right sides the same way


2 x 10mm  
16

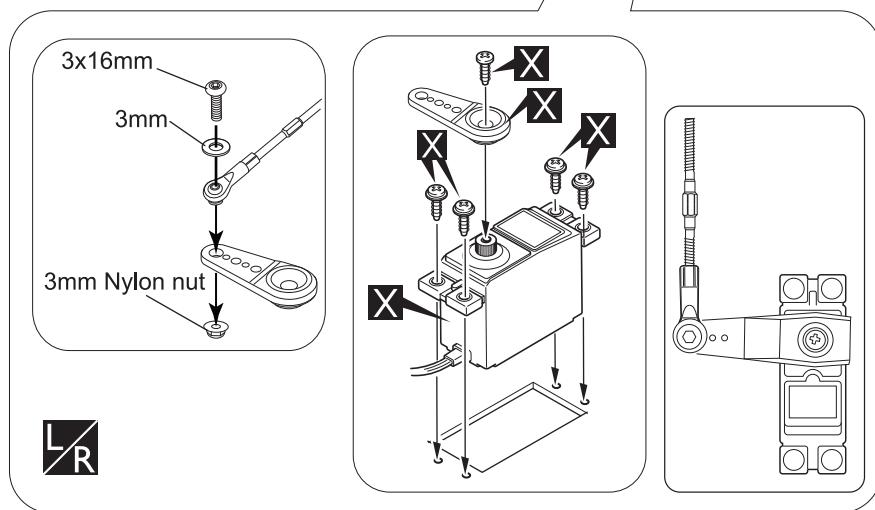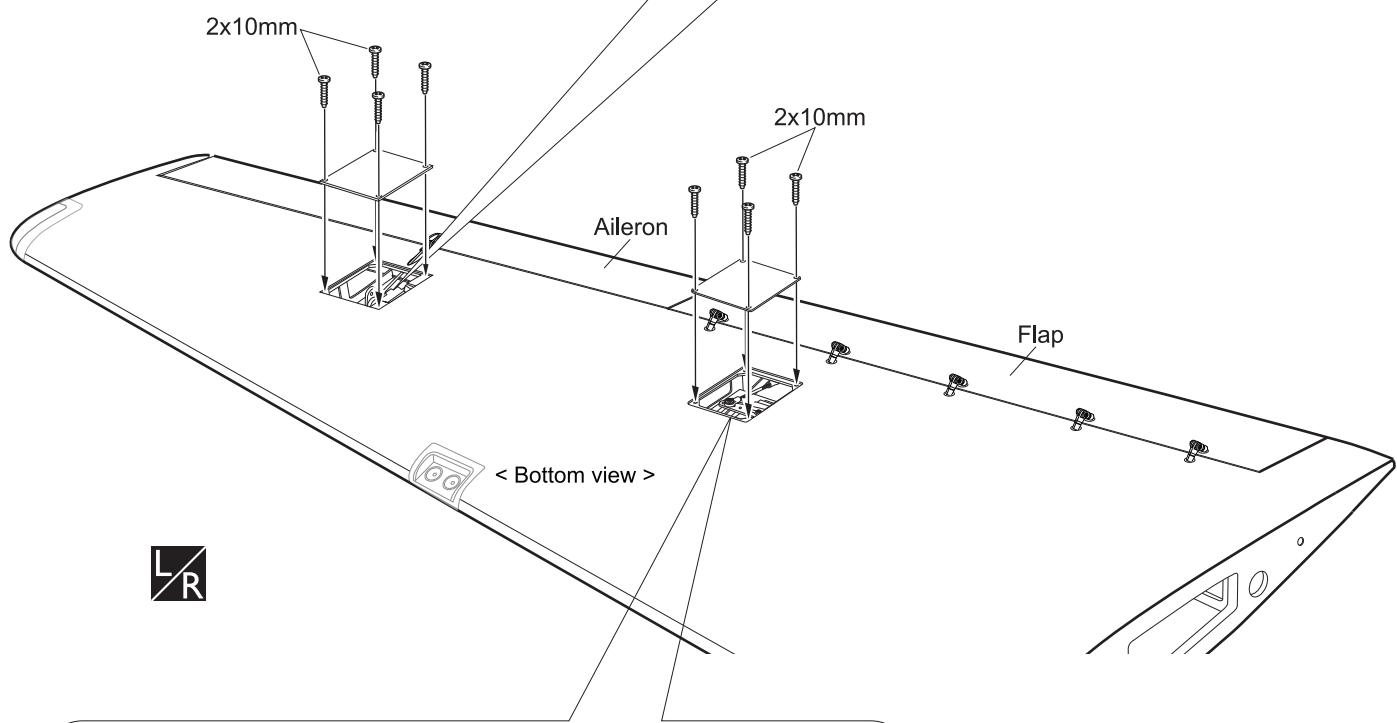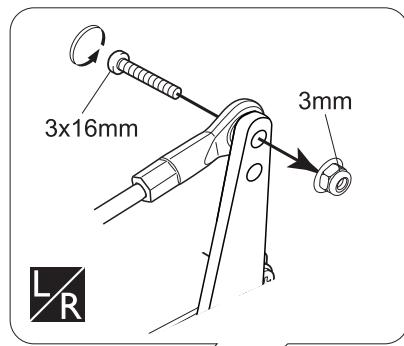

&lt; Right Wing &gt;


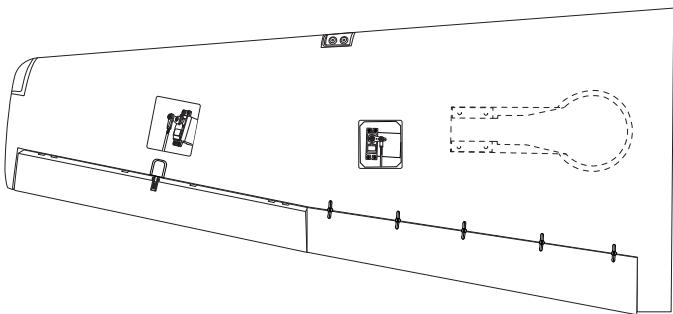


&lt; Left Wing &gt;


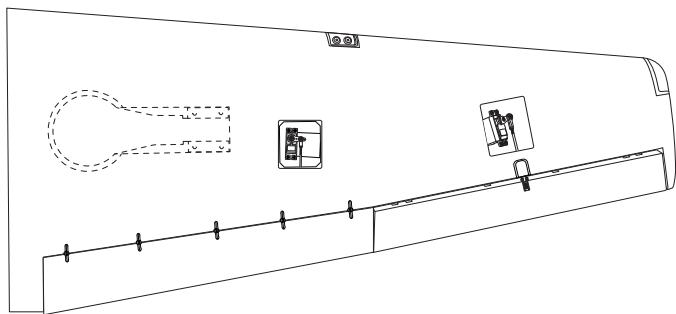


Assemble left and right sides the same way

Must be purchased separately!

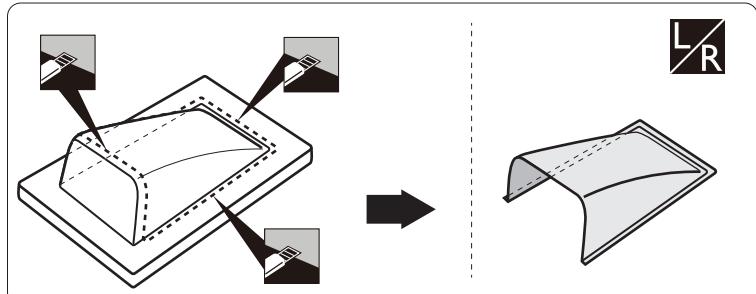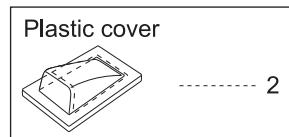**INSTALLING THE PLASTIC COVER**

► Do not overlook this symbol!

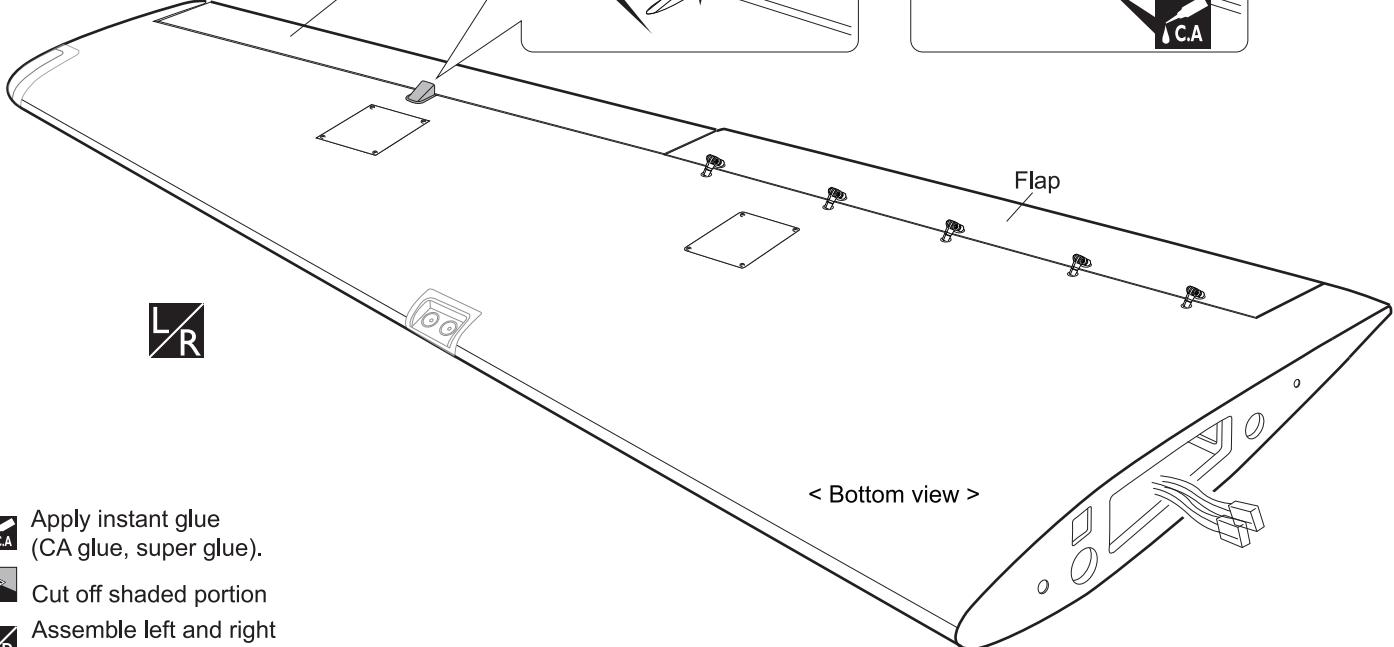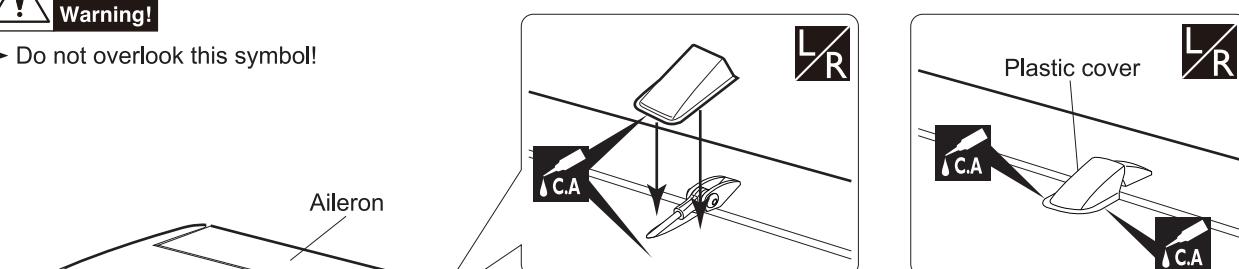

Apply instant glue (CA glue, super glue).


Cut off shaded portion




Assemble left and right sides the same way

**INSTALLING THE MAIN LANDING GEAR**


3 x 12mm Button Screw	4
3 x 10mm Button Screw	2
3mm Nylon Nut	4
3mm Washer	10

4x6mm Washer	4
#16A	2
Aluminum ball	4
3 x 25mm Push rod	4
	2

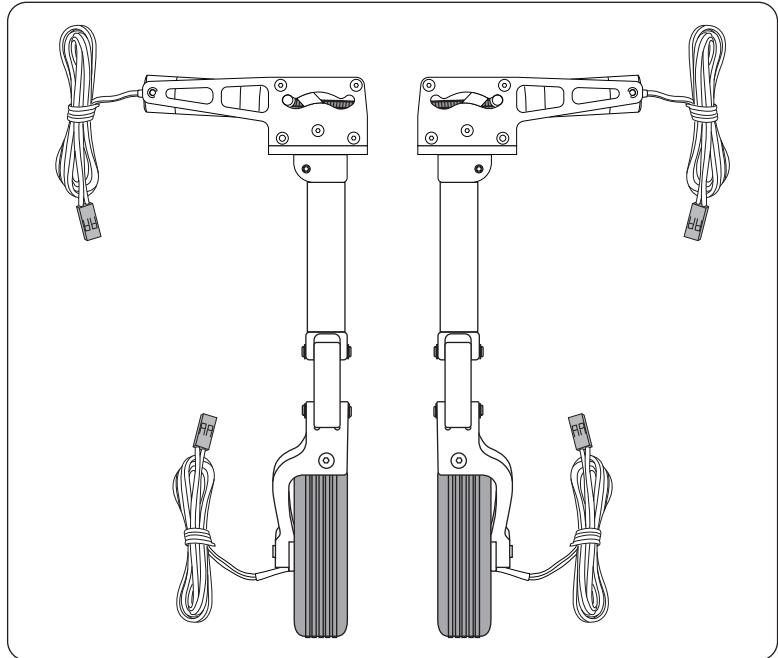

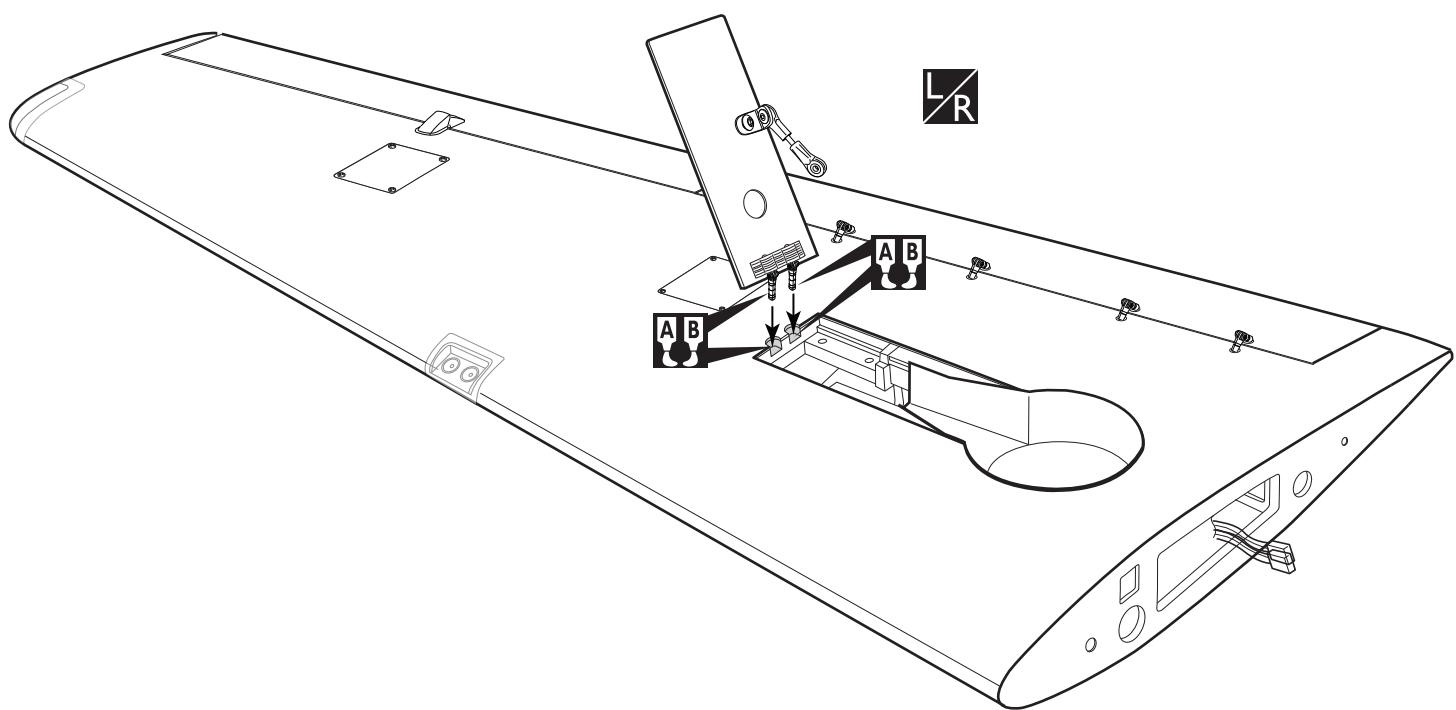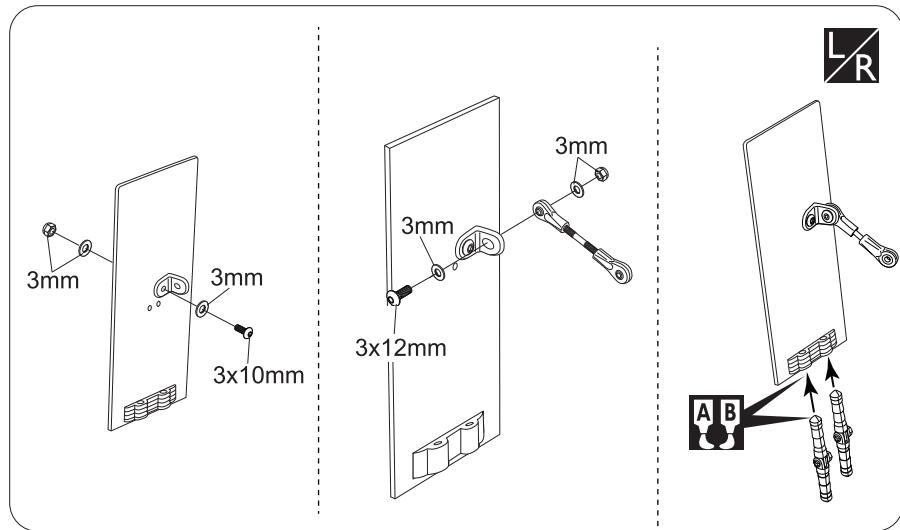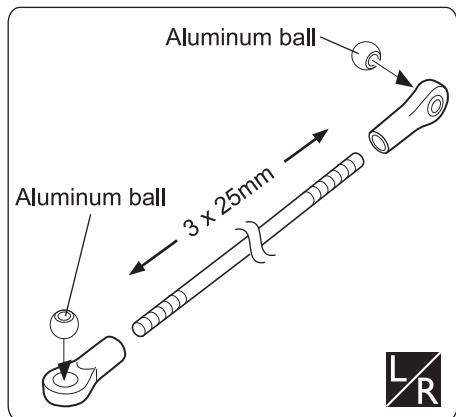



L/R

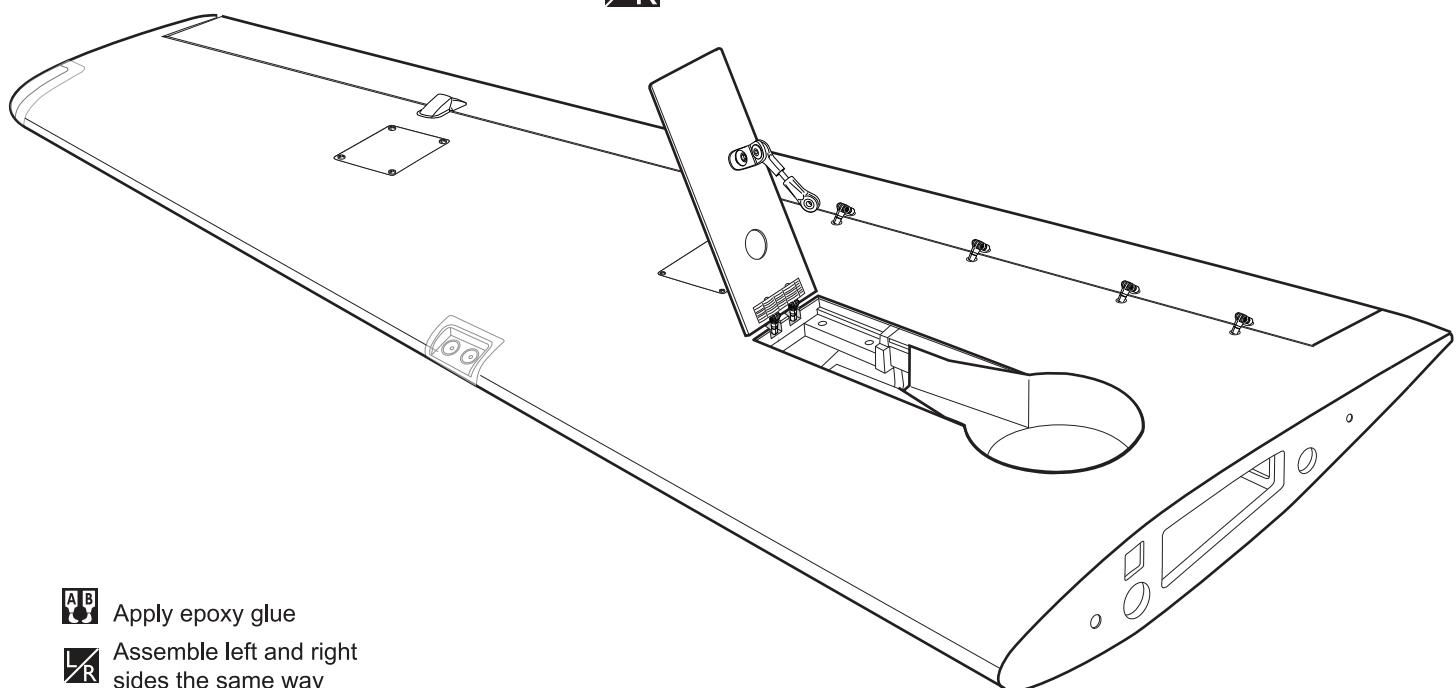

 Apply epoxy glue



 Assemble left and right sides the same way

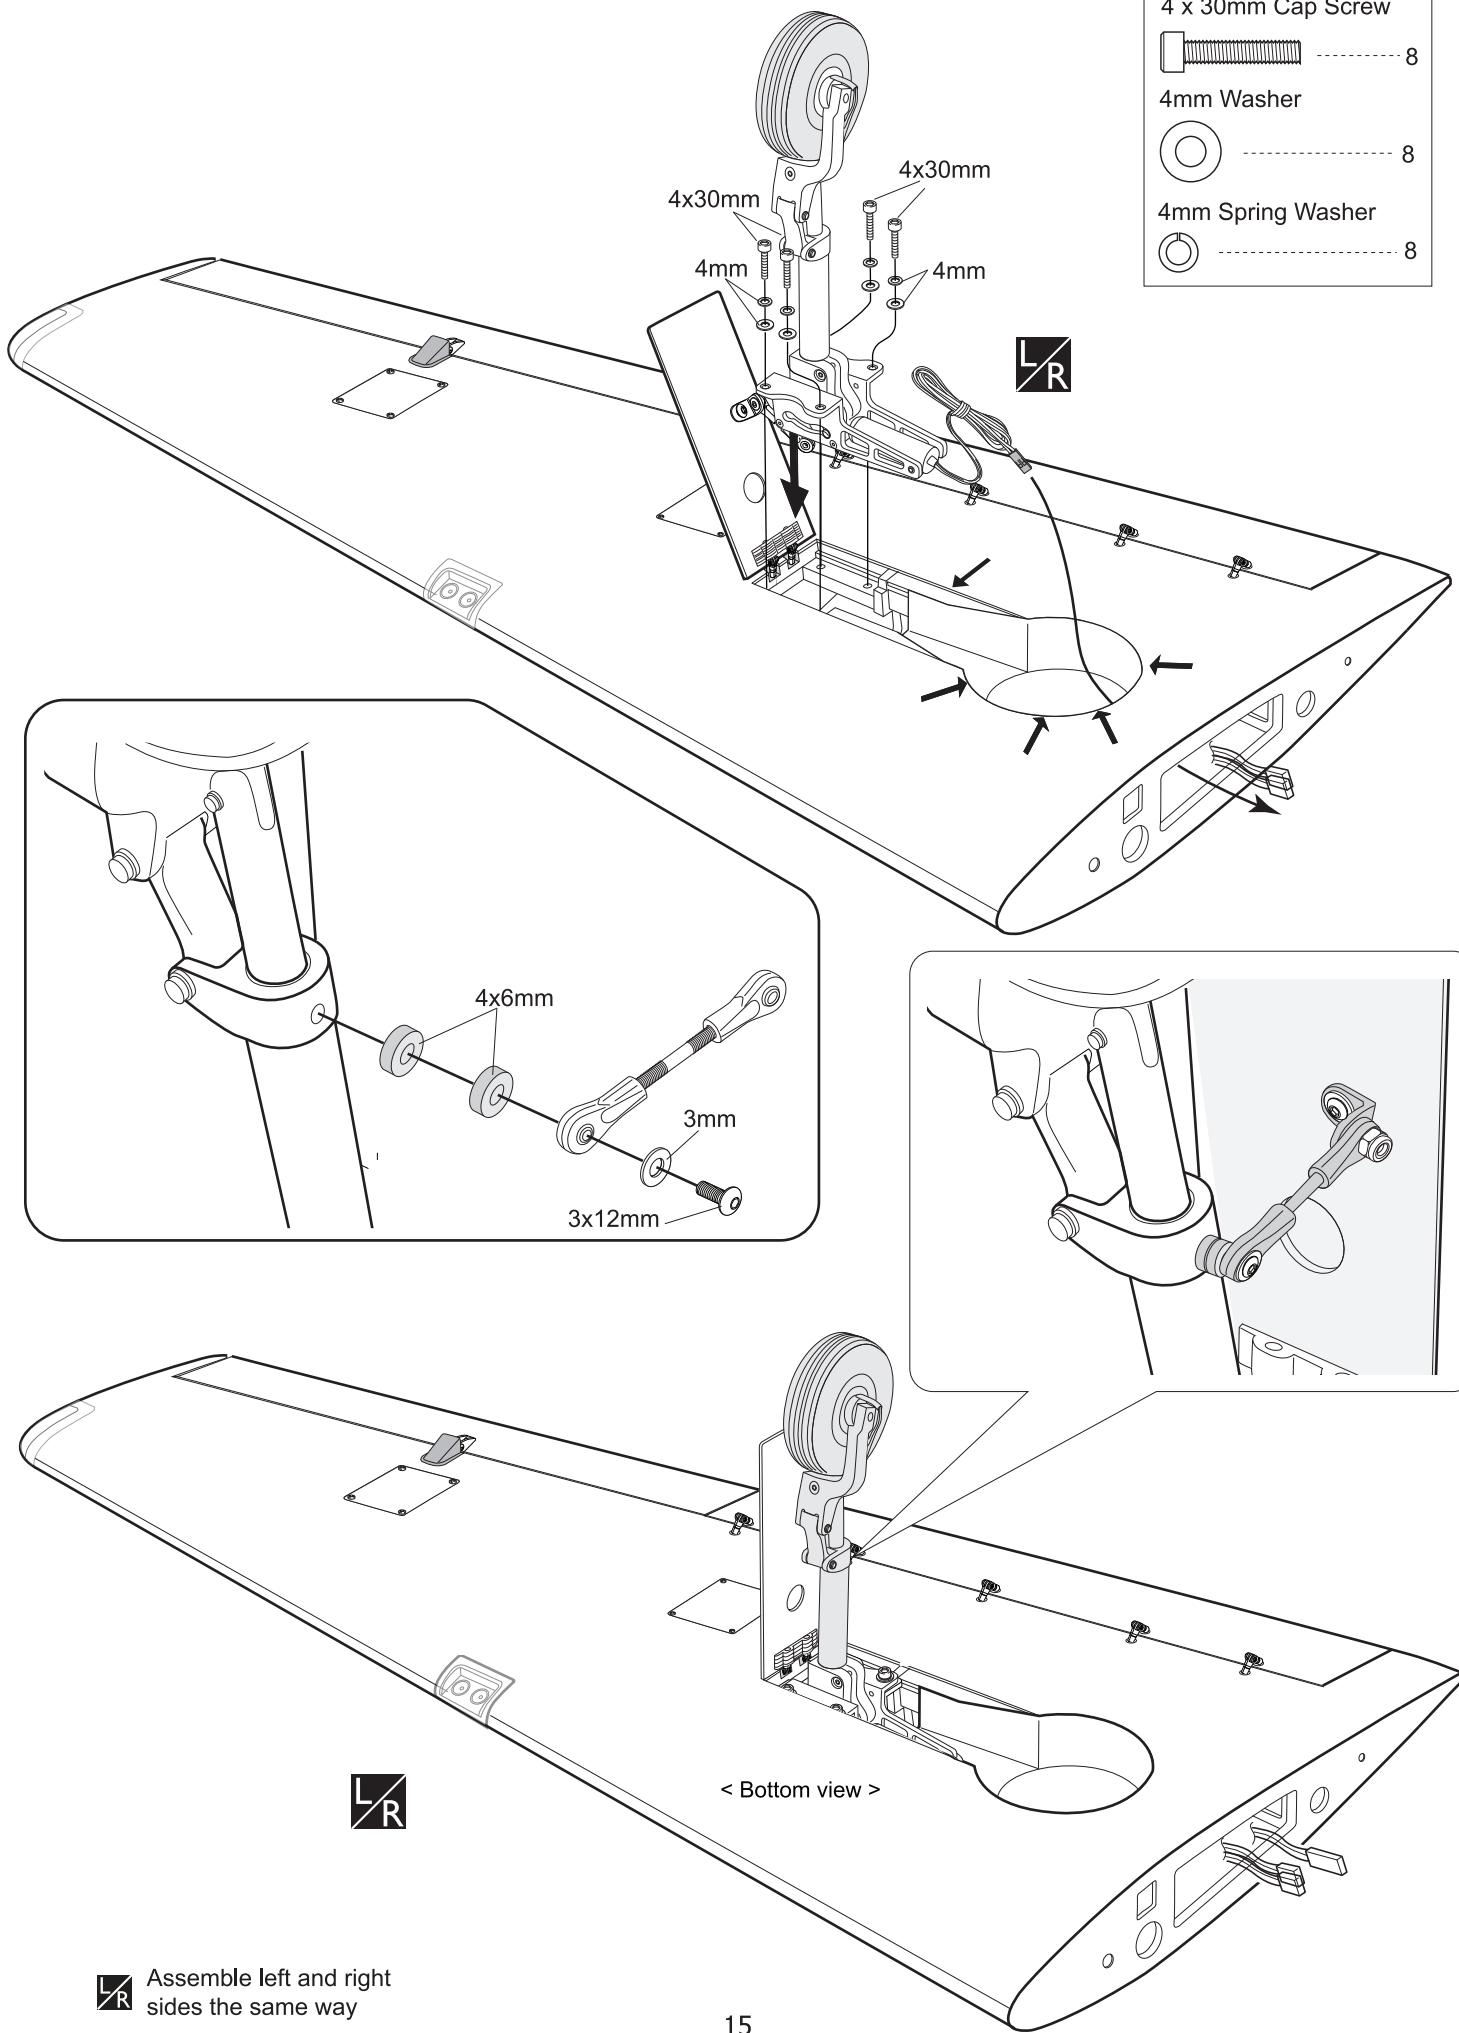

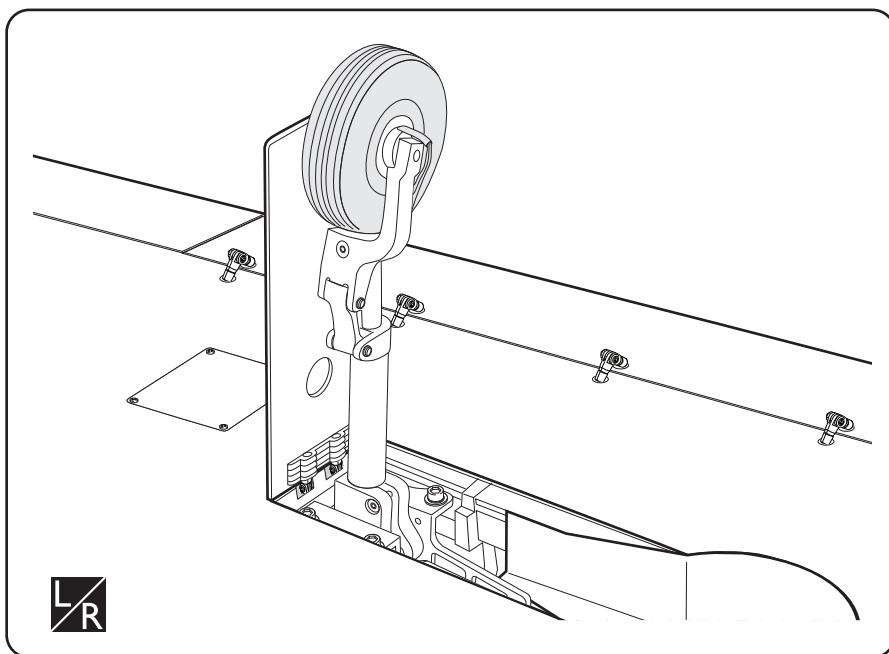


 Assemble left and right sides the same way

### ELECTRIC RETRACT SYSTEM

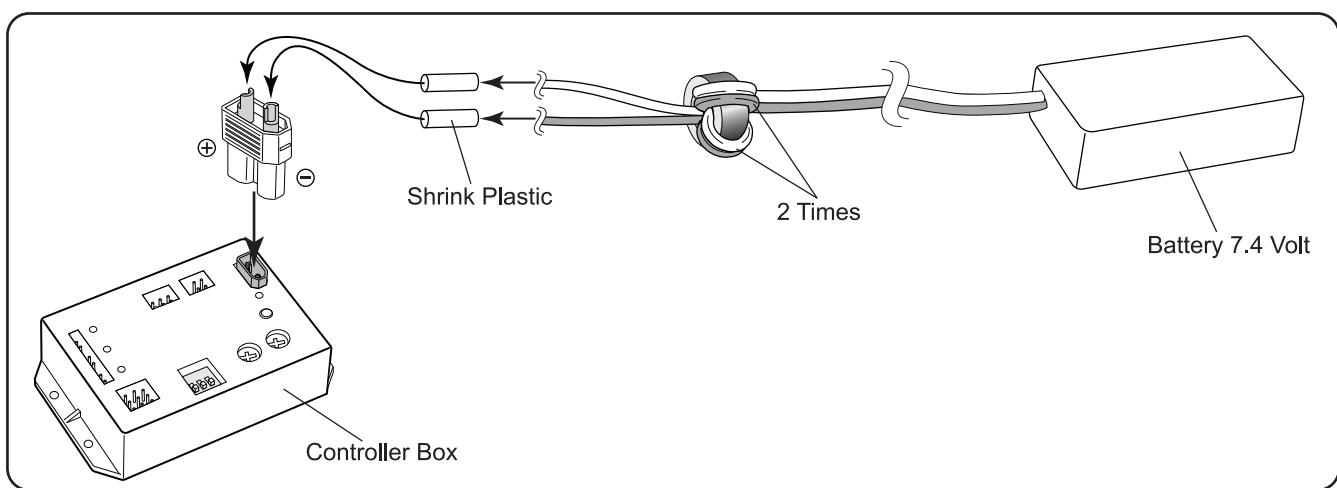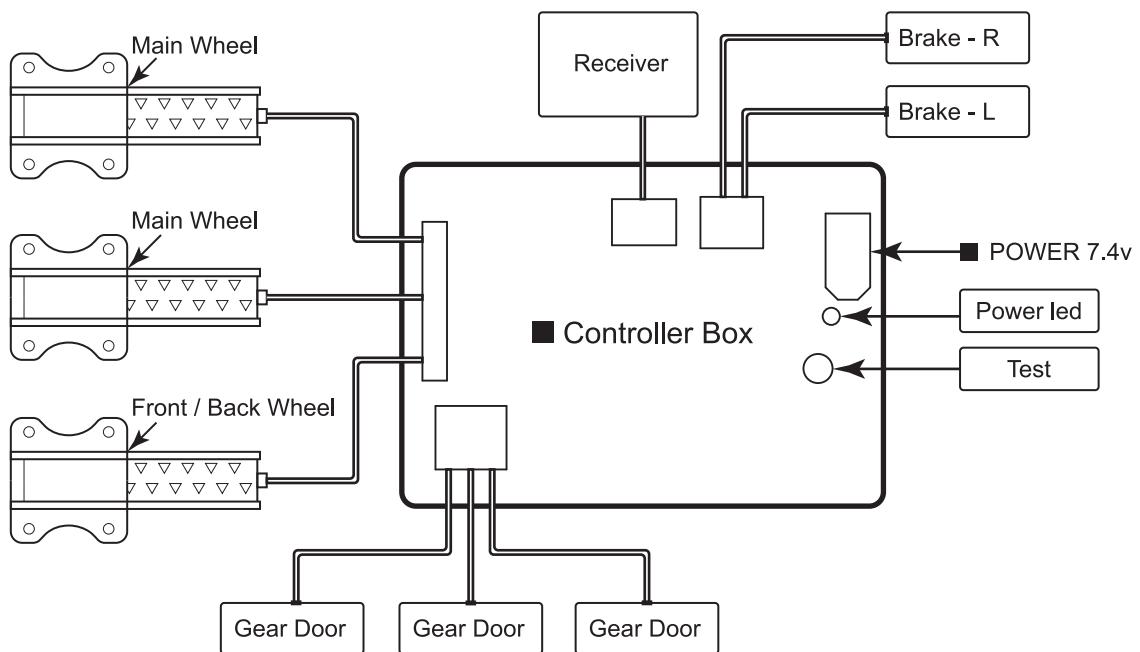

**JOINING THE FUSELAGE**

4 x 20mm Cap Screw



4

4mm Washer #2



4

4 x 10mm Button Screw



8

4mm Washer



8

Aluminum plate 2mm




2


Aluminum ( #8-6mm)



4

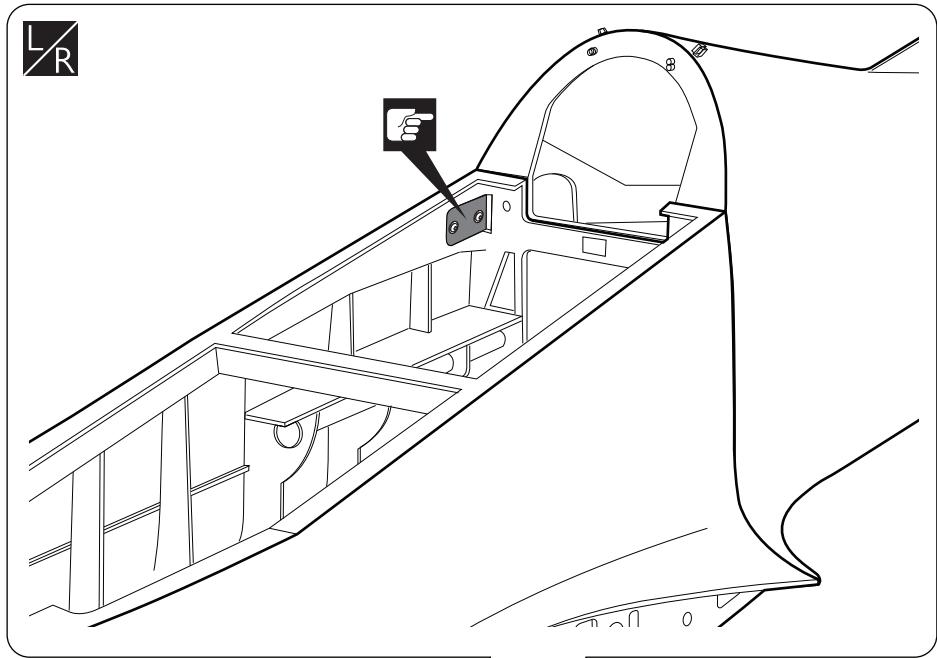

L/R

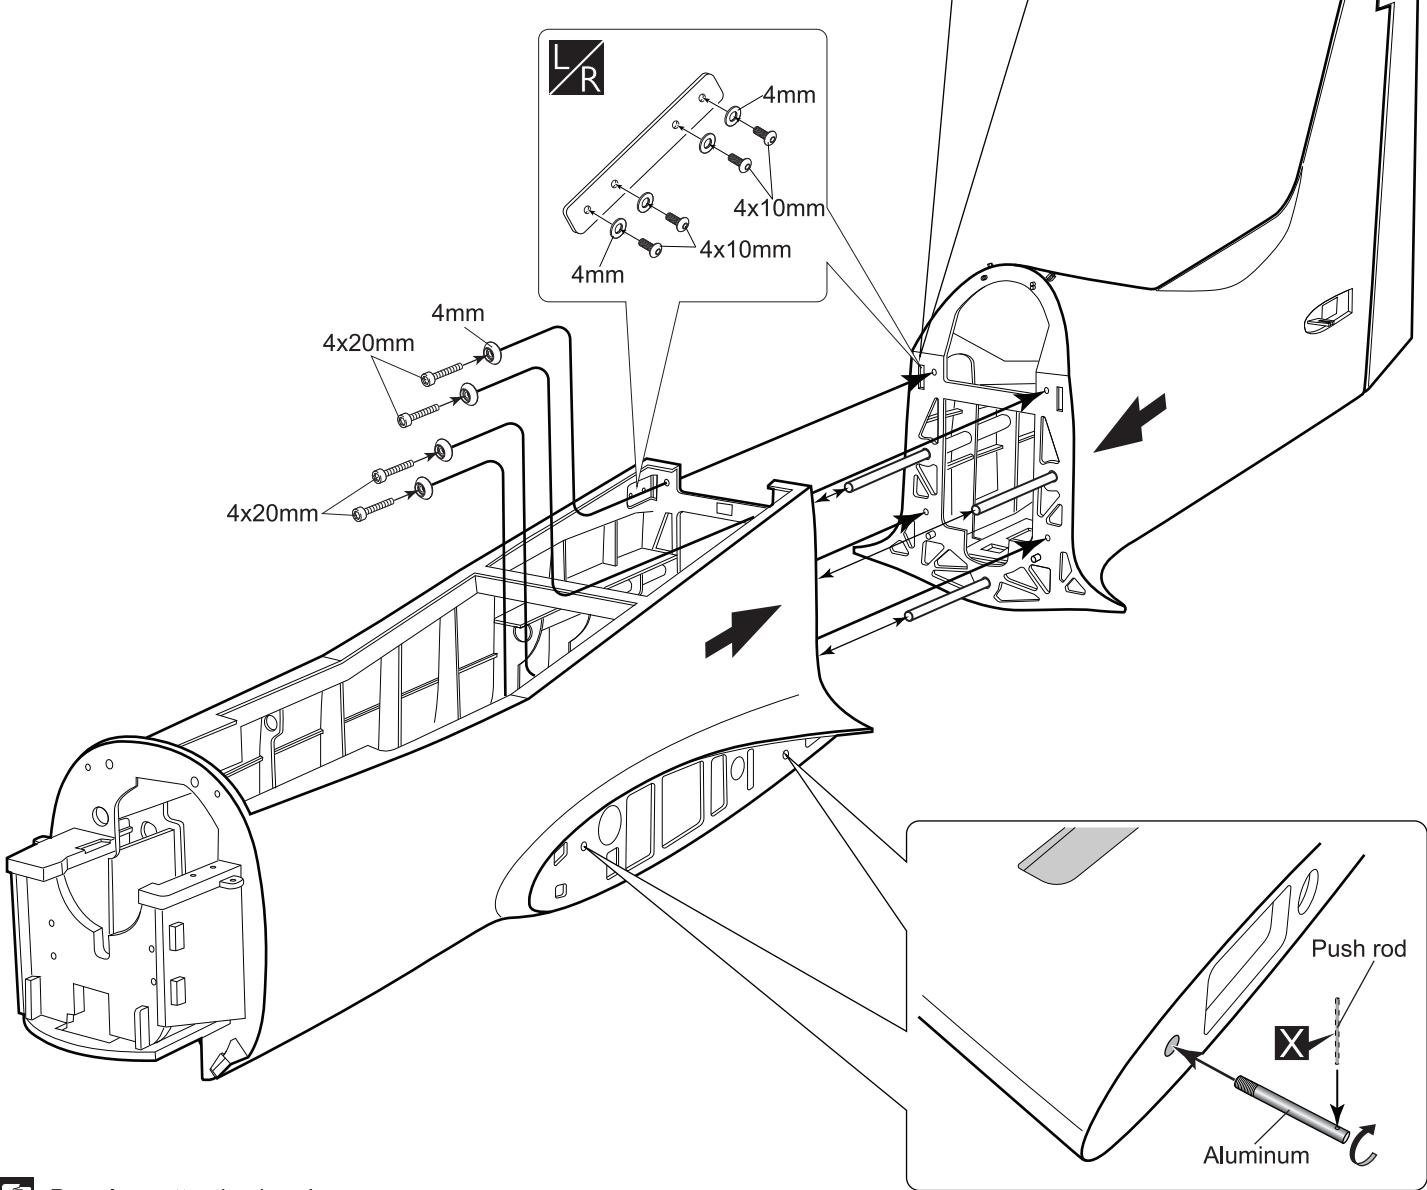


Pay close attention here!

Assemble left and right sides the same way

Must be purchased separately!






## INSTALLING THE ELEVATOR SERVO

1. Remove the covering from the horizontal stabilizer.
2. Install two servo to the horizontal stabilizer as shown.
3. Repeat these step as installing the aileron control horn.

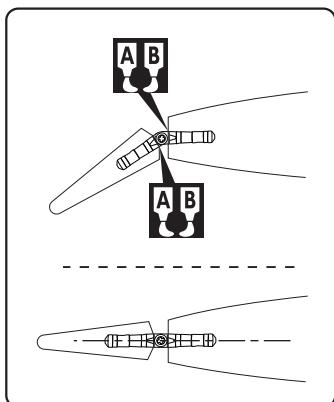

## INSTALLING THE ELEVATOR LINKAGES

. Repeat these step as installing the aileron linkages.

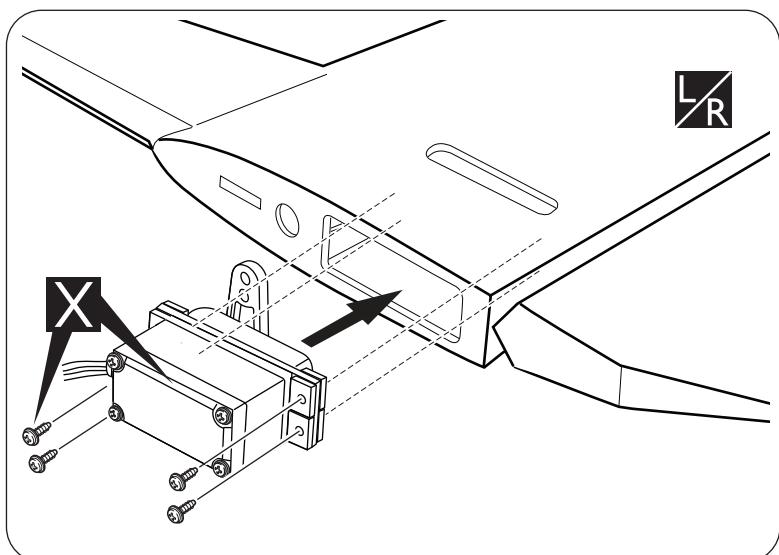
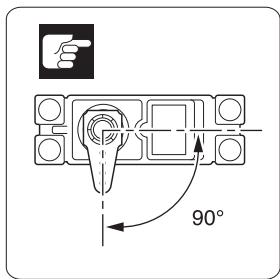
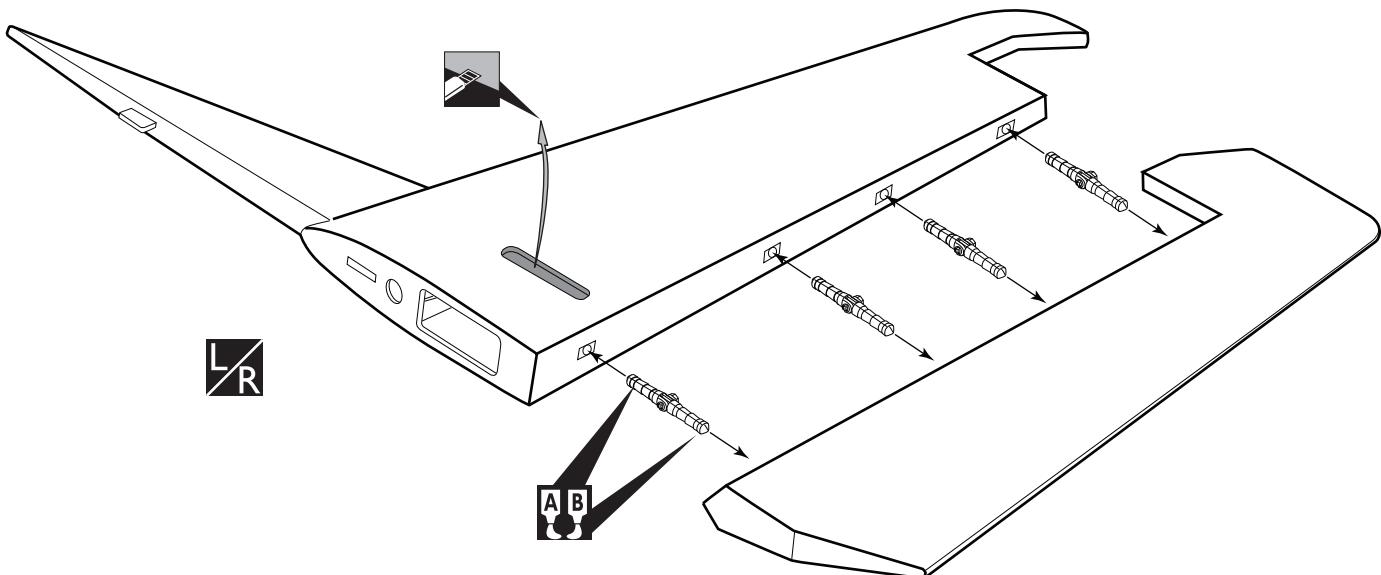
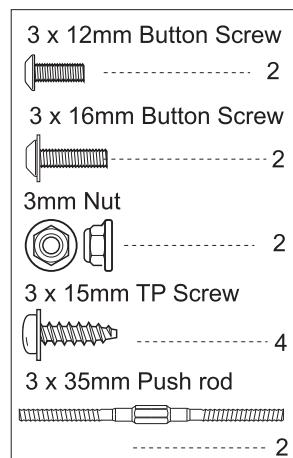
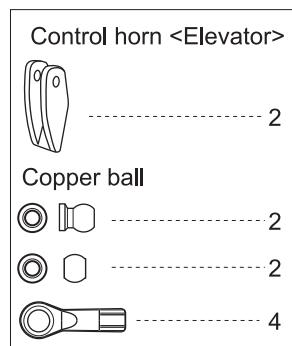


Apply epoxy glue




Assemble left and right sides the same way

Cut off shaded portion



Must be purchased separately!

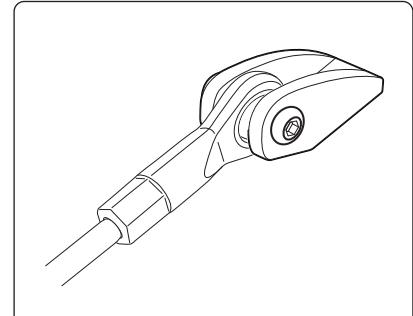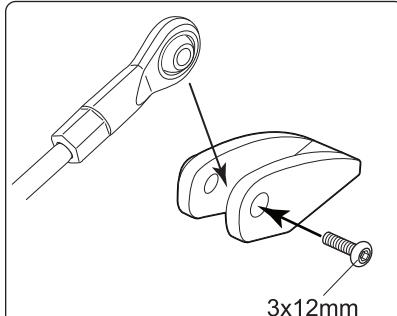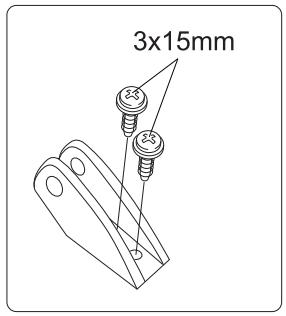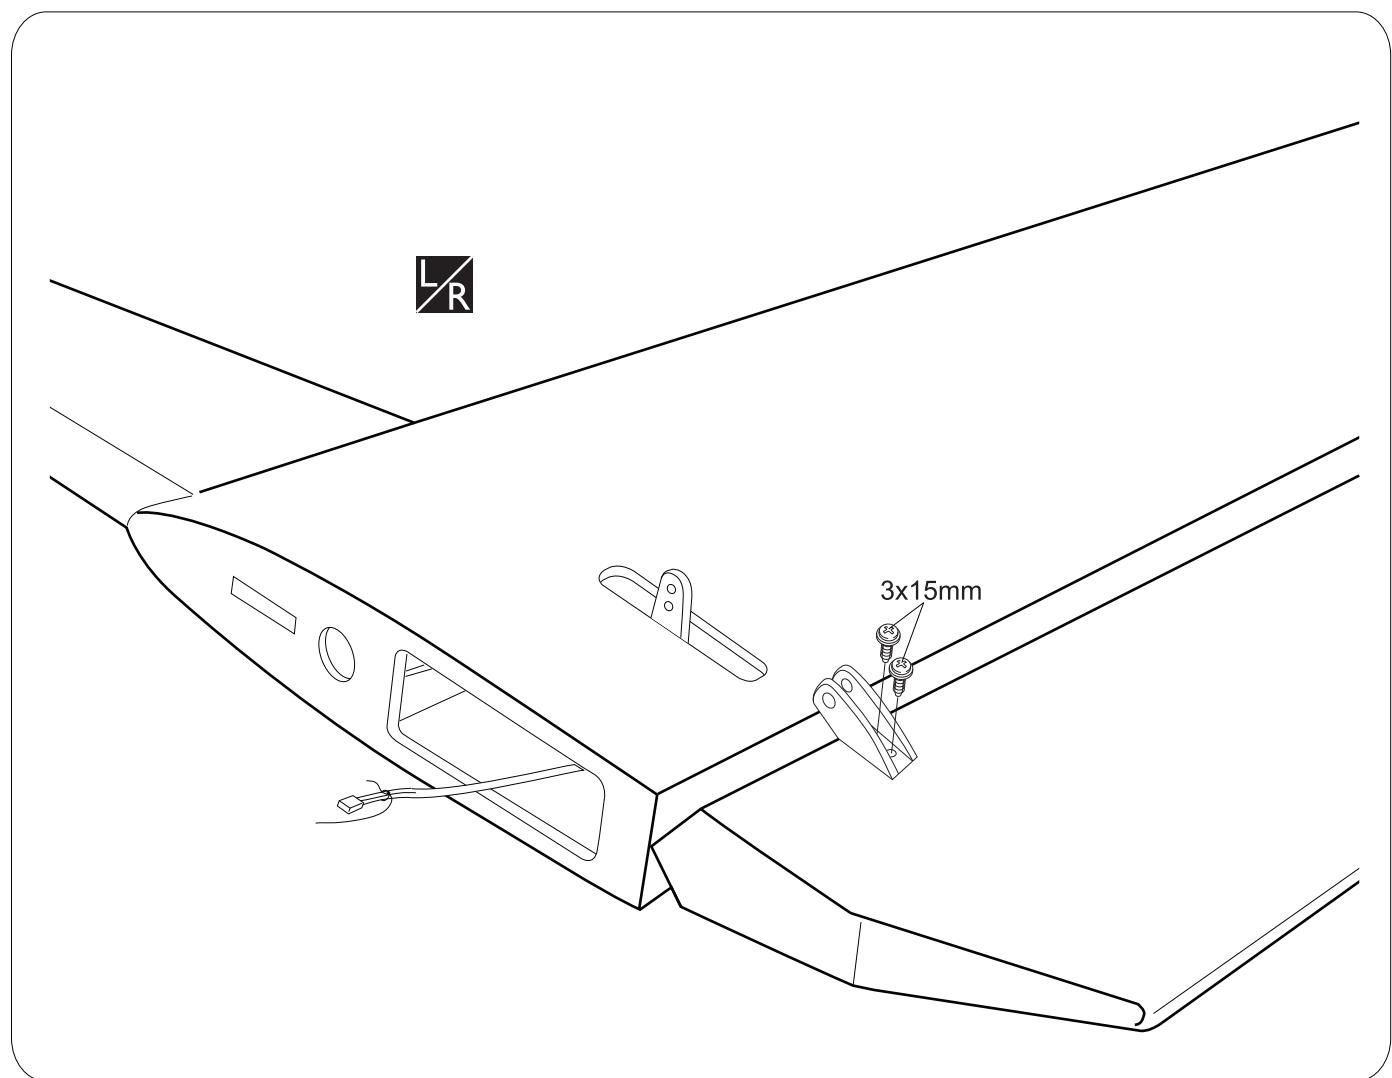
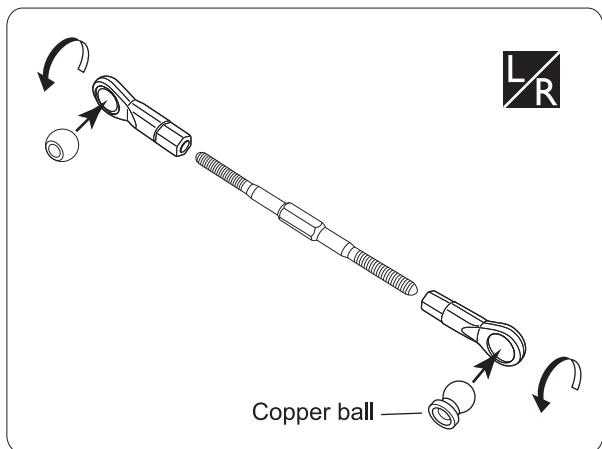


 Assemble left and right sides the same way



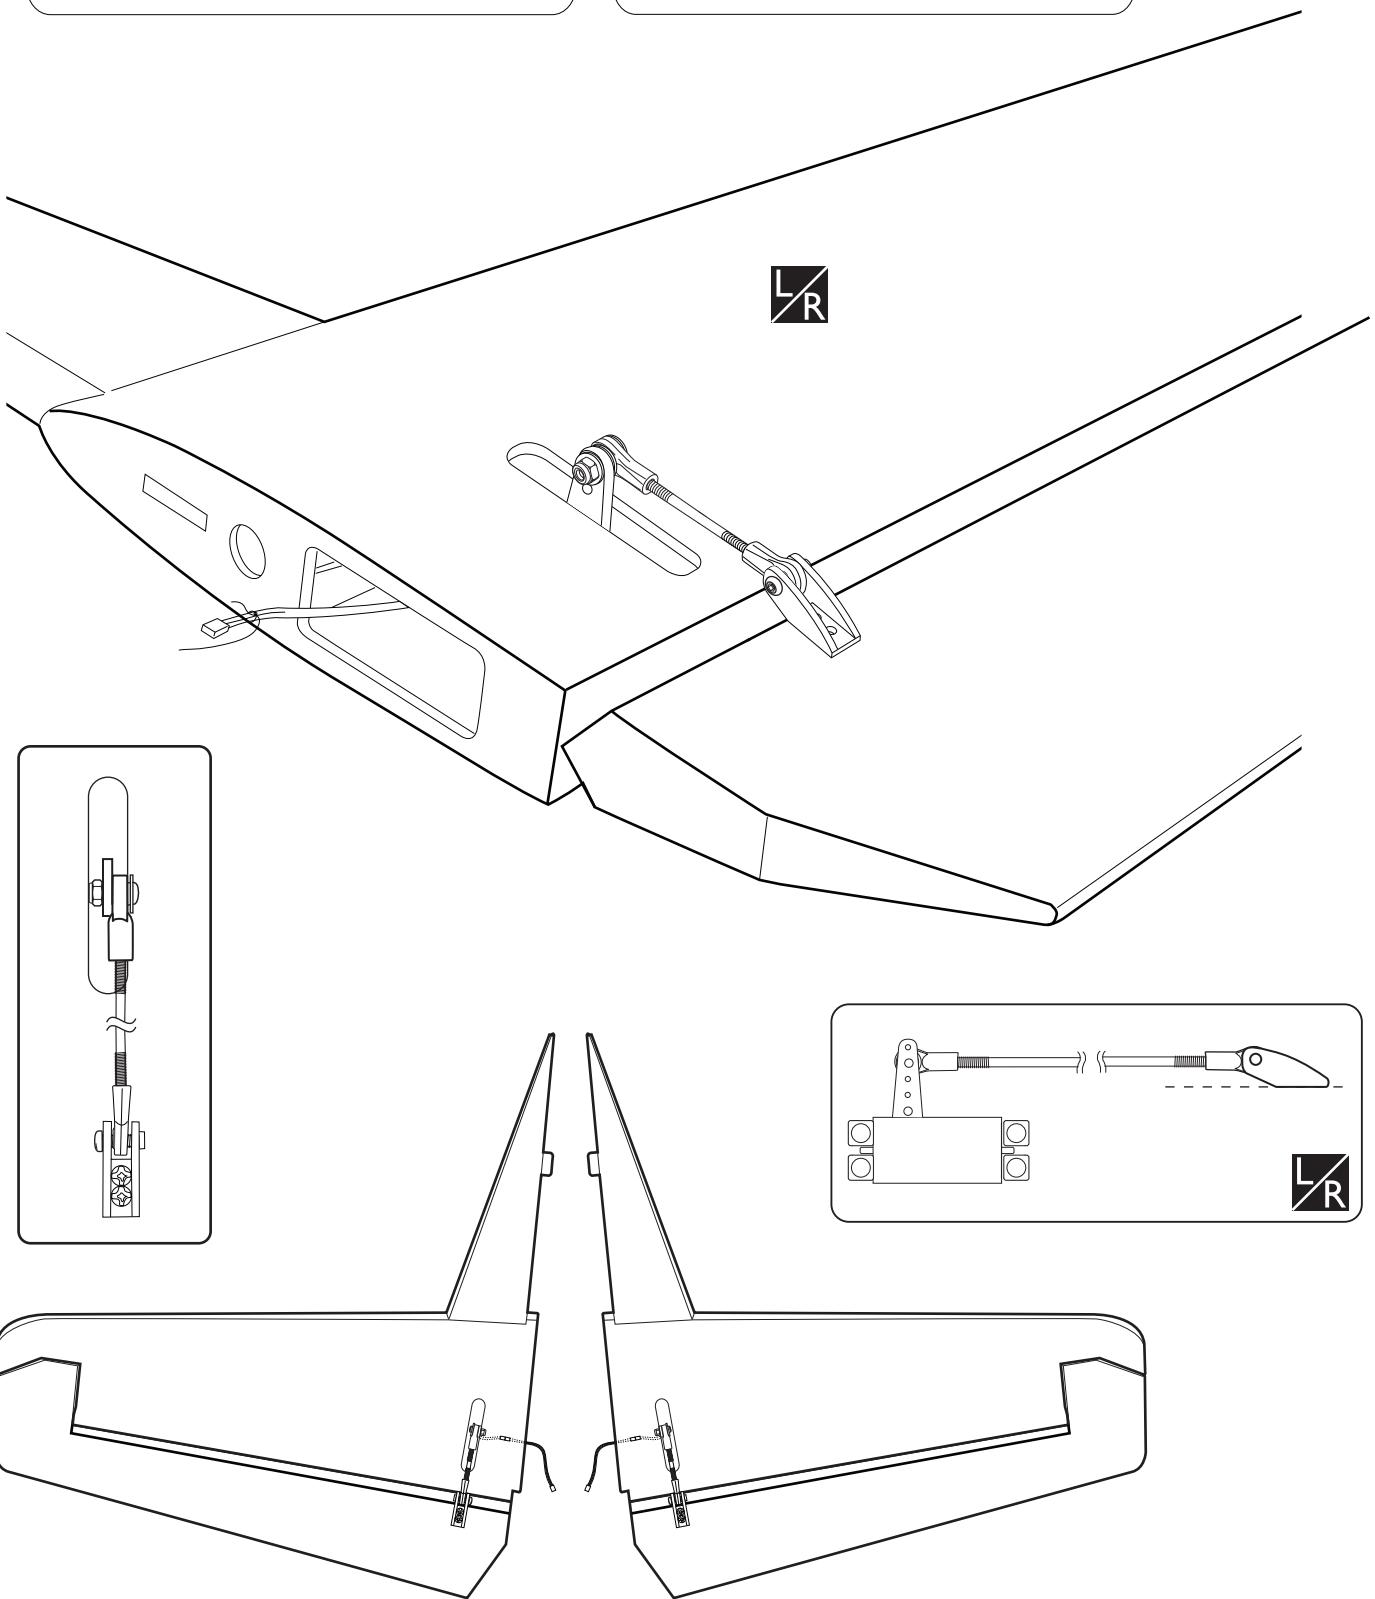
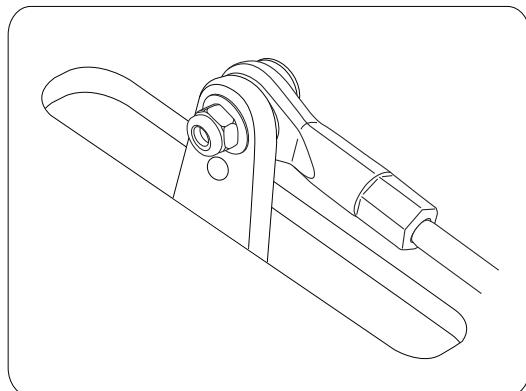
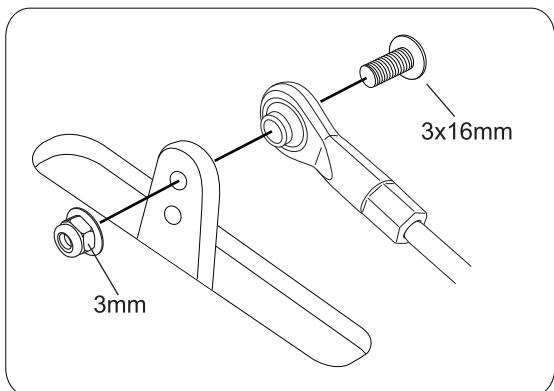


 Assemble left and right sides the same way



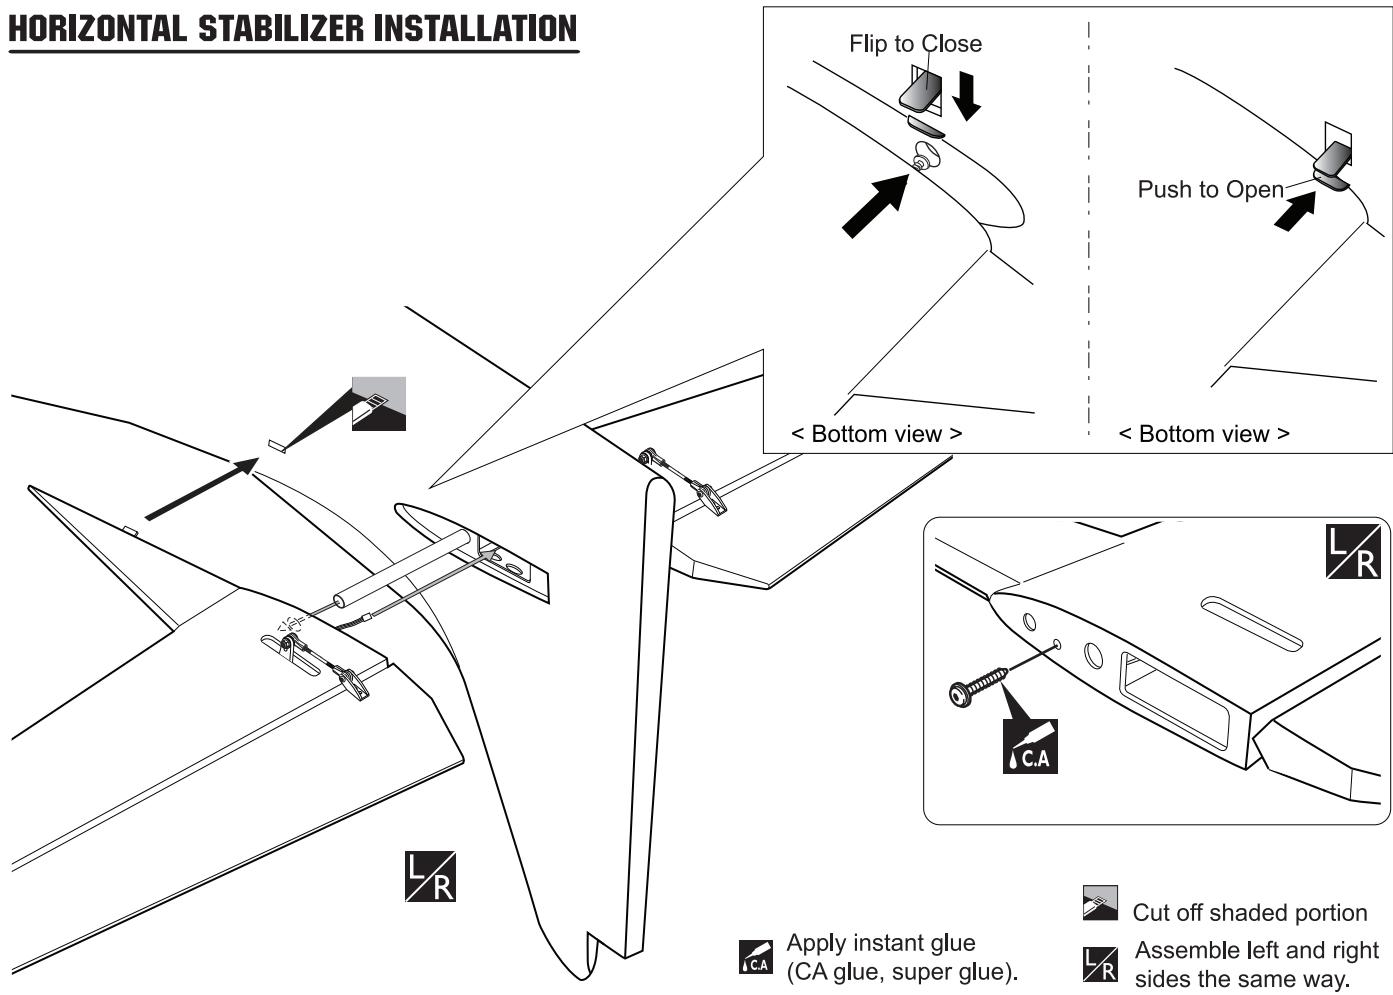
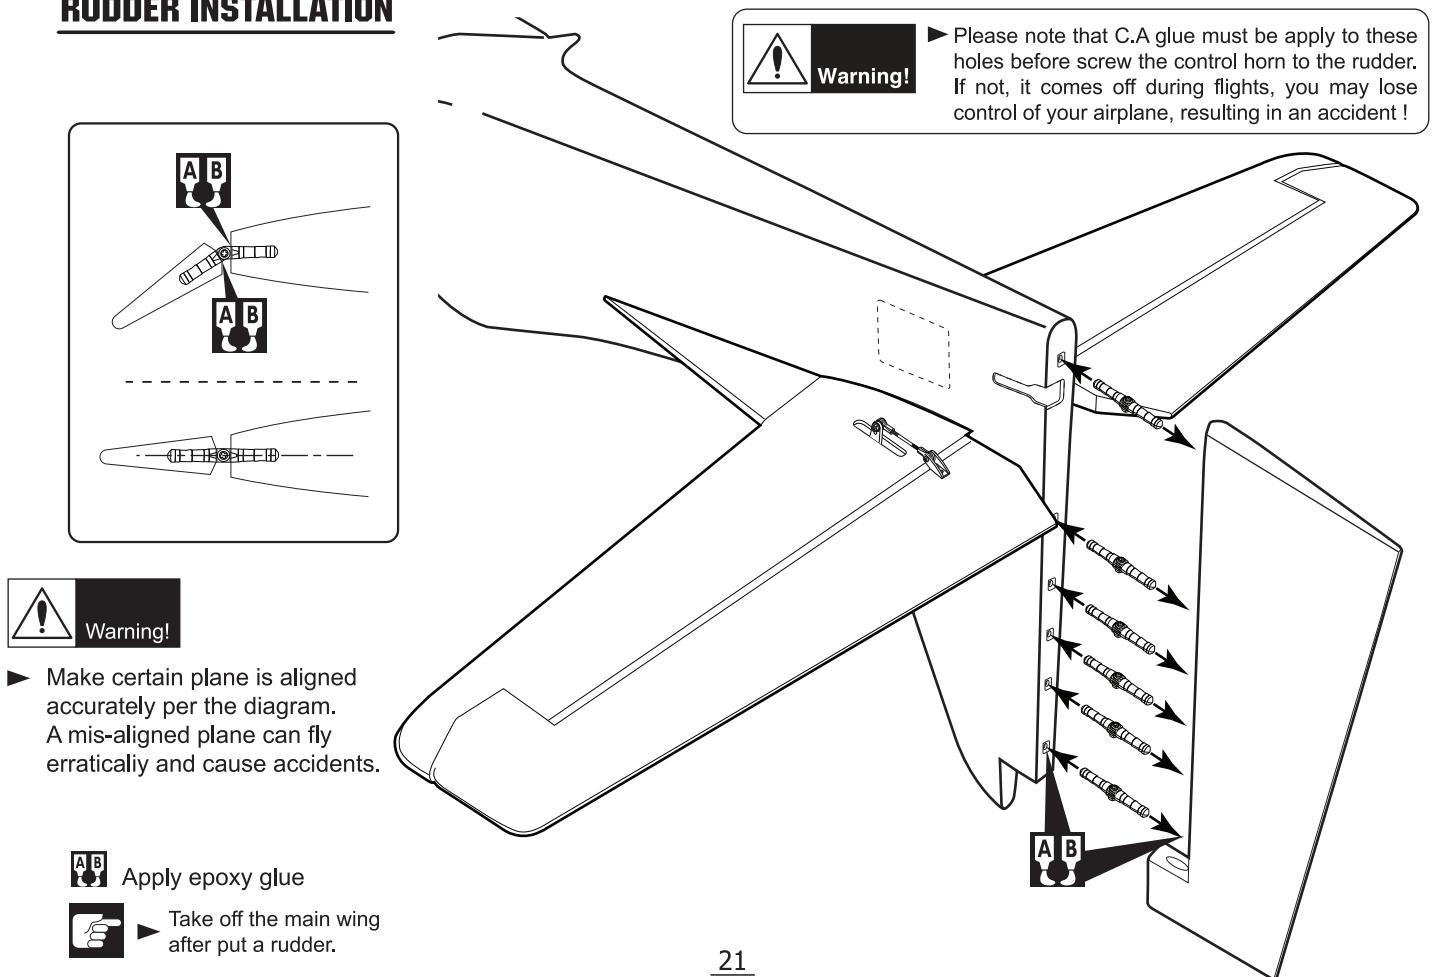
**HORIZONTAL STABILIZER INSTALLATION****RUDDER INSTALLATION**

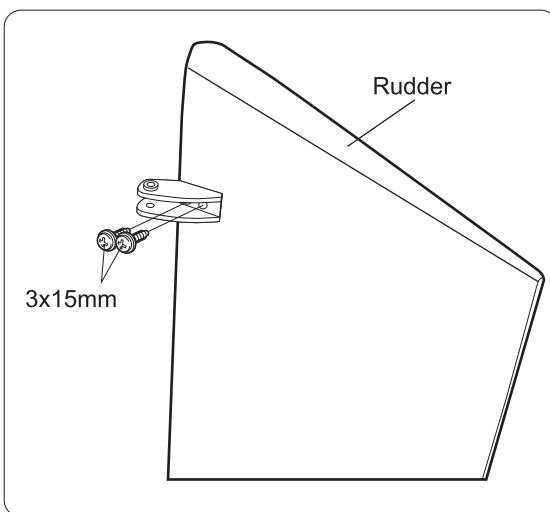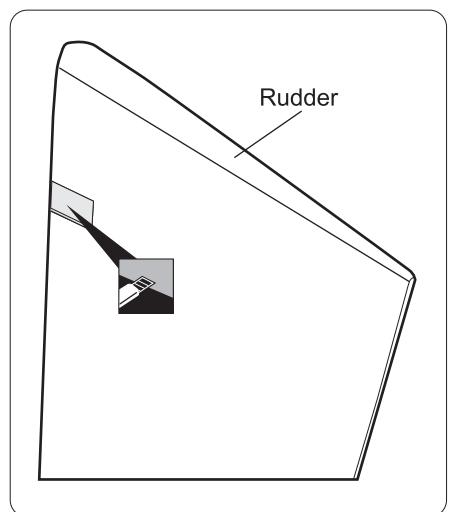**INSTALLING THE RUDDER PUSHROD**

	1
3 x 12mm Button Screw	1
	1
3 x 16mm Button Screw	1
	1
Copper ball	1
	1
	1
	2
3mm Nut	2
	1
3 x 15mm TP Screw	1
	2
3 x 100mm Push rod	2
	1
2 x 10mm TP Screw	4

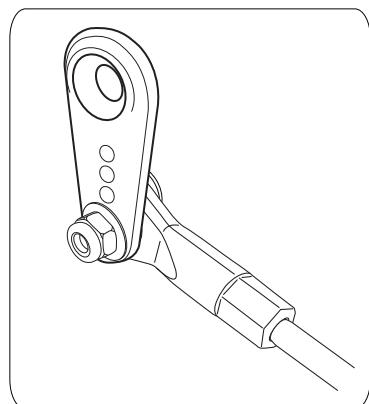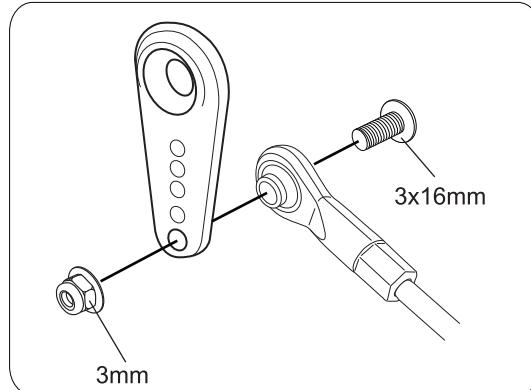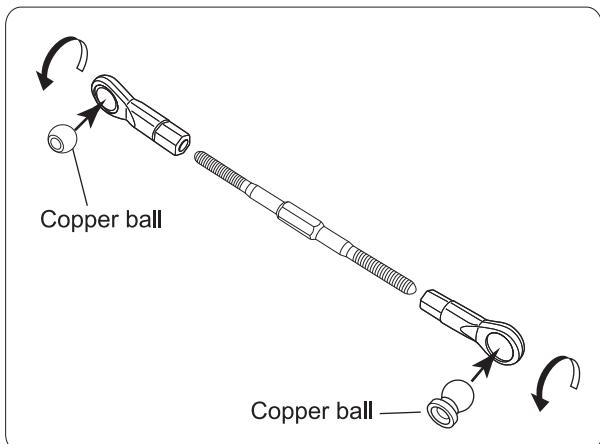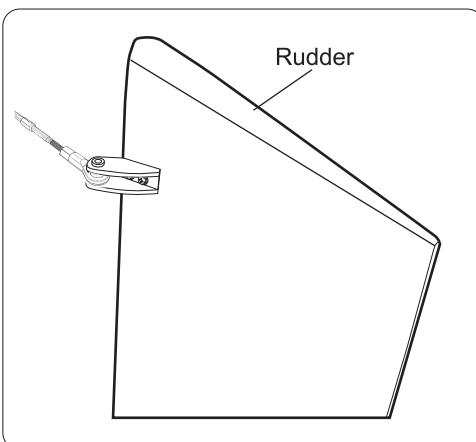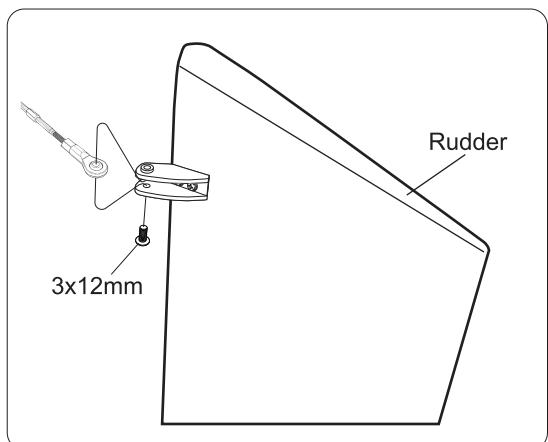


Cut off shaded portion

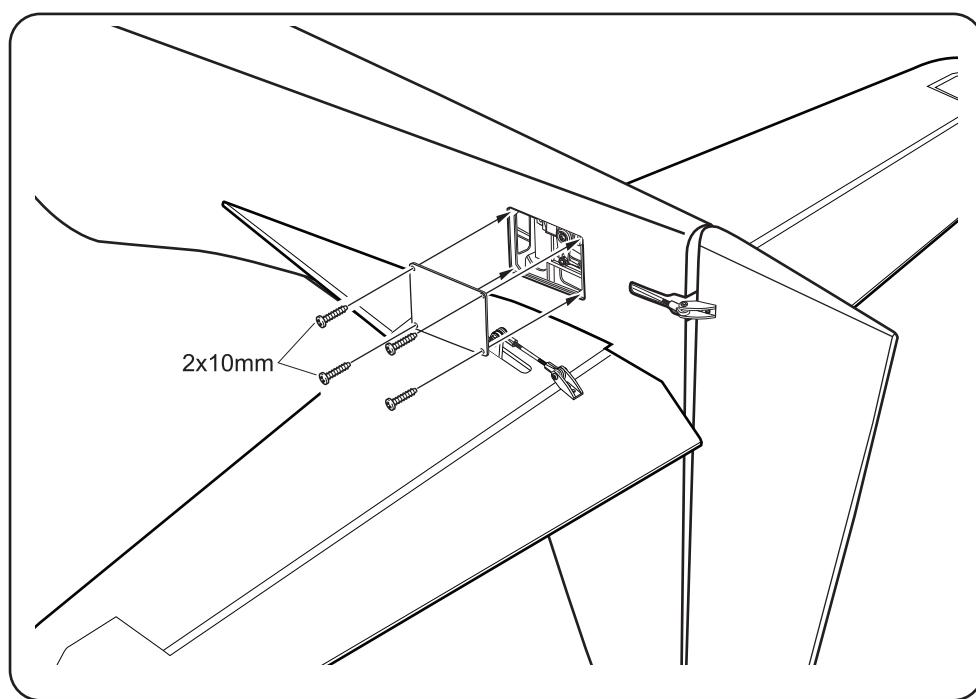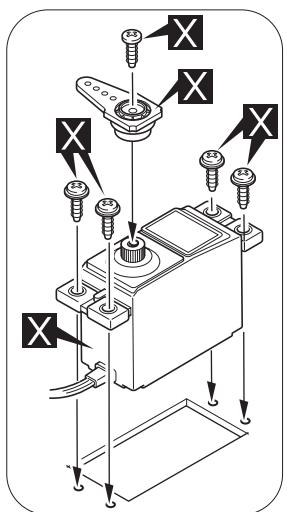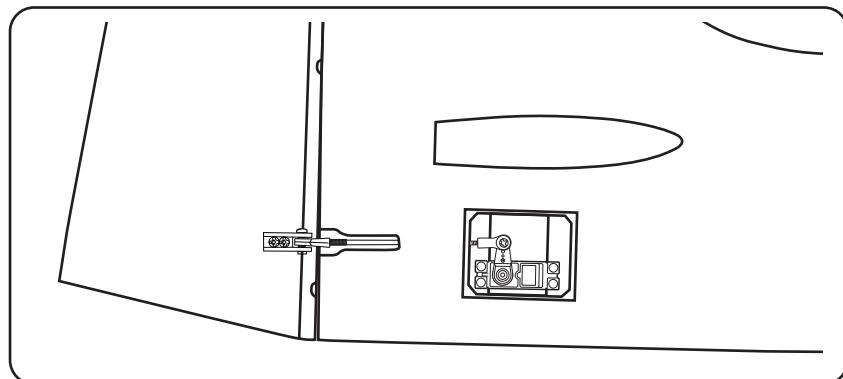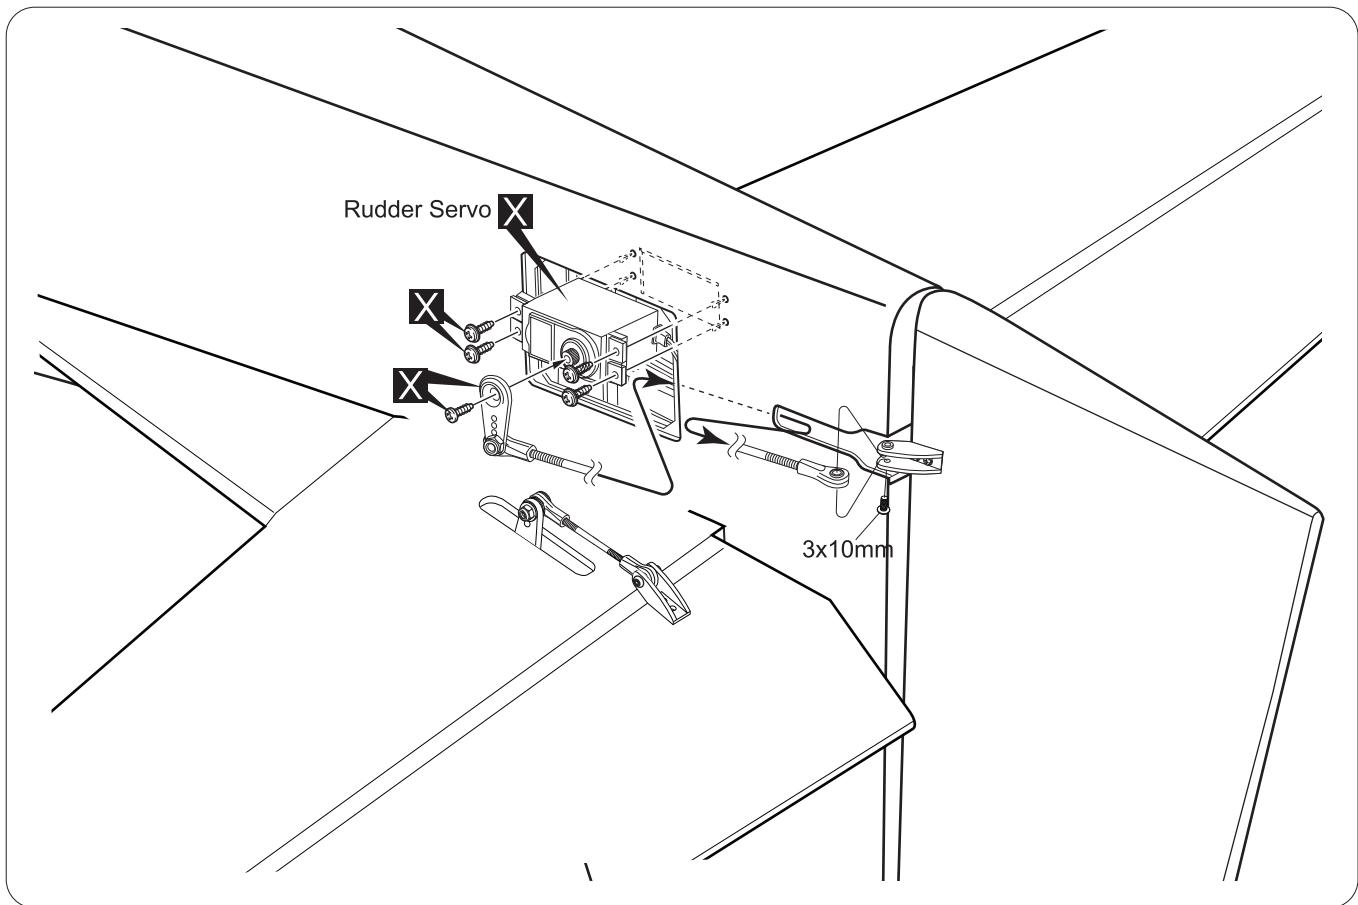


**X** Must be purchased  
separately!

**INSTALLING THE NAVIGATION GEAR LIGHT**


\* GEAR LIGHT NOT INCLUDED (MUST BE PURCHASE SEPARATELY):

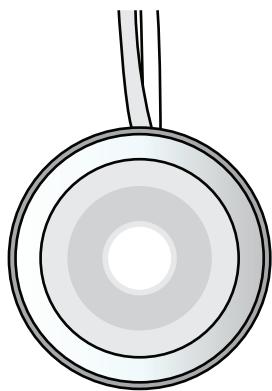




&lt; Top View &gt;

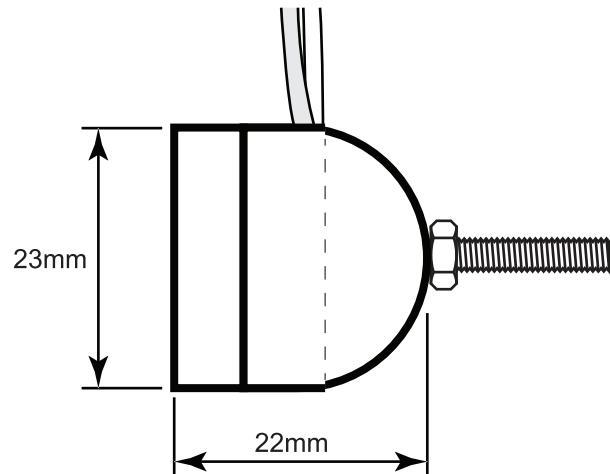


&lt; Left View &gt;

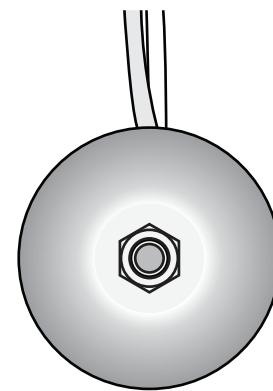





&lt; Bottom View &gt;

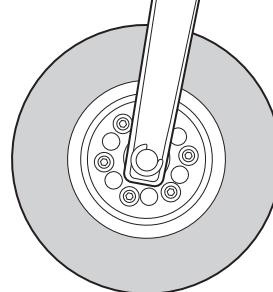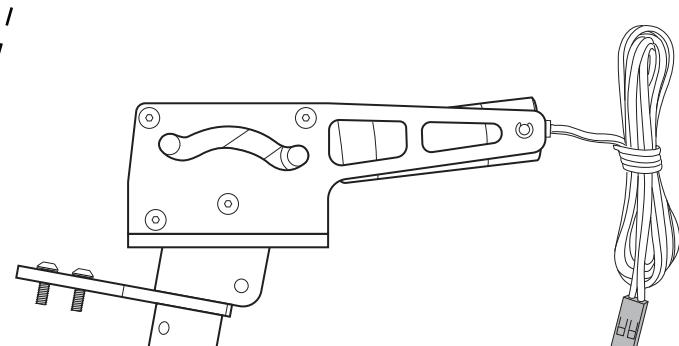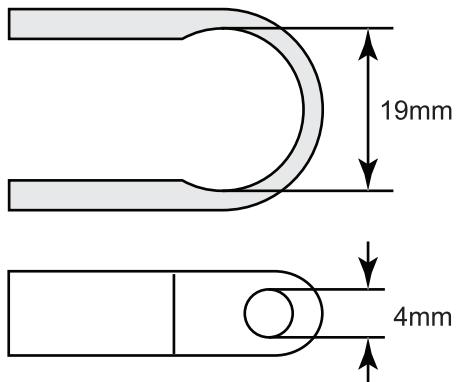

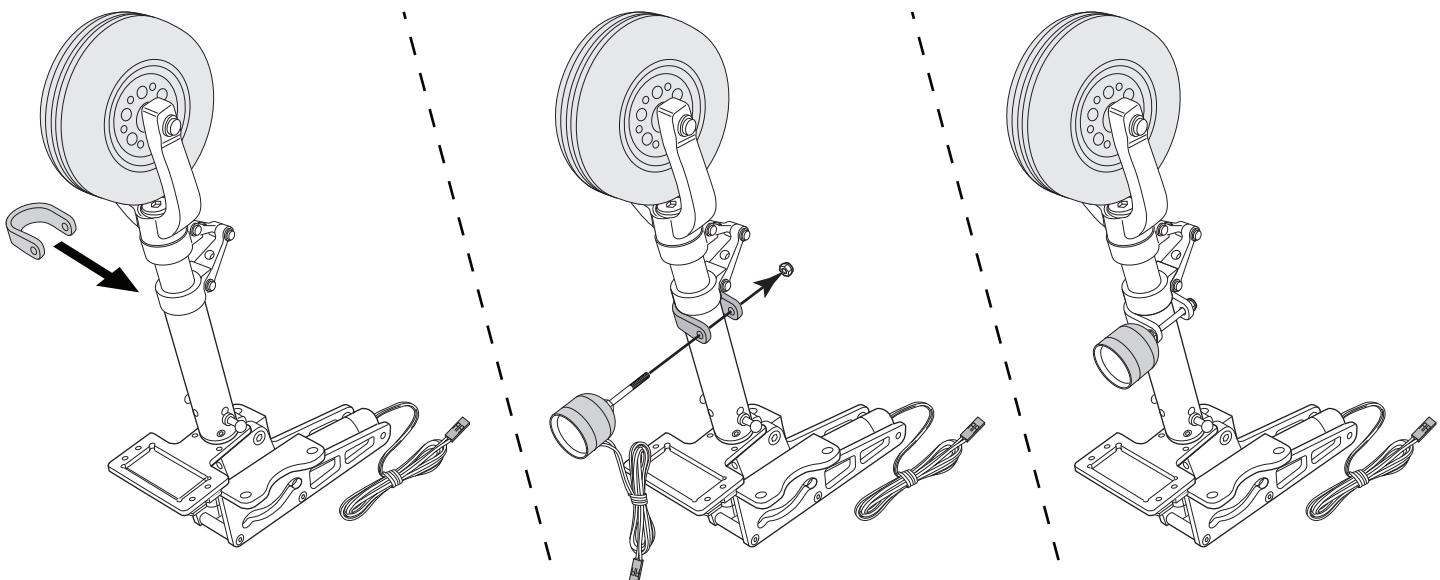




3 x 12mm Button Screw	1
3mm Nylon Nut	1
3mm Washer	1
3mm	1

Aluminum ball	1
2	1
3 x 20mm Push rod	1

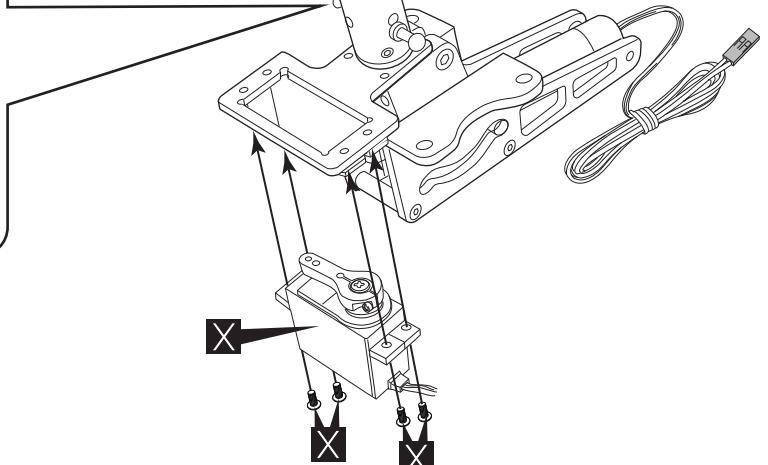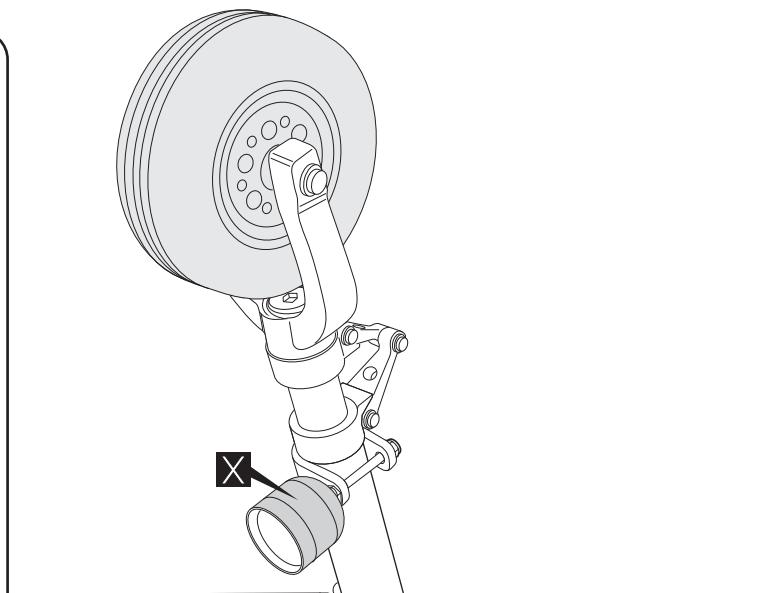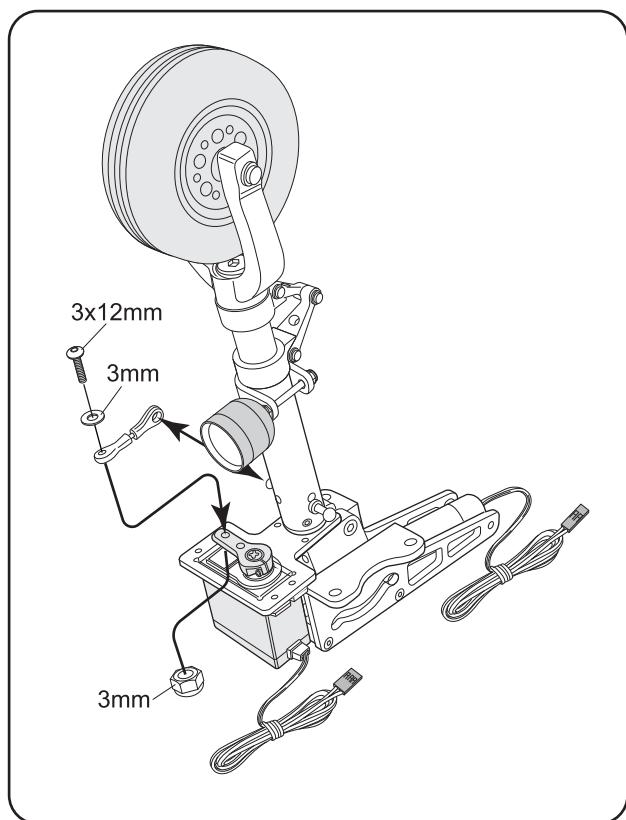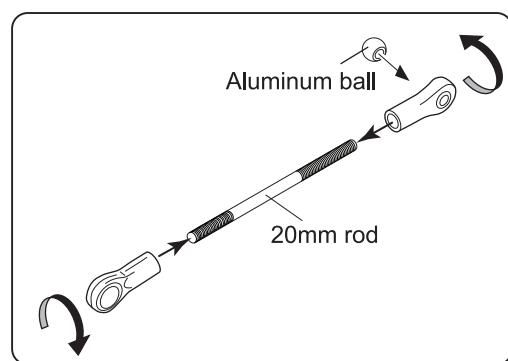

Must be purchased separately!

## INSTALLING THE NOSE GEAR RETRACT

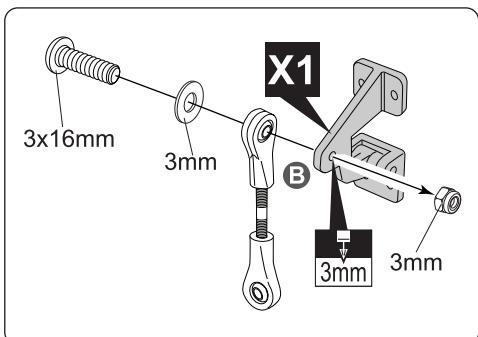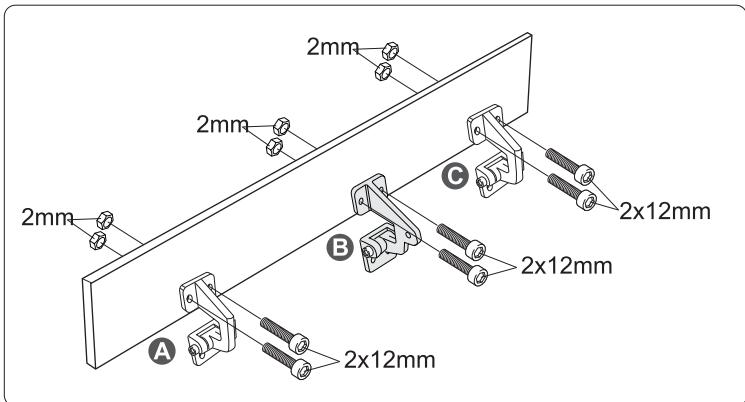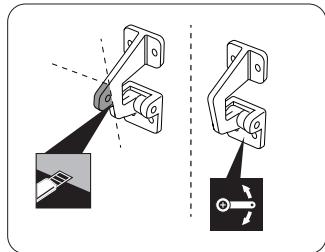

## Plastic Hinges (#8)



2 x 13mm TP Screw  
12

2 x 12mm Cap Screw  
12

2mm Nut  
12

6 x 120mm Aluminum  
1

Aluminum ball  
6

3 x 50mm Push rod  
1

3 x 16mm Button Screw  
6

3mm Nylon Nut  
6

3mm Washer  
12

3 x 12mm Button Screw  
4

3 x 15mm TP Screw  
4

4 x 6mm Button Screw  
4


2 x 12mm Cap Screw  
2

2mm Nut  
2

6 x 120mm Aluminum  
1

3 x 50mm Push rod  
2

3 x 85mm Push rod  
2

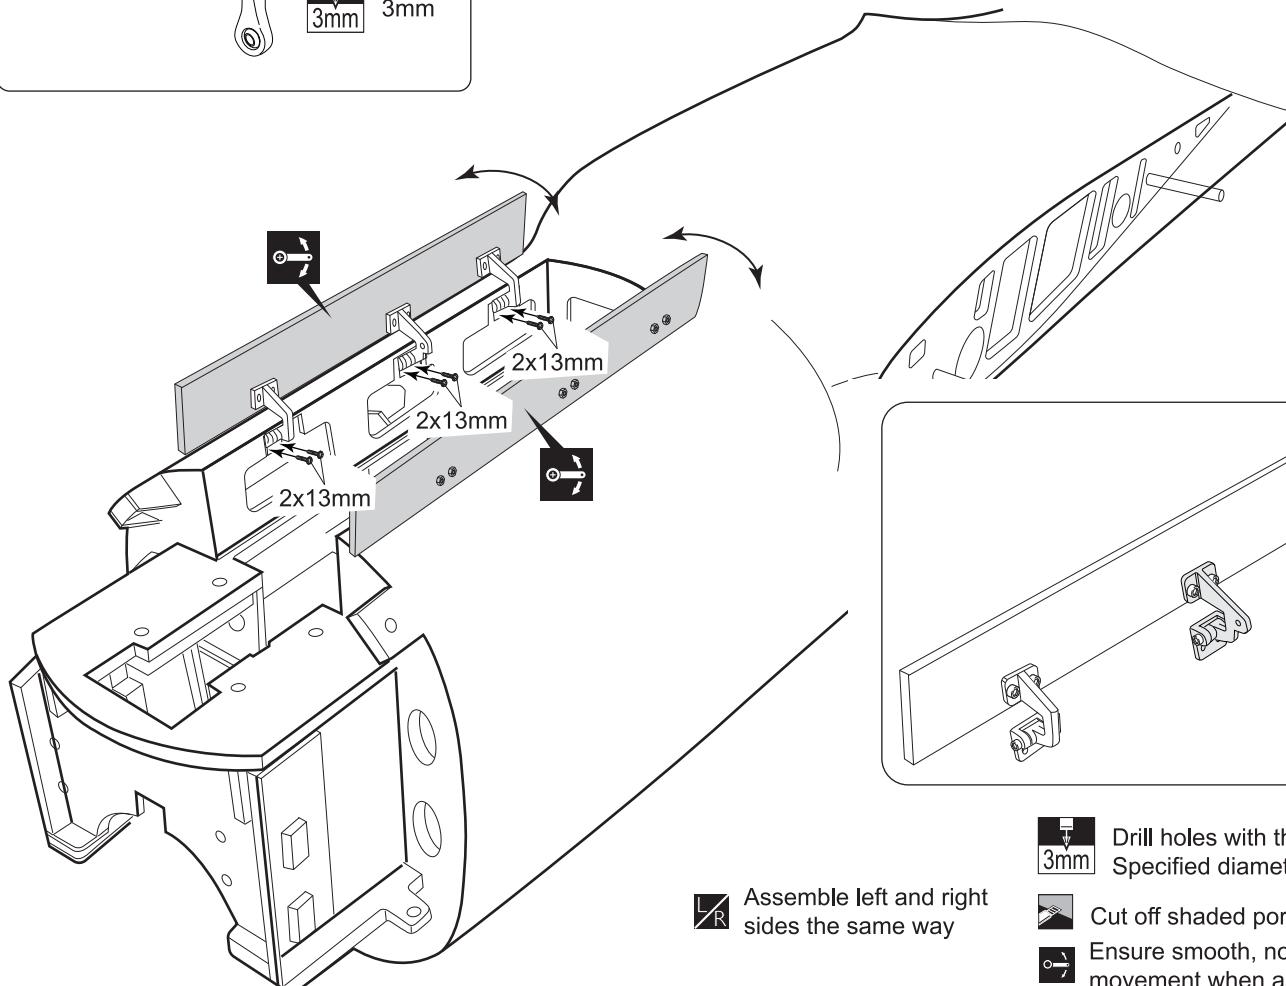




Drill holes with the  
Specified diameter.



Cut off shaded portion






Ensure smooth, non-binding  
movement when assembling.

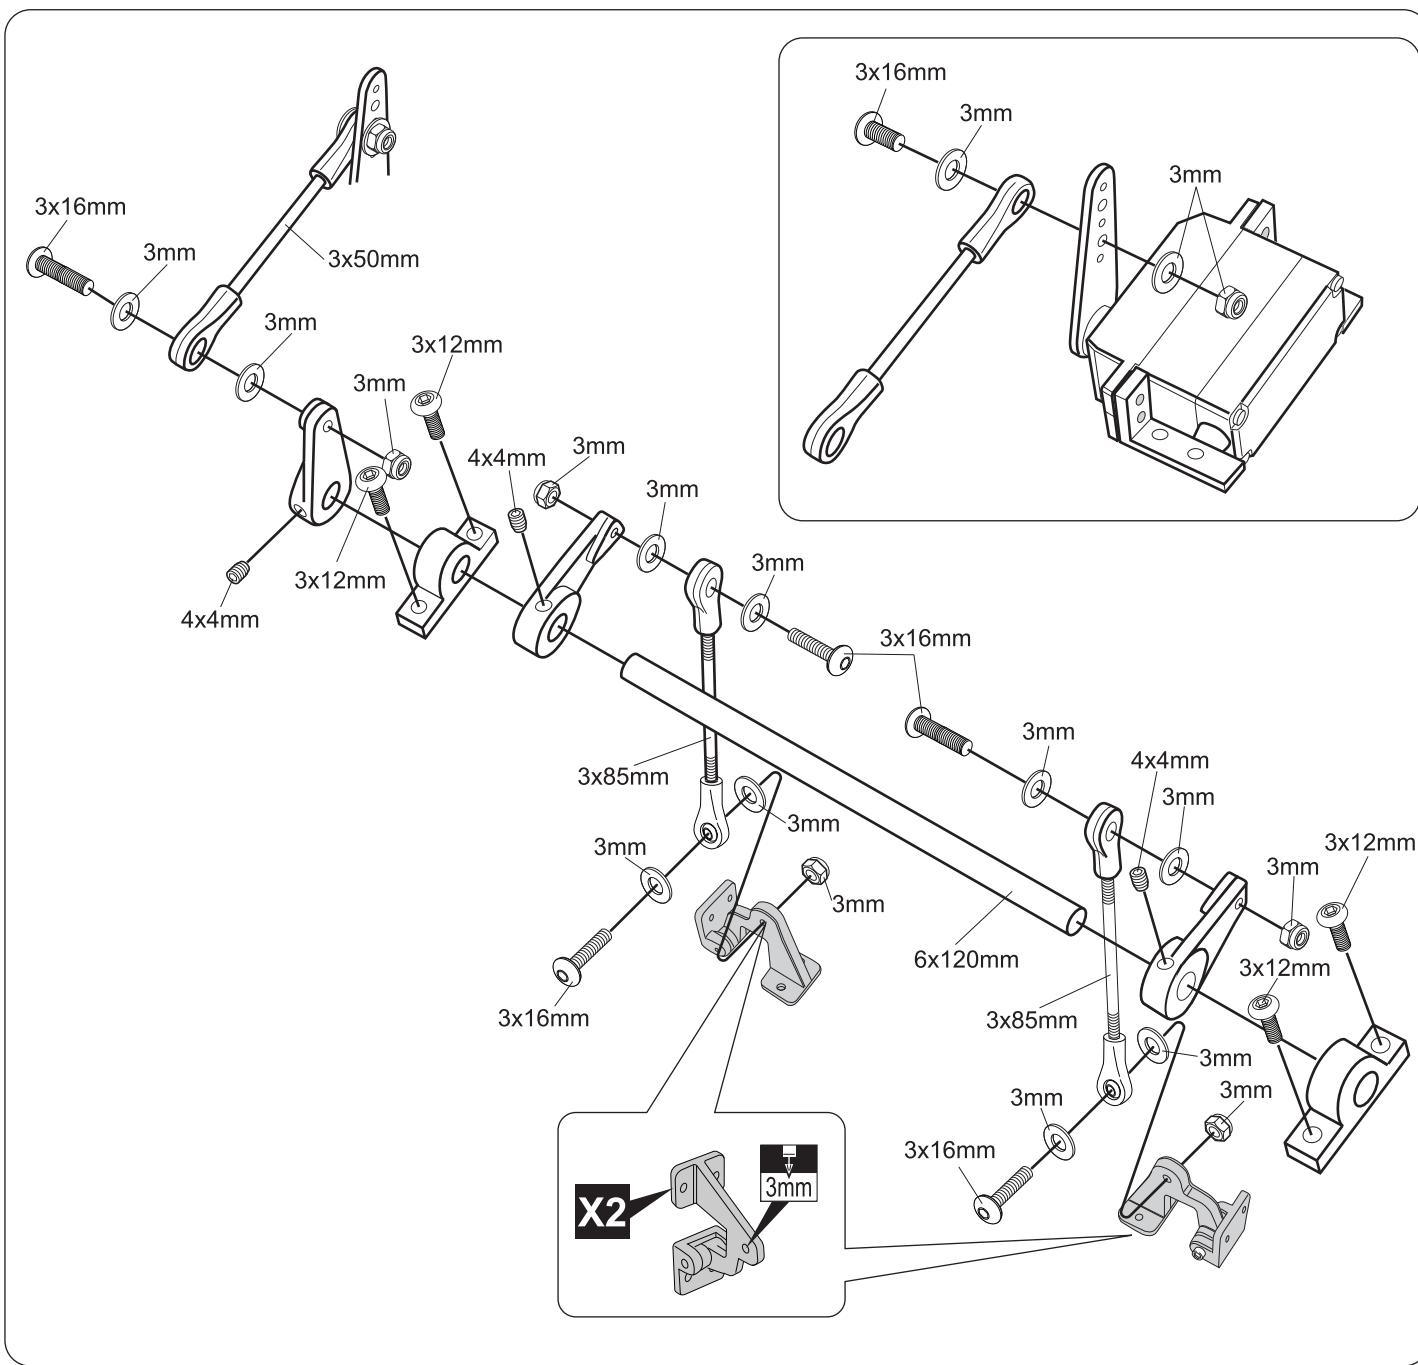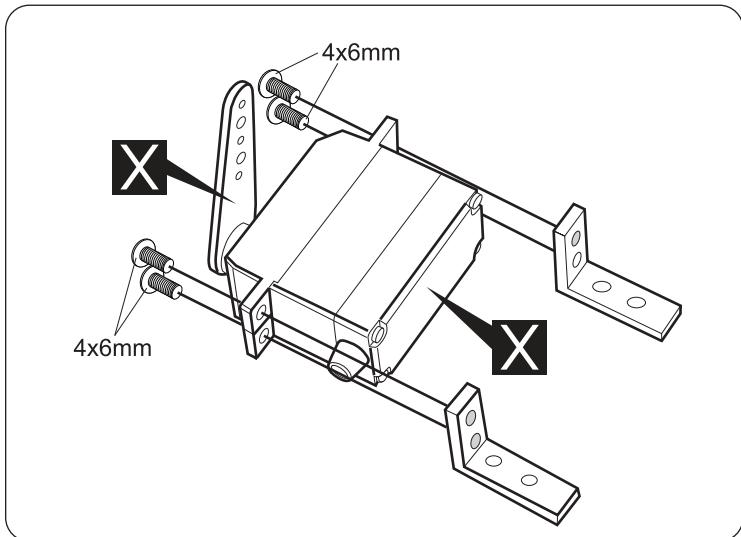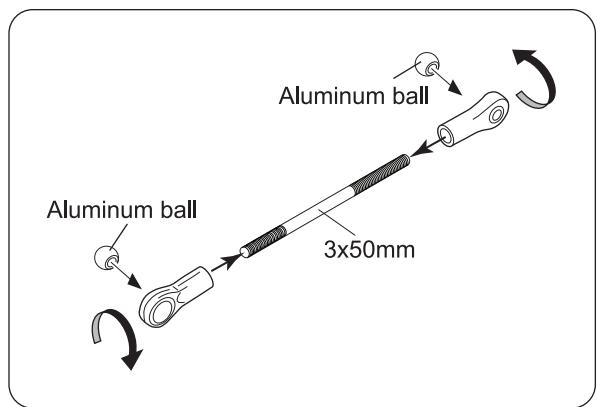

**X** Must be purchased separately!



 Drill holes with the Specified diameter.

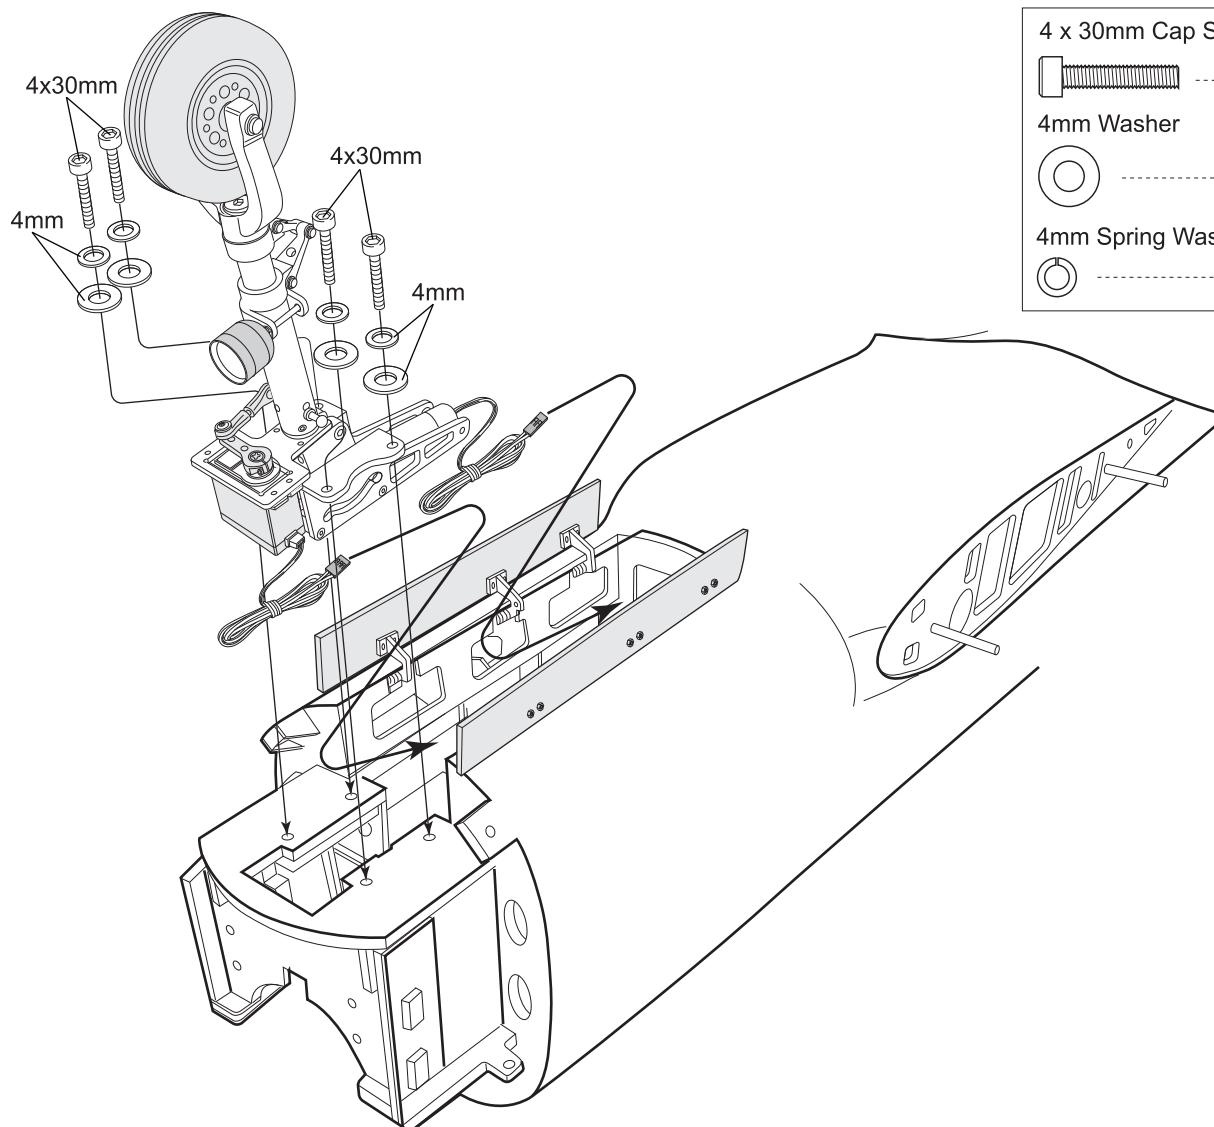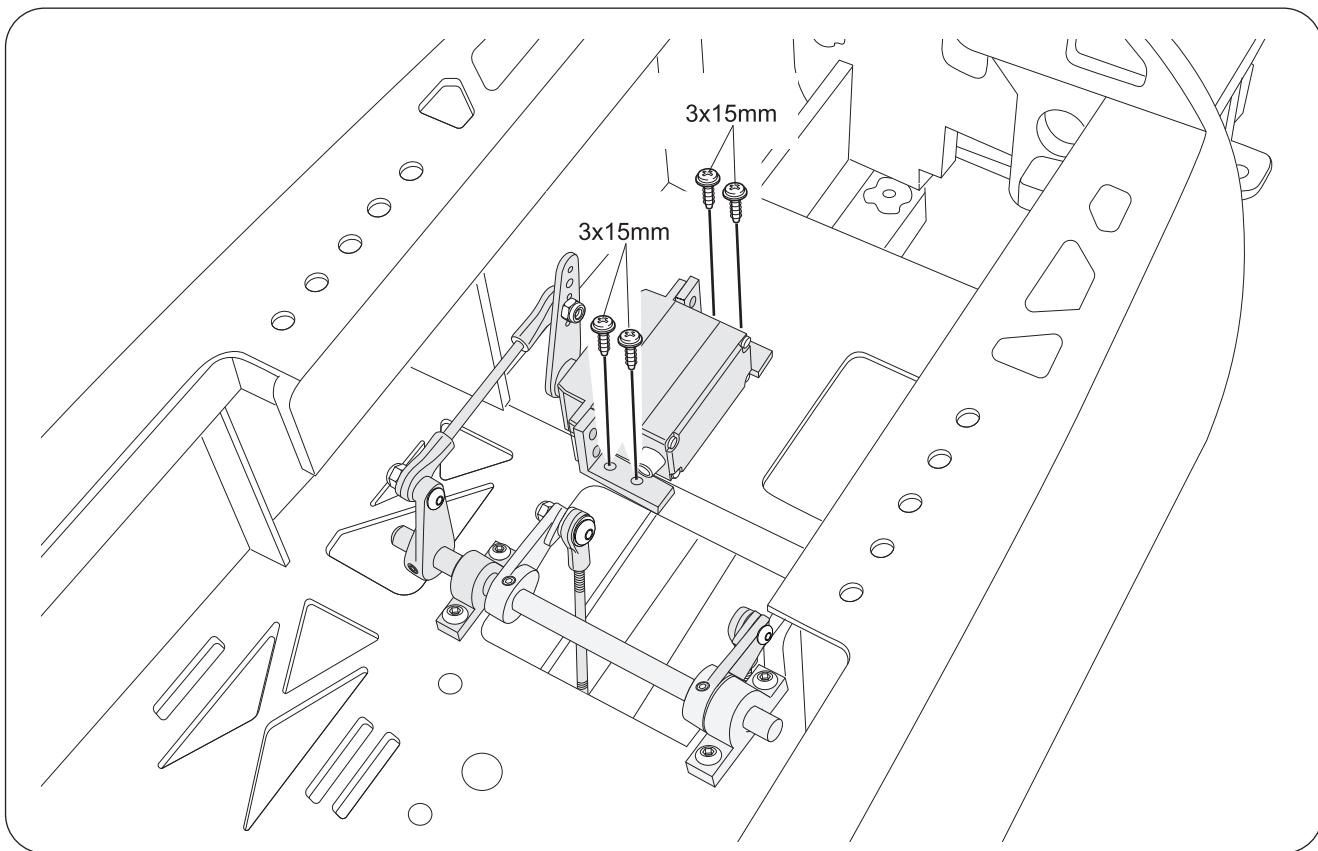


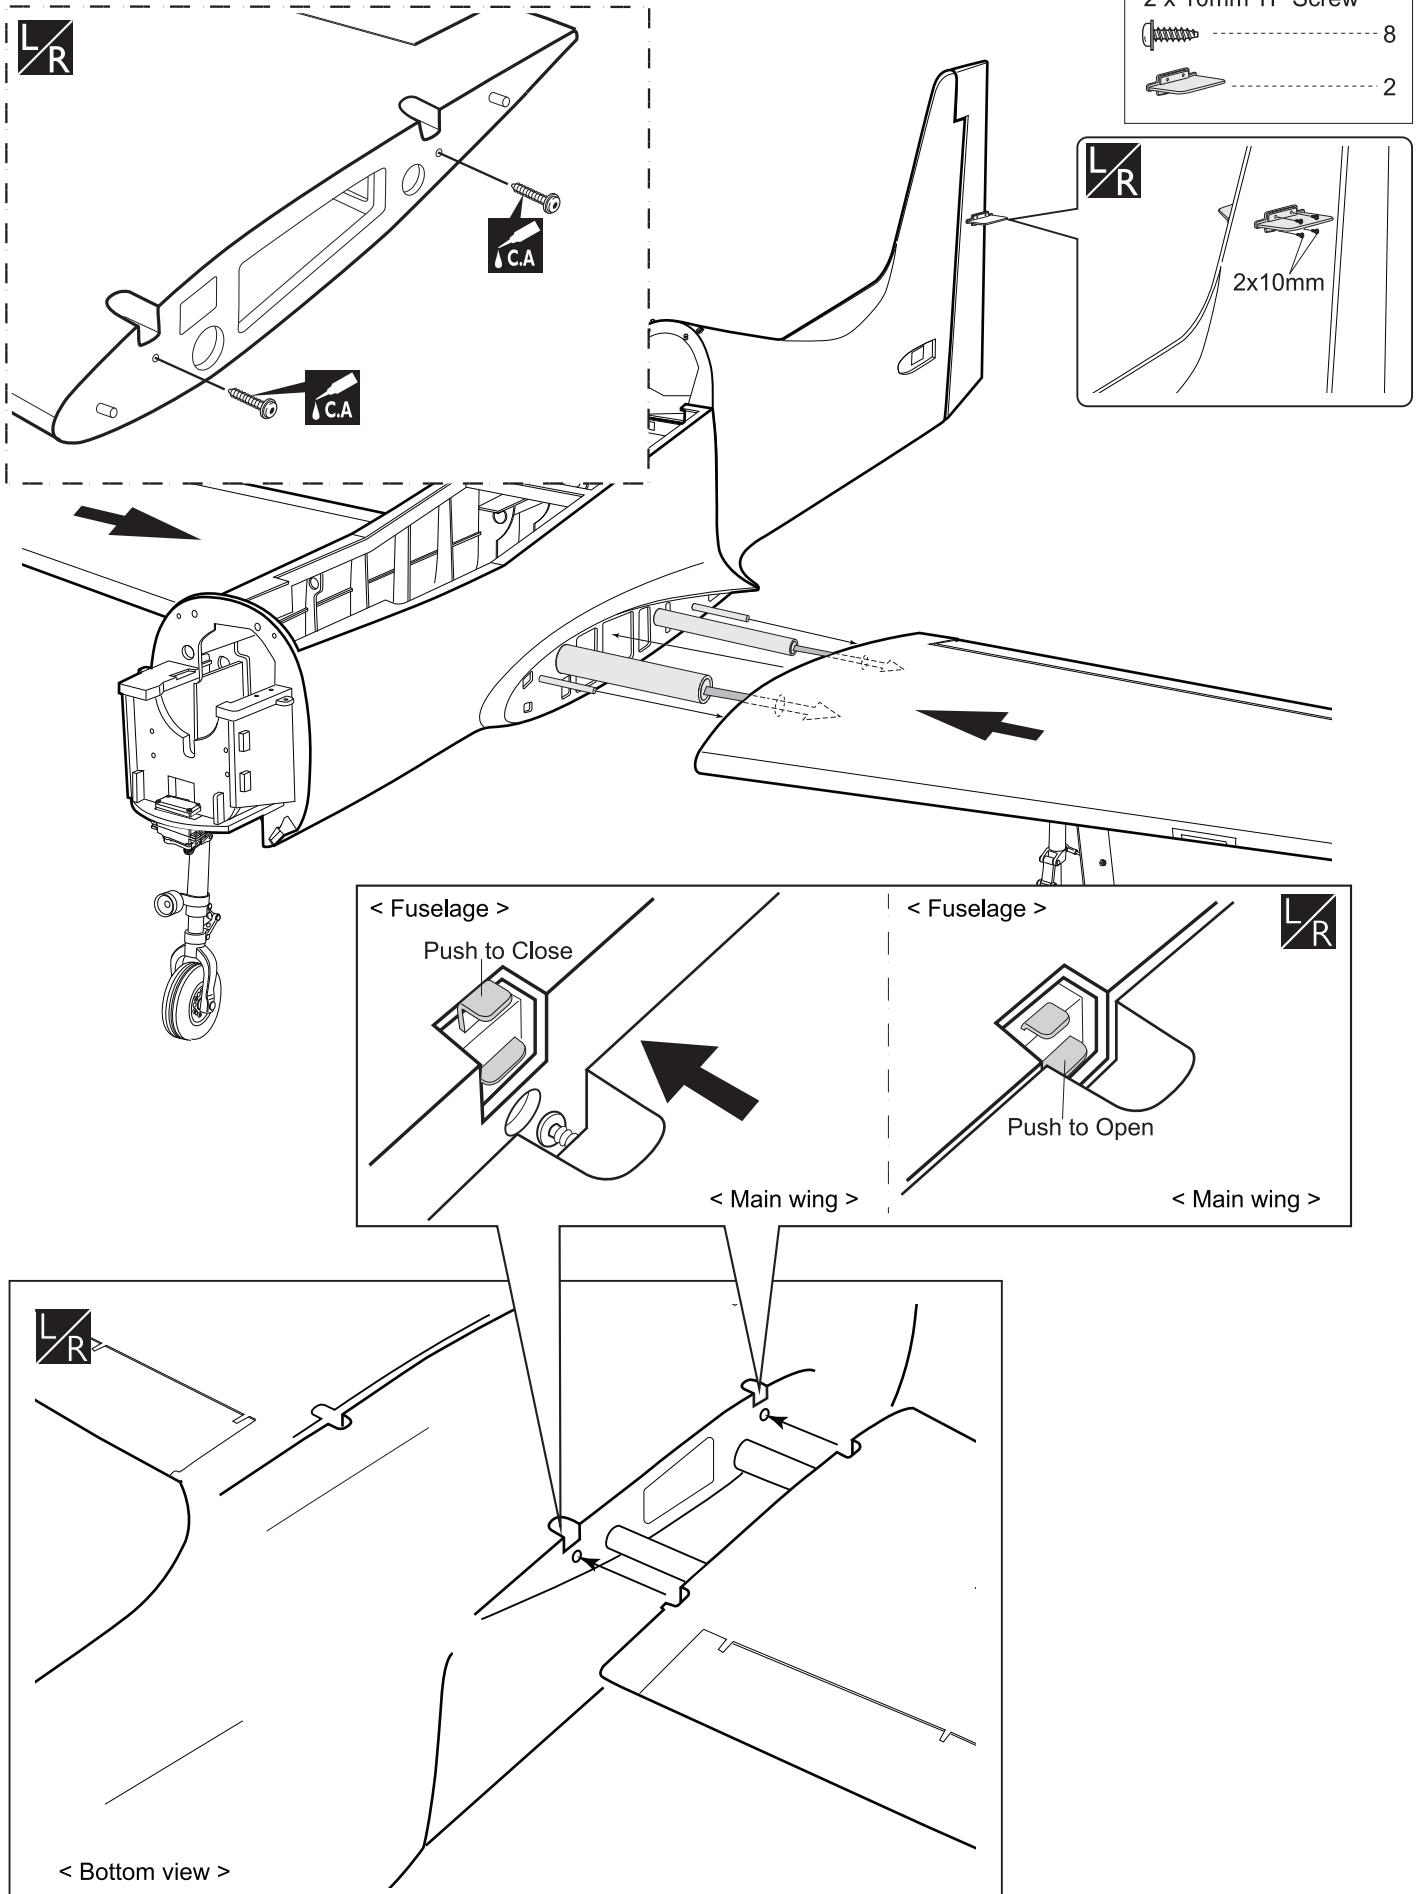
**SECURE THE WING TO THE FUSELAGE**


Assemble left and right sides the same way

Apply instant glue (CA glue, super glue).

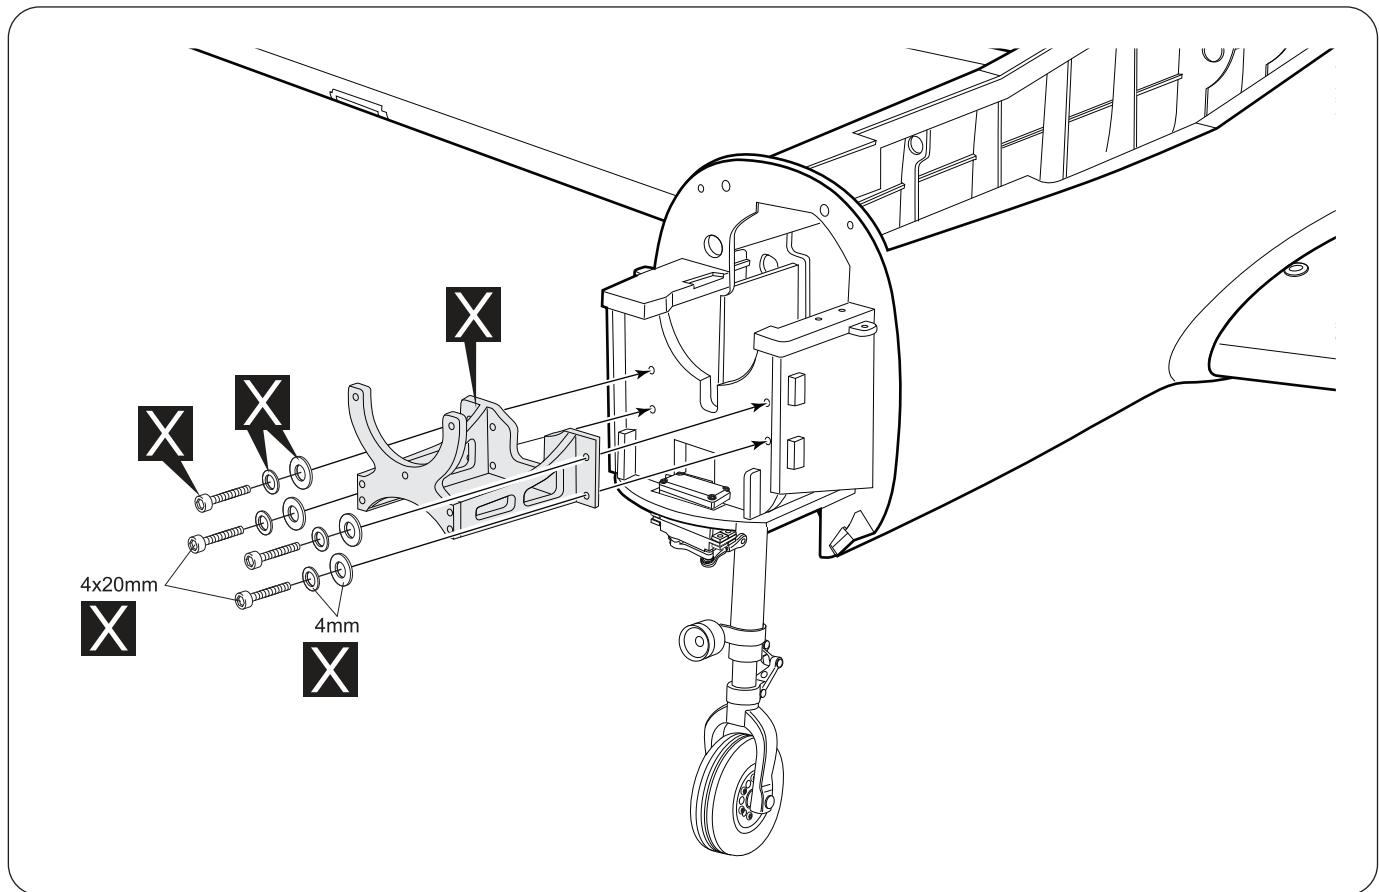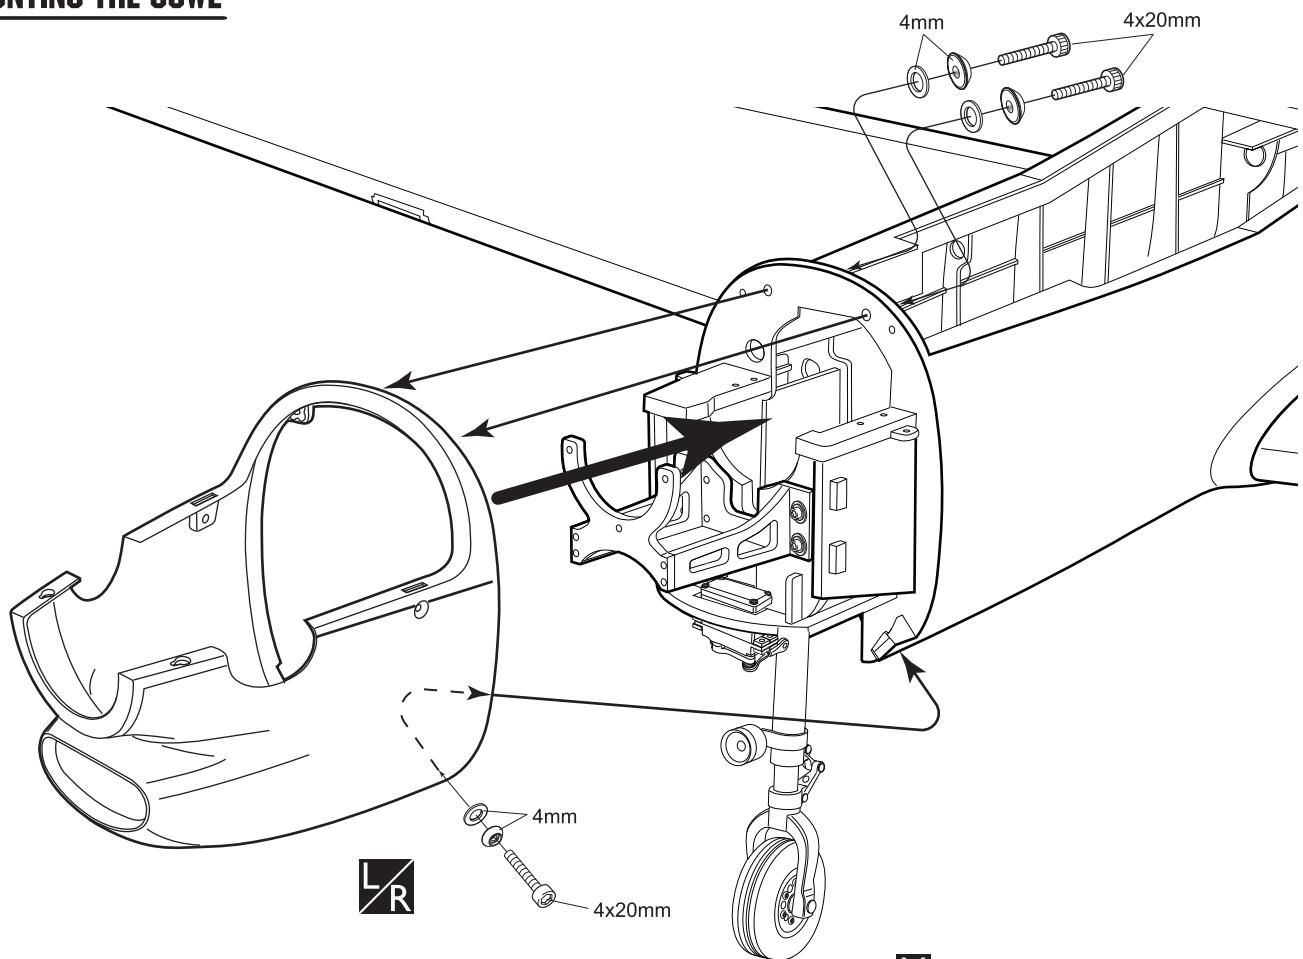**INSTALLING THE ENGINE** ( *Electric Motor Mount (MUST BE PURCHASE SEPARATELY)* )**MOUNTING THE COWL**

**X** Must be purchased separately!

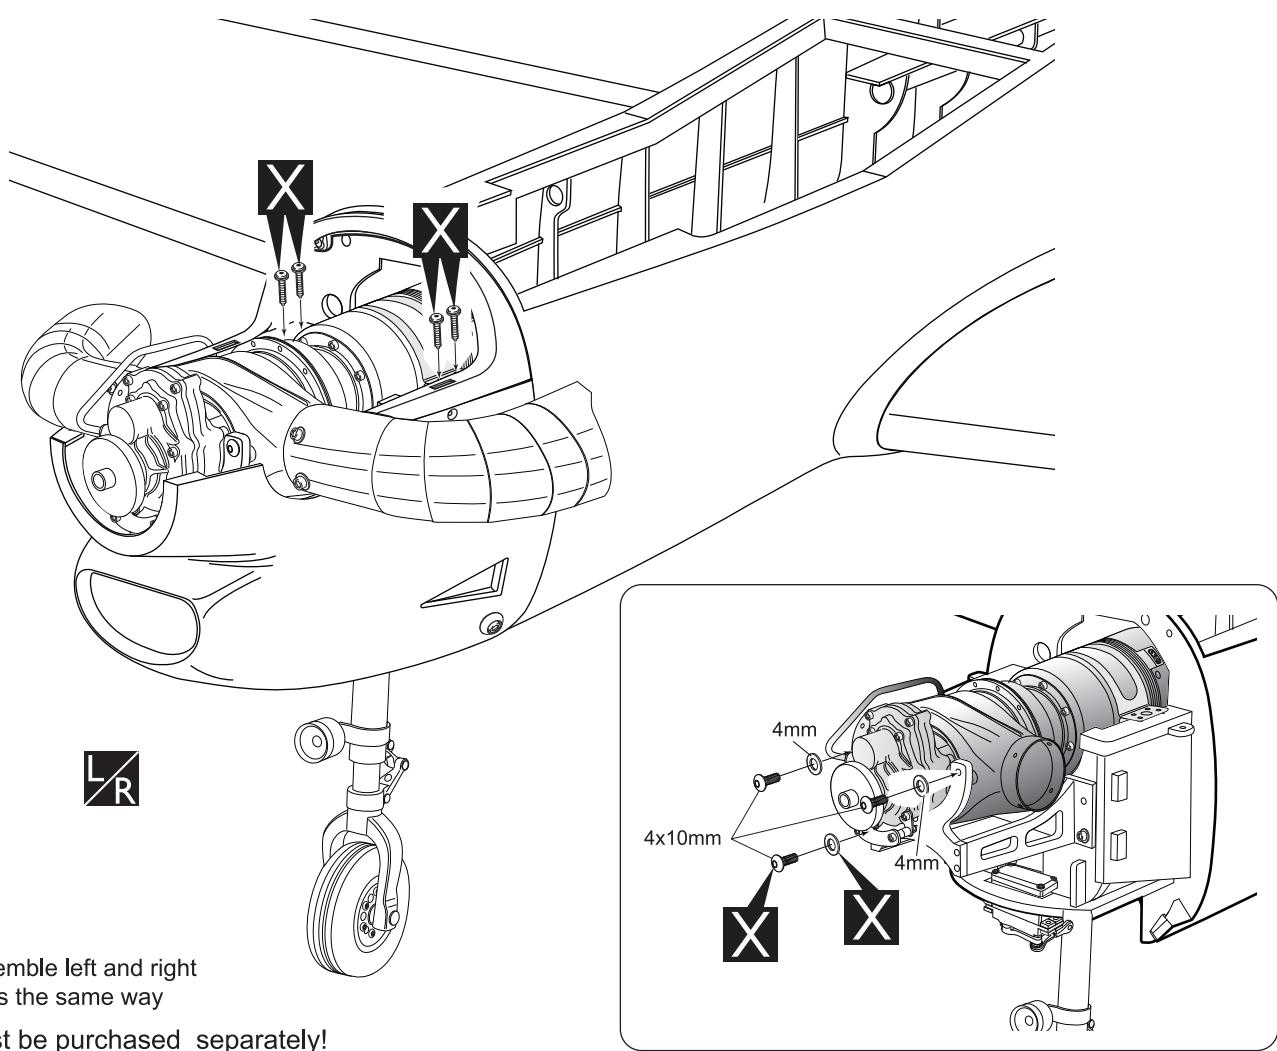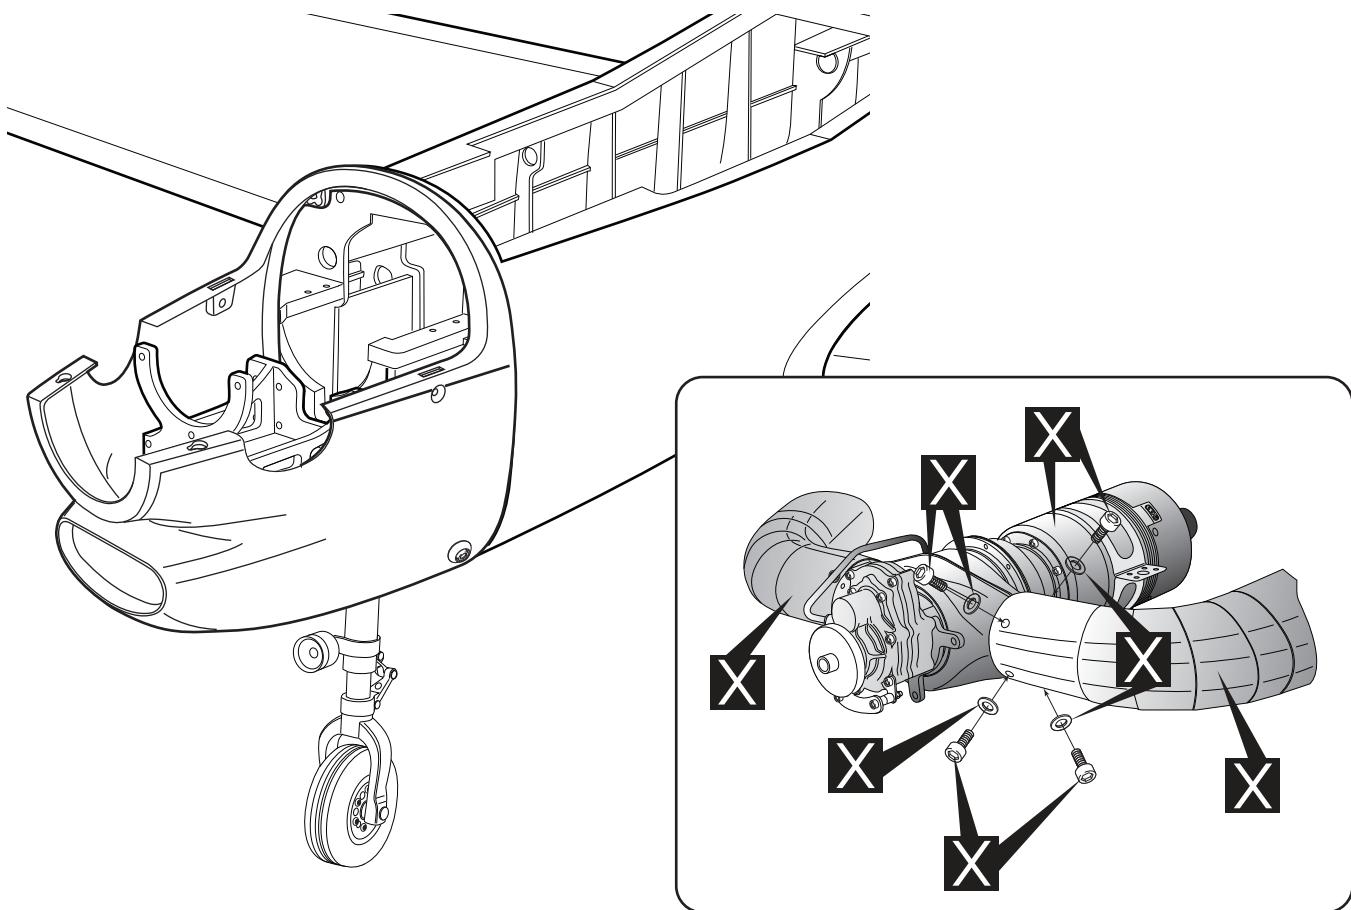

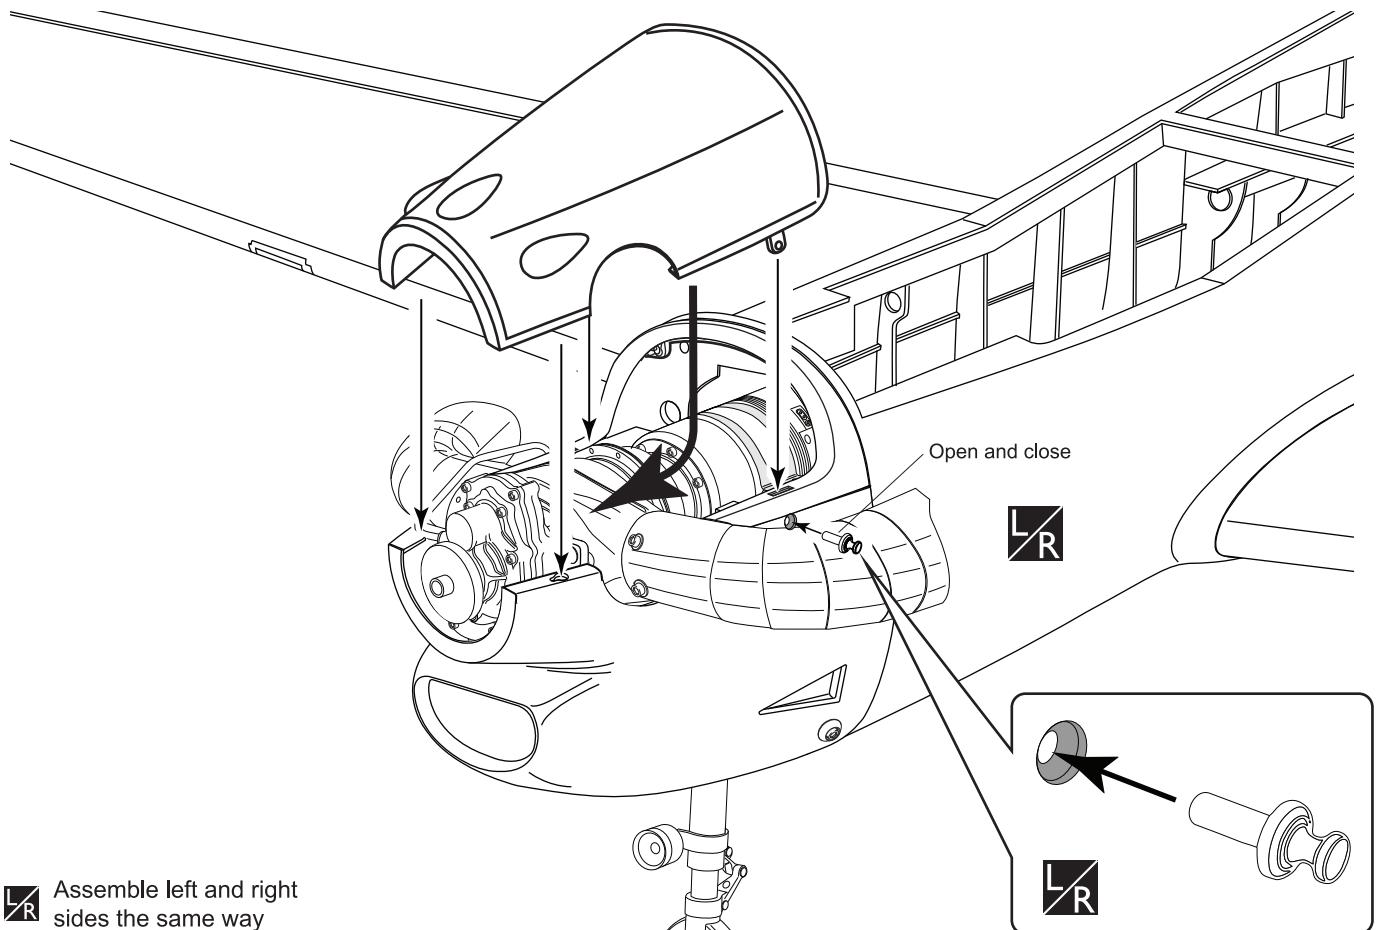

## INSTALLING THE SPINNER


Install the spinner back-plate, propeller and spinner cone.


**⚠** *The propeller should not touch any part of the spinner cone. If it dose, use a sharp modeling knife and carefully trim away the spinner cone where the propeller comes in contact with it.*





- Securely tighten the nut holding the propeller for it not come off when the motor is spinning. If coming off, there is a high risk of injury!
- Always ensure propeller and spinner are balanced. If unbalanced, vibration may result at high rotation and cause damage or injury.

3 x 8mm Button Screw	6
----------------------	---

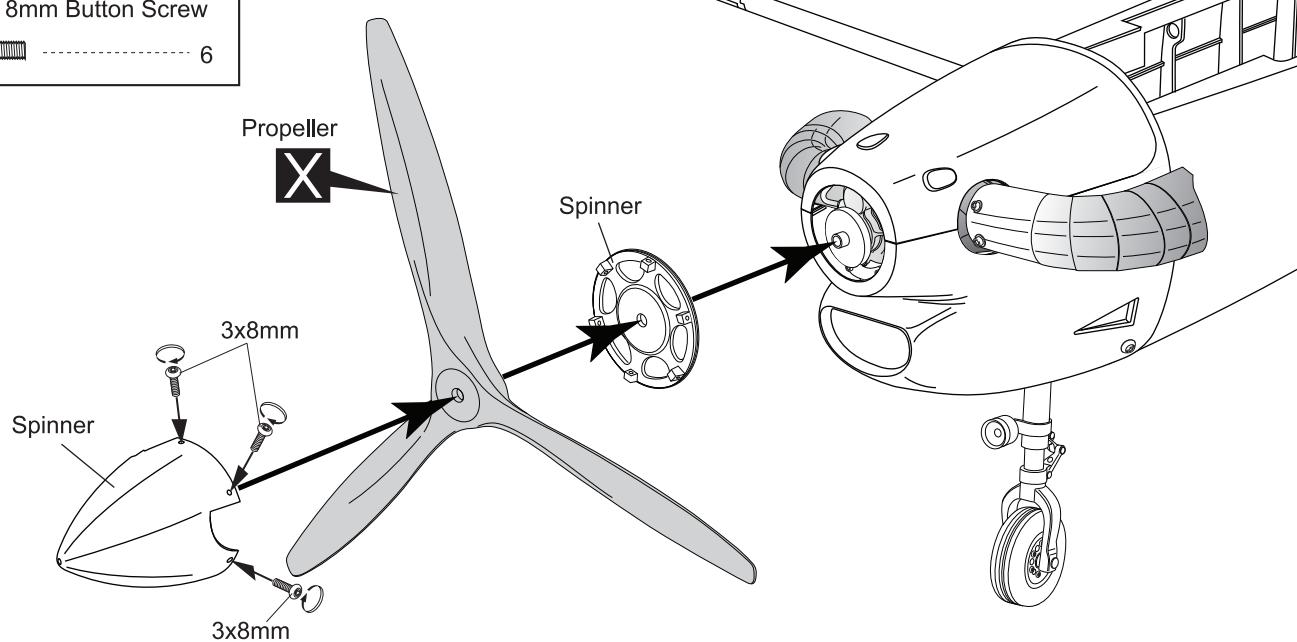


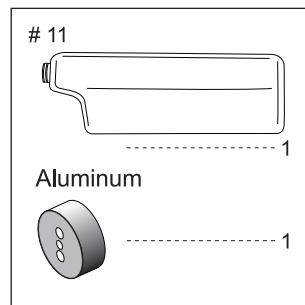**INSTALLING THE FUEL TANK**

3 x 25mm Cap Screw	1
Zip Tie	6
Clunks	1
Rubber	1
Aluminum plate	1
4 x 60mm copper pipe	2
4 x 120mm copper pipe	1

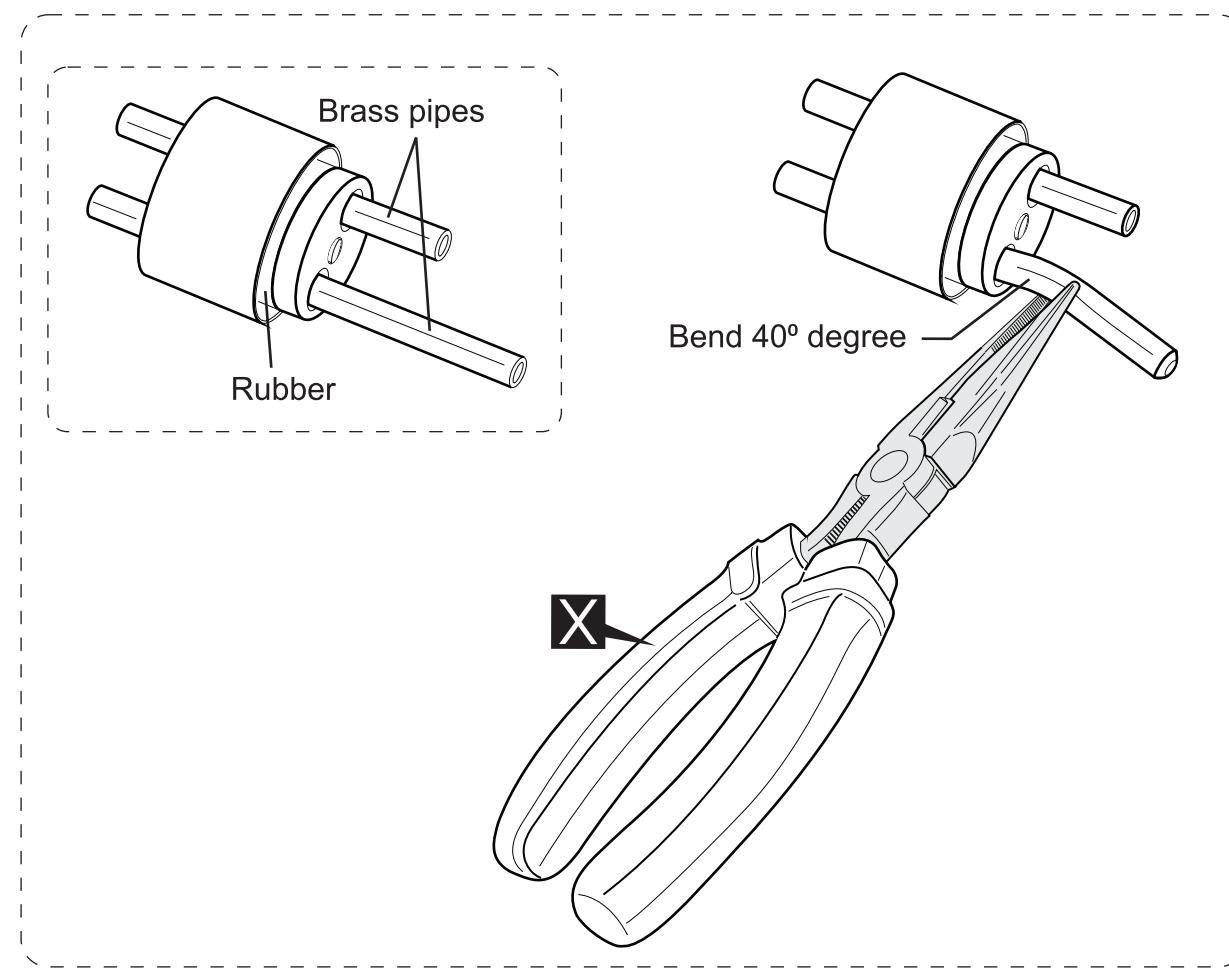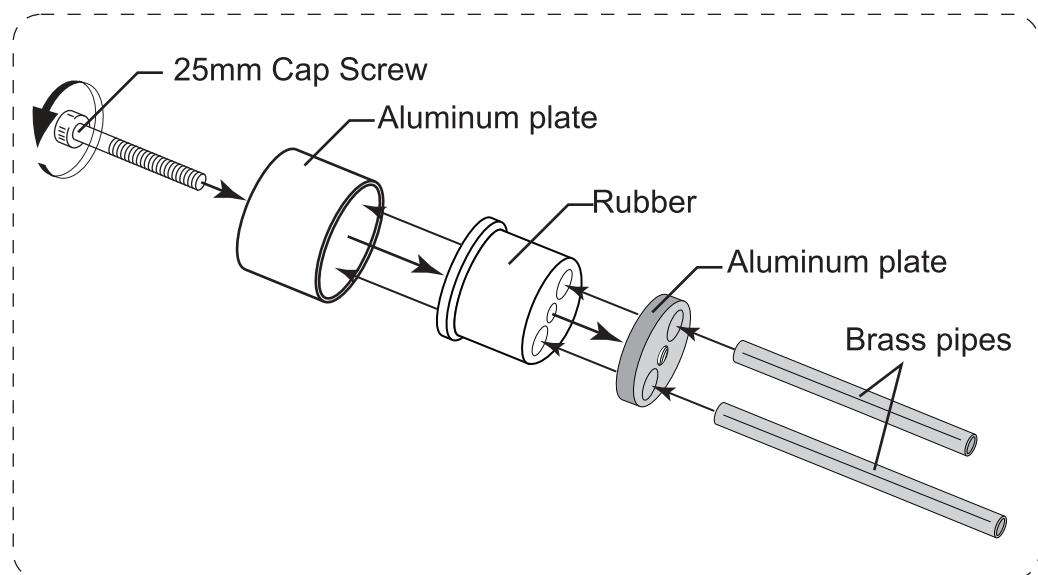


**X** Must be purchased separately!



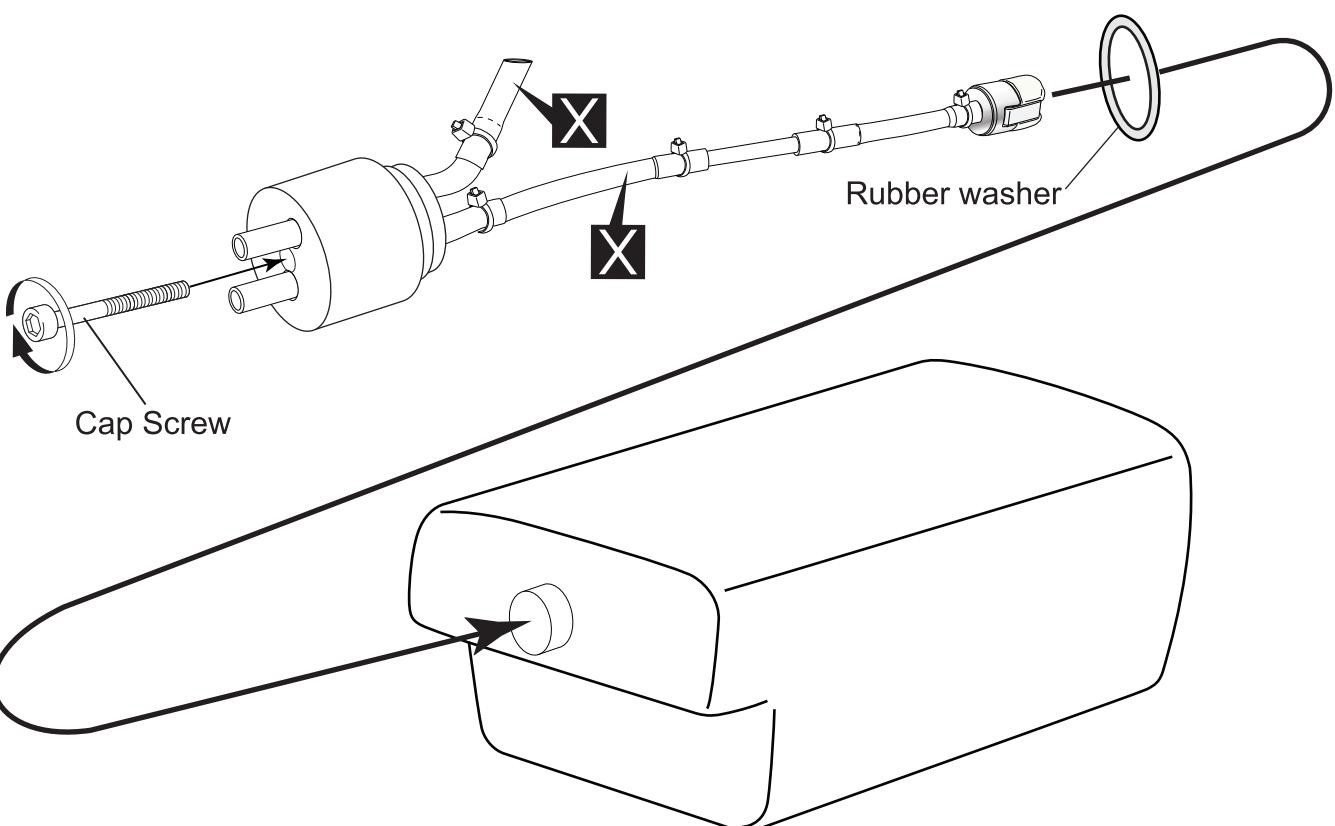


**X** Silicone tube  
( Must be purchased separately! )


### < Front View >

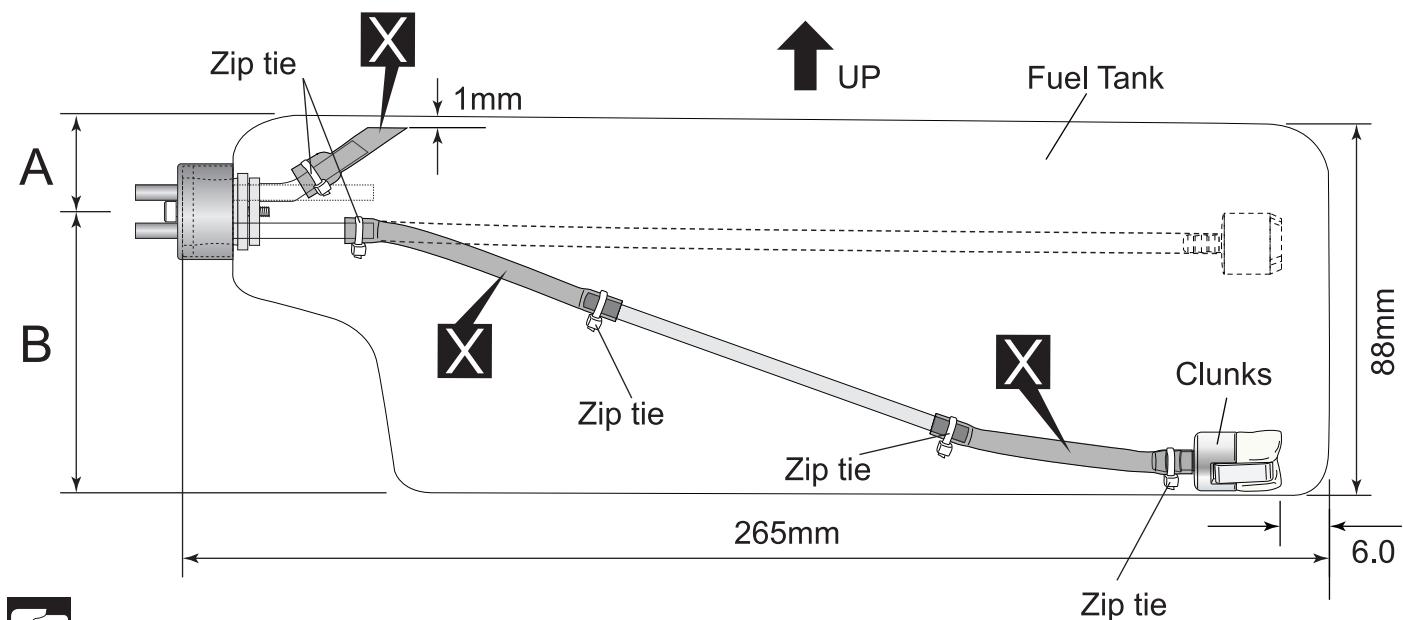

**X** Must be purchased separately!

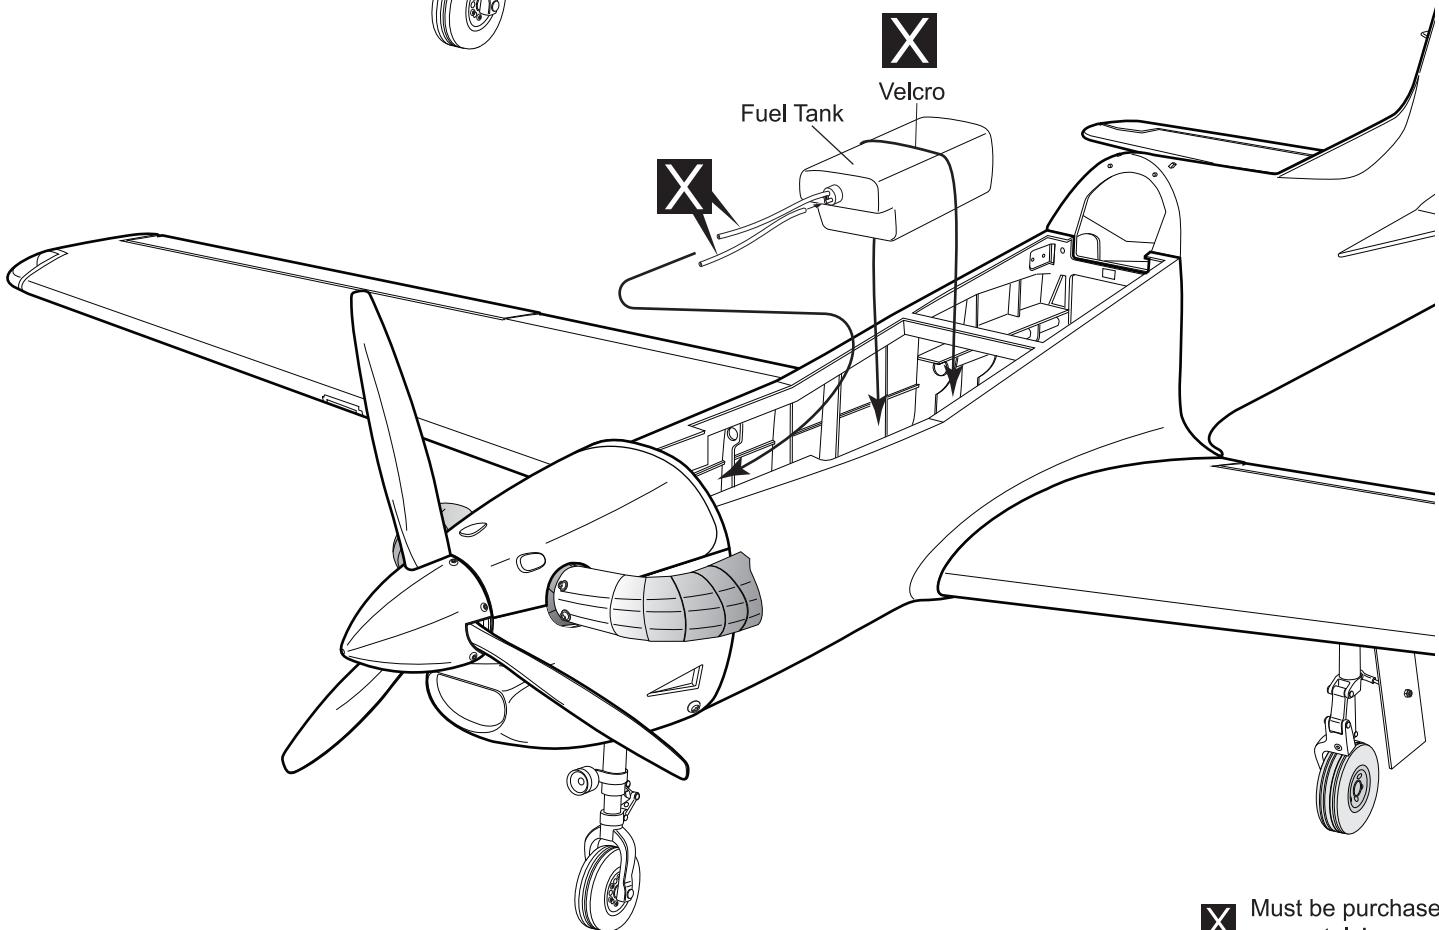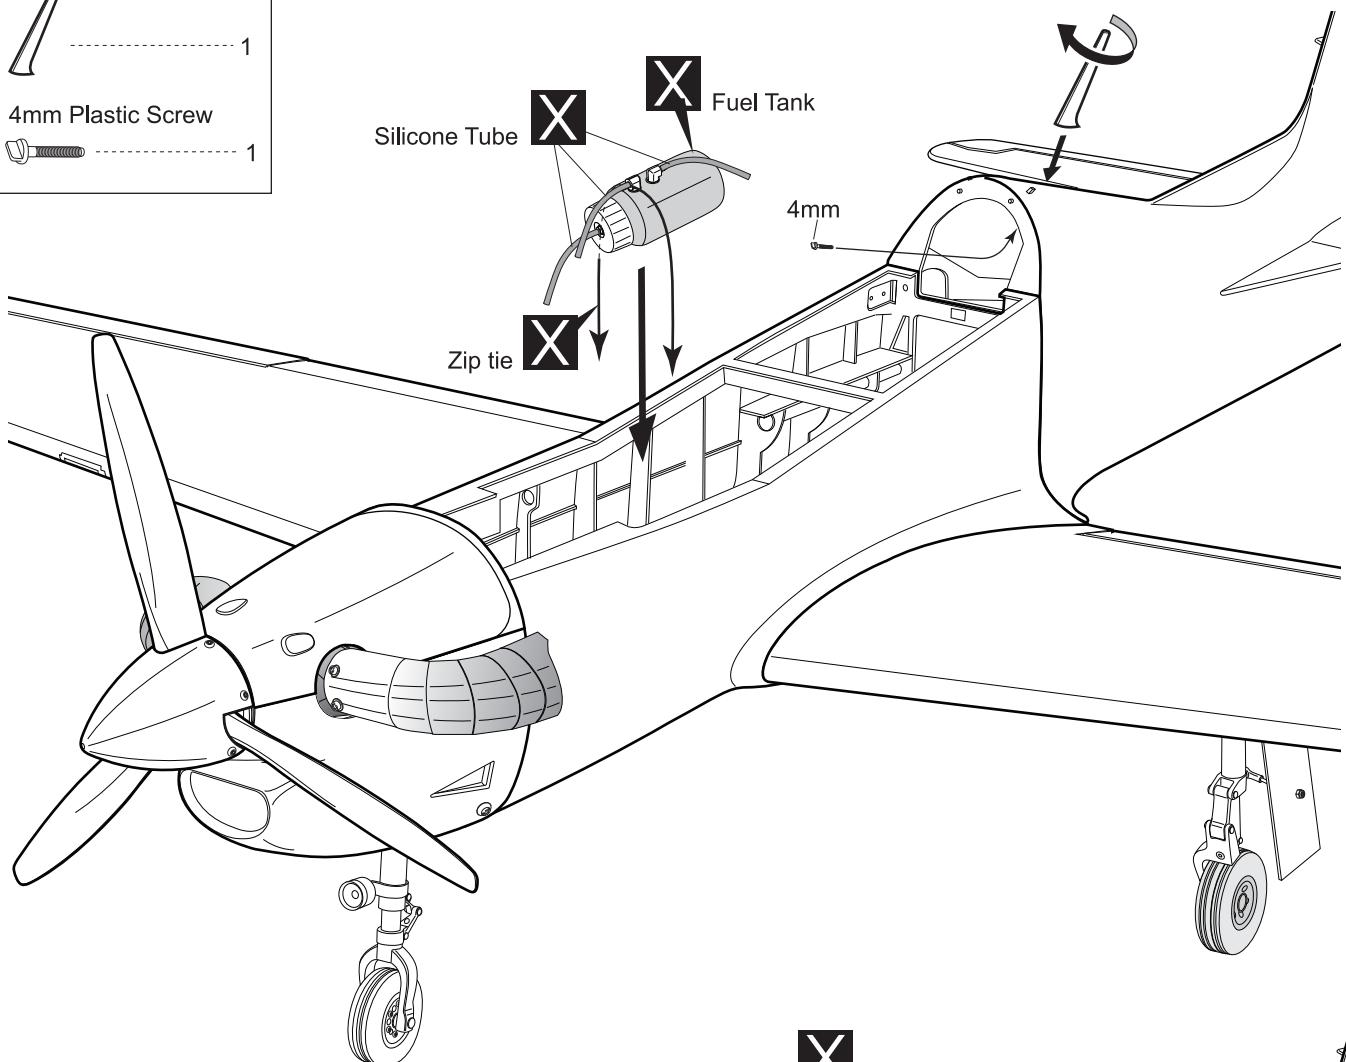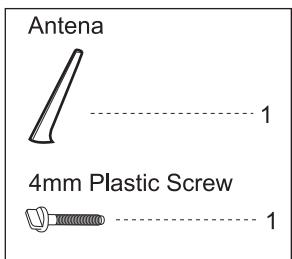


 Must be purchased separately!

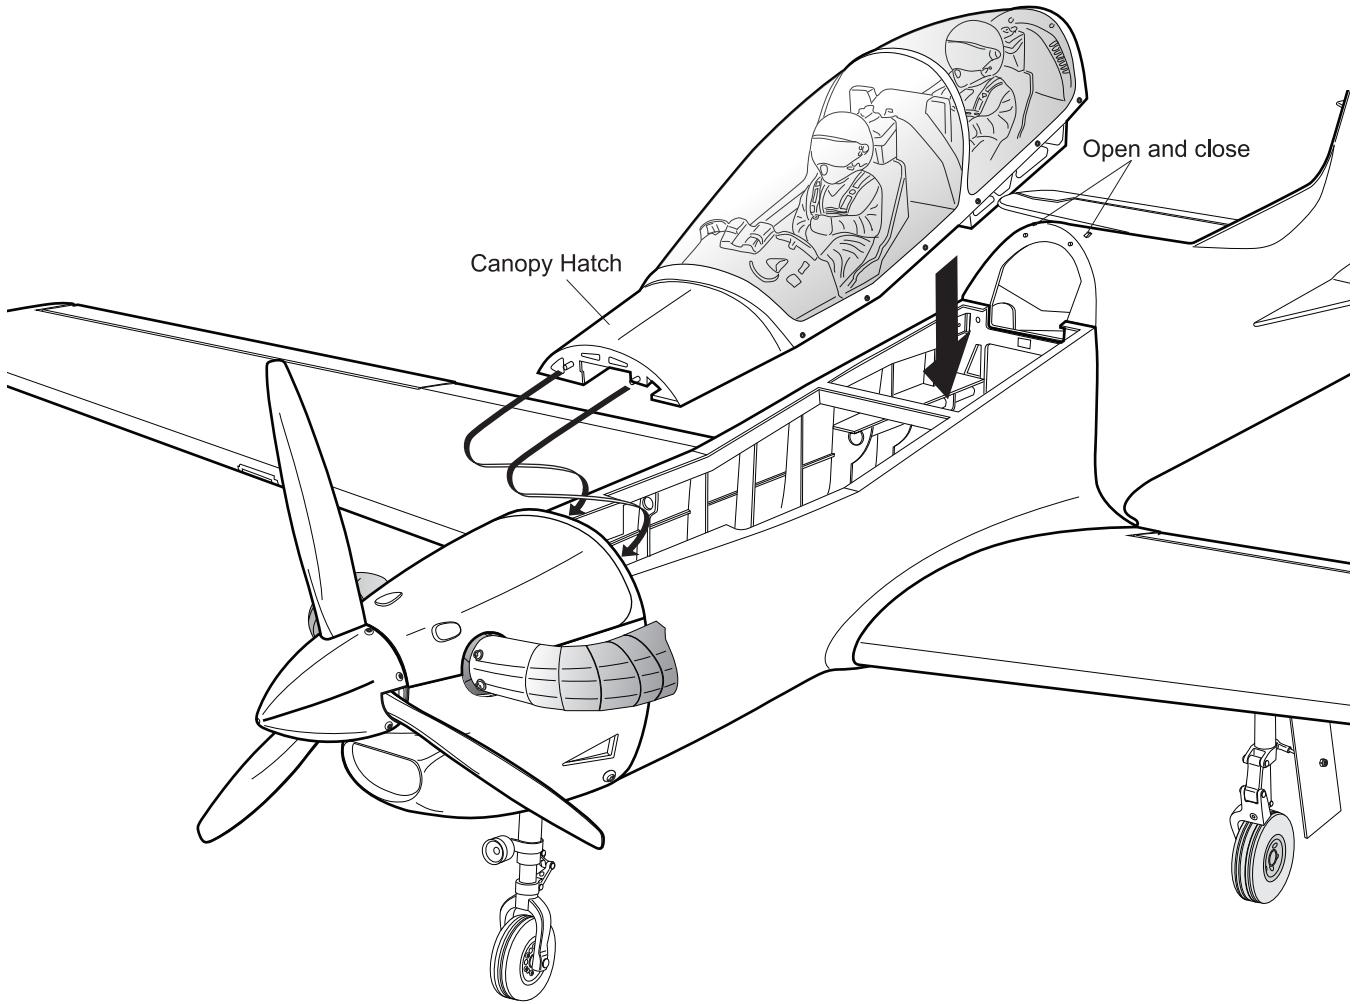


## BALANCING


1. It is critical that your airplane be balanced correctly. Improper balance will cause your plane to lose control and crash.

THE CENTER OF GRAVITY IS LOCATED 141mm (5.5 in) BACK FROM THE LEADING EDGE OF THE WING, AT THE FUSELAGE. BALANCE A PLANE UPSIDE DOWN WITH THE FUEL TANK EMPTY.

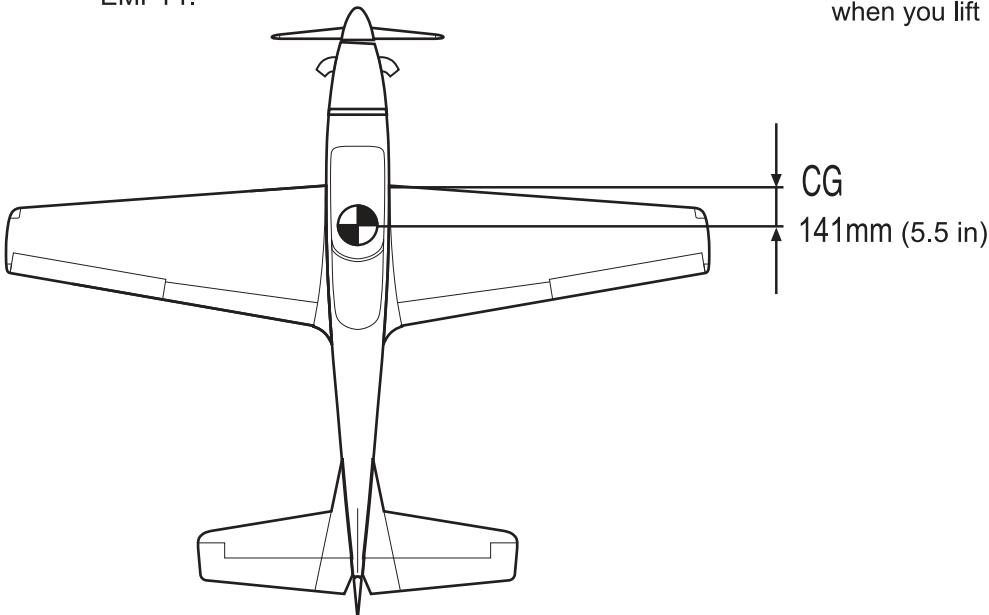

2. If the nose of the plane falls, the plane is nose heavy. To correct this first move the battery pack further back in the fuselage. If this is not possible or does not correct it, stick small amounts of lead weight on the fuselage under the horizontal stabilizer. If the tail of the plane falls, the plane is tail heavy. To correct this, move the battery and receiver forward or if this is not possible, stick weight into the firewall. When balanced correctly, the airplane should sit level or slightly nose down when you lift it up with your fingers.

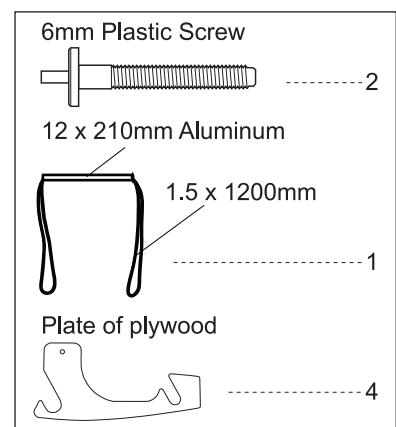

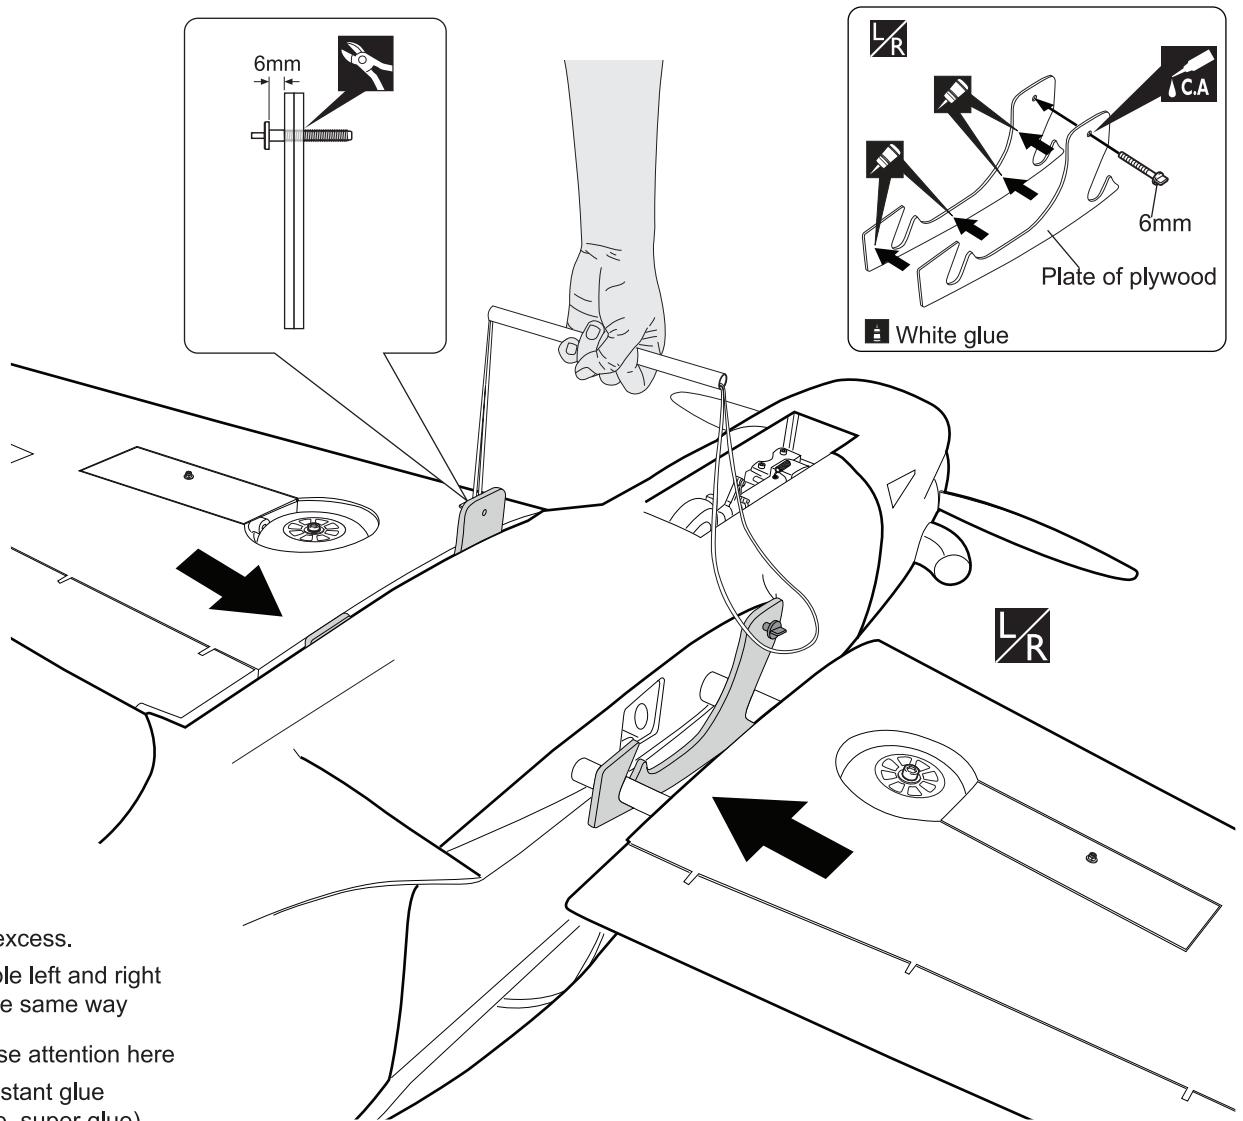


► In order to obtain the CG specified, reposition the receiver and other equipment.

► If not obtain the CG specified, add a weight and adjust.



► Do not fly before confirming the correct location of the CG. If the CG is incorrect, you lose control of your airplane which leads to accidents.

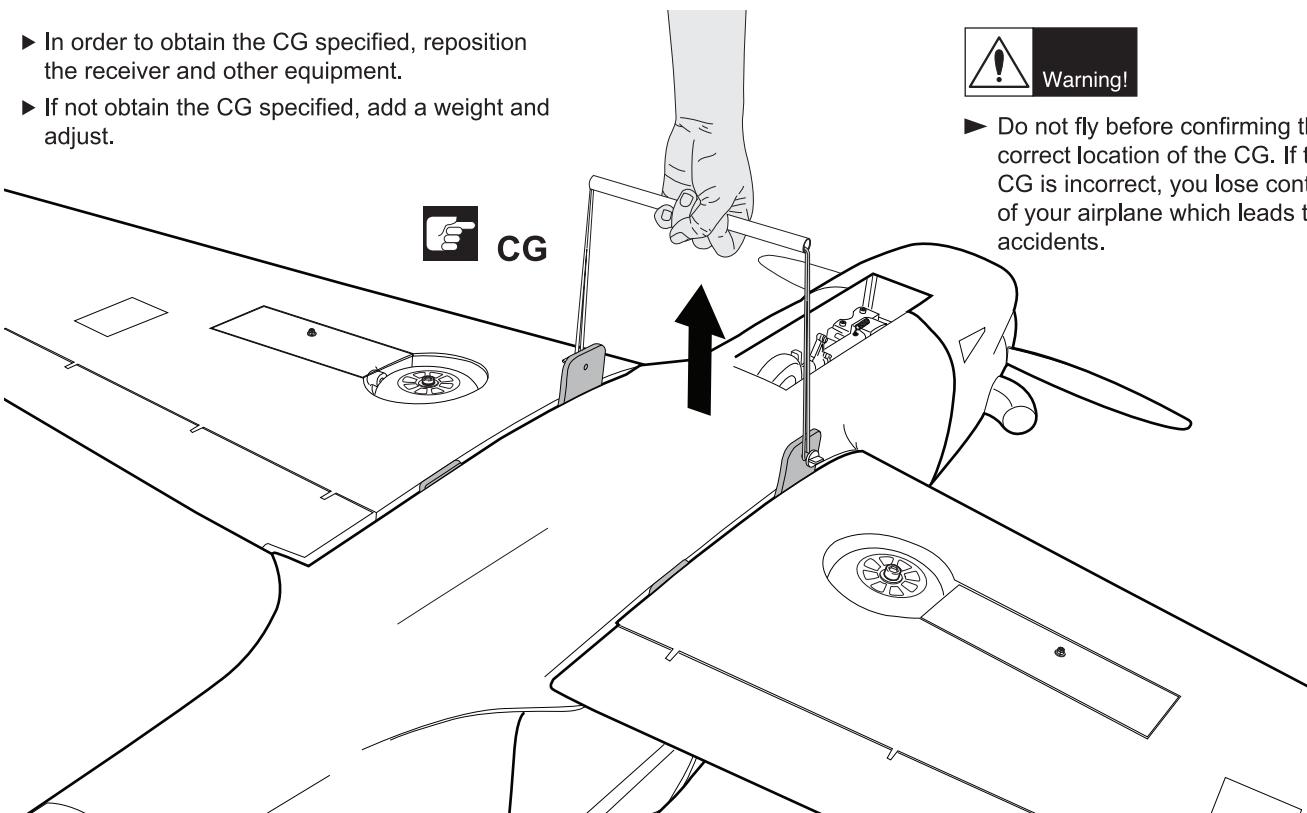

## LATERAL BALANCE



After you have balanced a plane on the C.G. You should laterally balance it. Doing this will help the airplane track straighter.

1. Turn the airplane upside down. Attach one loop of heavy string to the engine crankshaft and one to the tail wheel wire. With the wings level, carefully lift the airplane by the string. This may require two people to make it easier.
2. If one side of the wing fall, that side is heavier than the opposite. Add small amounts of lead weight to the bottom side of the lighter wing half's wing tip. Follow this procedure until the wing stays level when you lift the airplane.

### • LOW RATE

Ailerons :	15 mm up	15 mm down
Elevator:	15 mm up	15 mm down
Rudder :	30 mm right	30 mm left
Flap :	25 mm down	

### • HIGH RATE


Ailerons :	20 mm up	20 mm down
Elevator:	20 mm up	20 mm down
Rudder :	45 mm right	45 mm left
Flap :	35 mm down	

## CONTROL THROWS



1. We highly recommend setting up a plane using the control throws listed.
2. The control throws should be measured at the widest point of each control surface.
3. Check to be sure the control surfaces move in the correct directions.

## FLIGHT PREPARATION PRE FLIGHT CHECK


1. Completely charge your transmitter and receiver batteries before your first day of flying.
2. Check every bolt and every glue joint in your plane to ensure that everything is tight and well bonded.
3. Double check the balance of the airplane
4. Check the control surface
5. Check the receiver antenna. It should be fully extended and not coiled up inside the fuselage.
6. Properly balance the propeller.

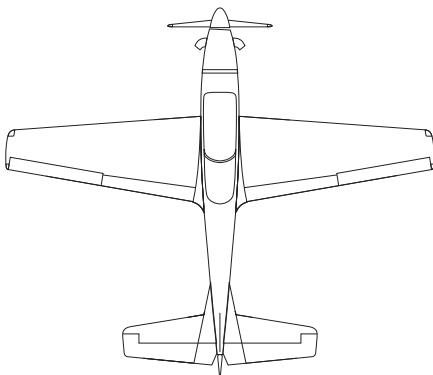


Aileron Control

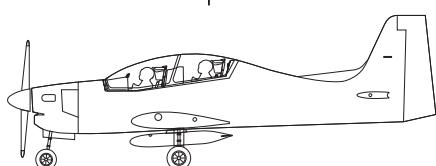



Elevator Control

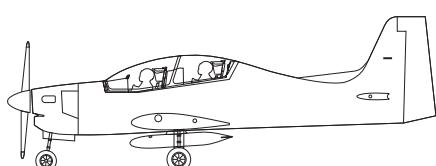


Rudder Control

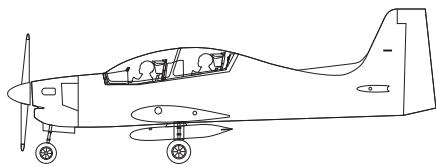

Flap Control







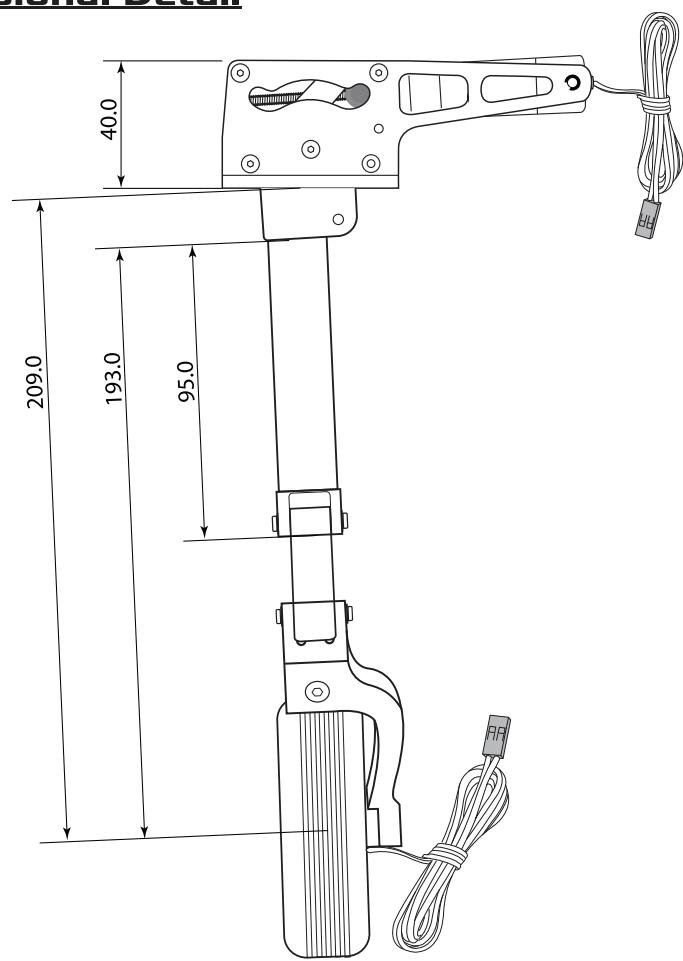
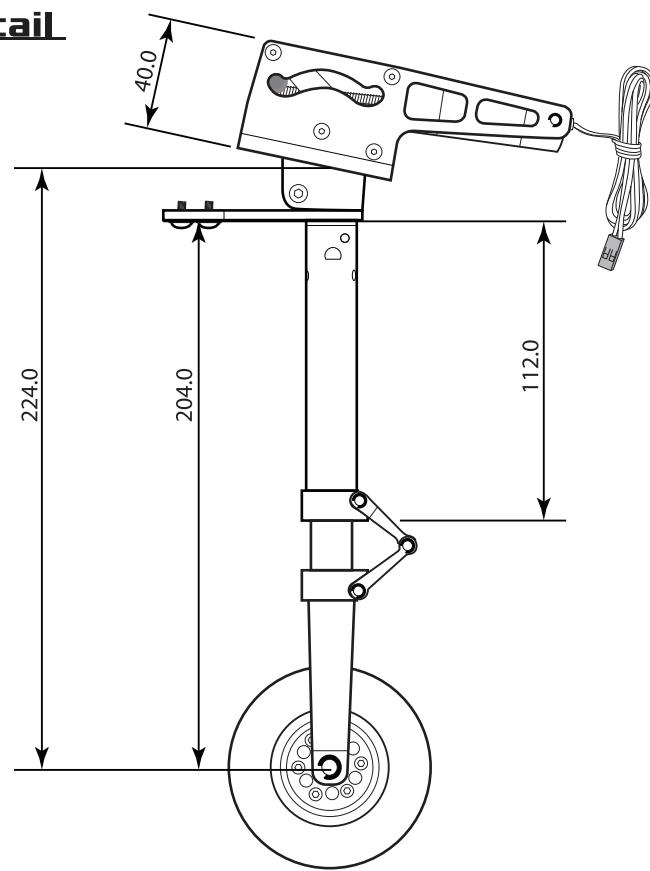
**Main Gear Dimensional Detail****Nose Gear Dimensional Detail**

# EXPLODED VIEW

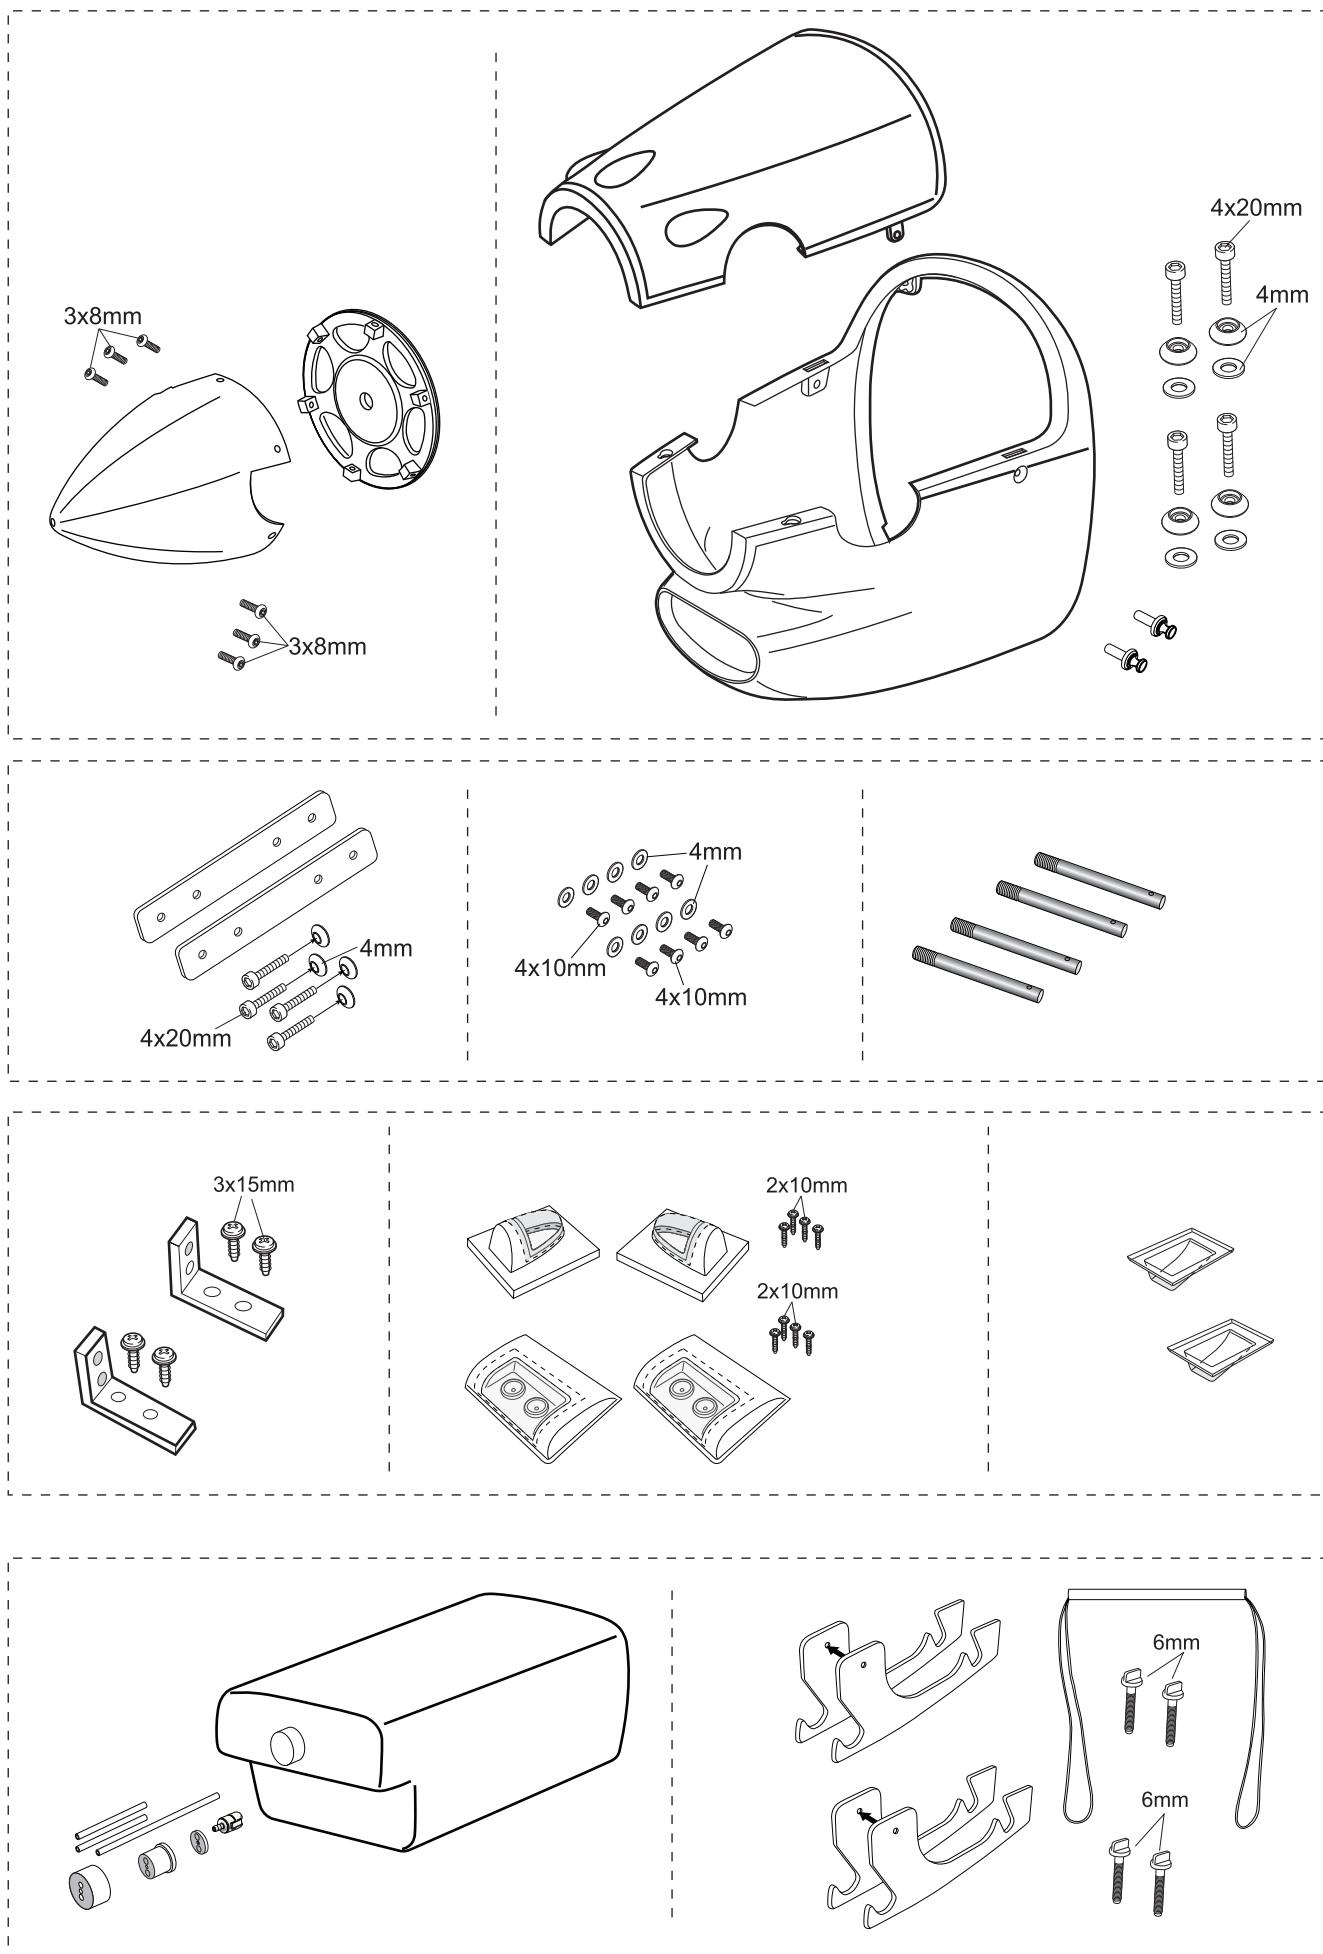


# EXPLODED VIEW

## < Joining the Fuselage >

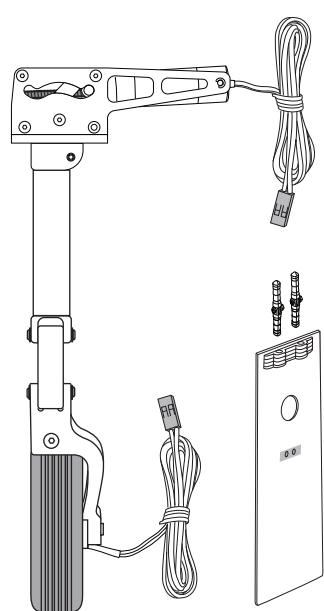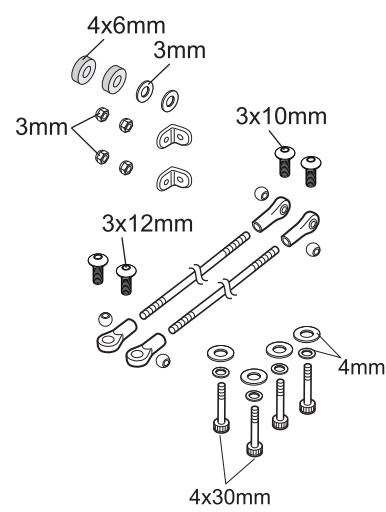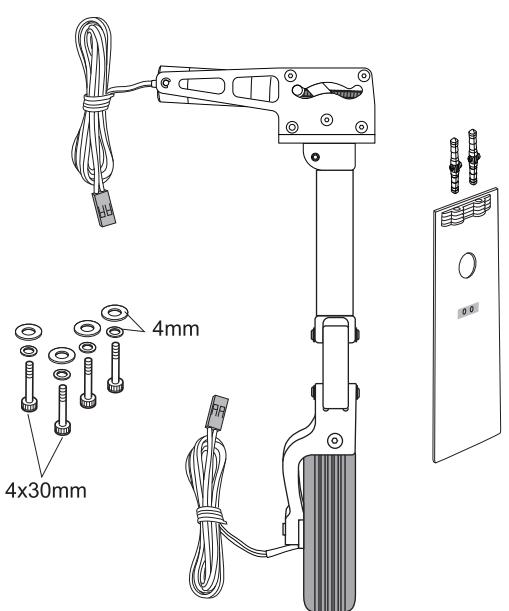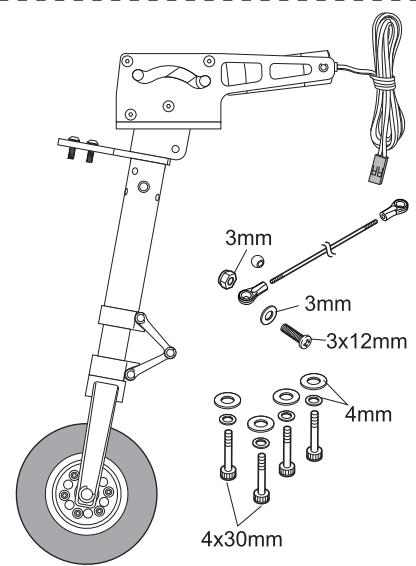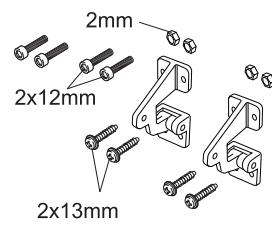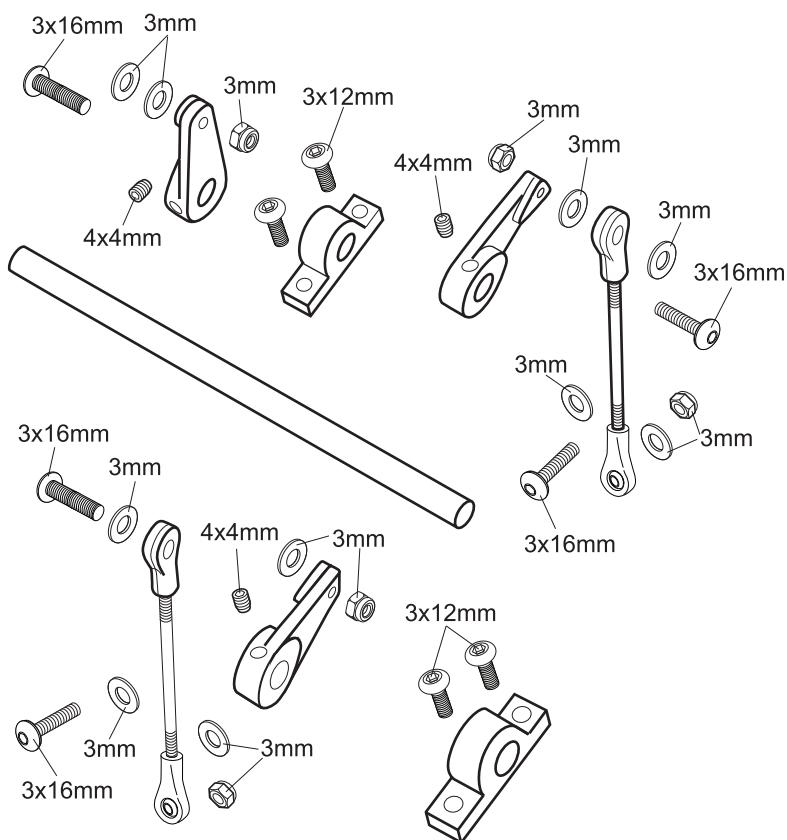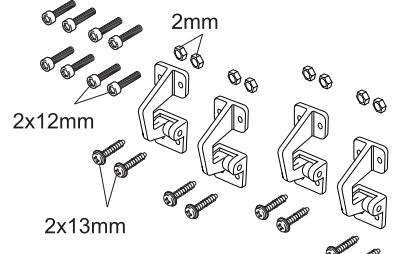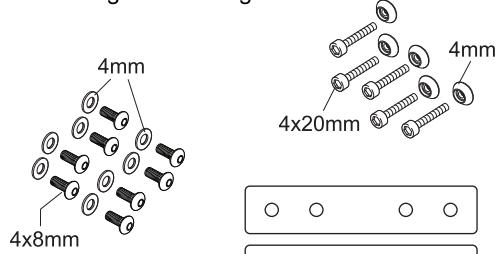

# EXPLODED VIEW

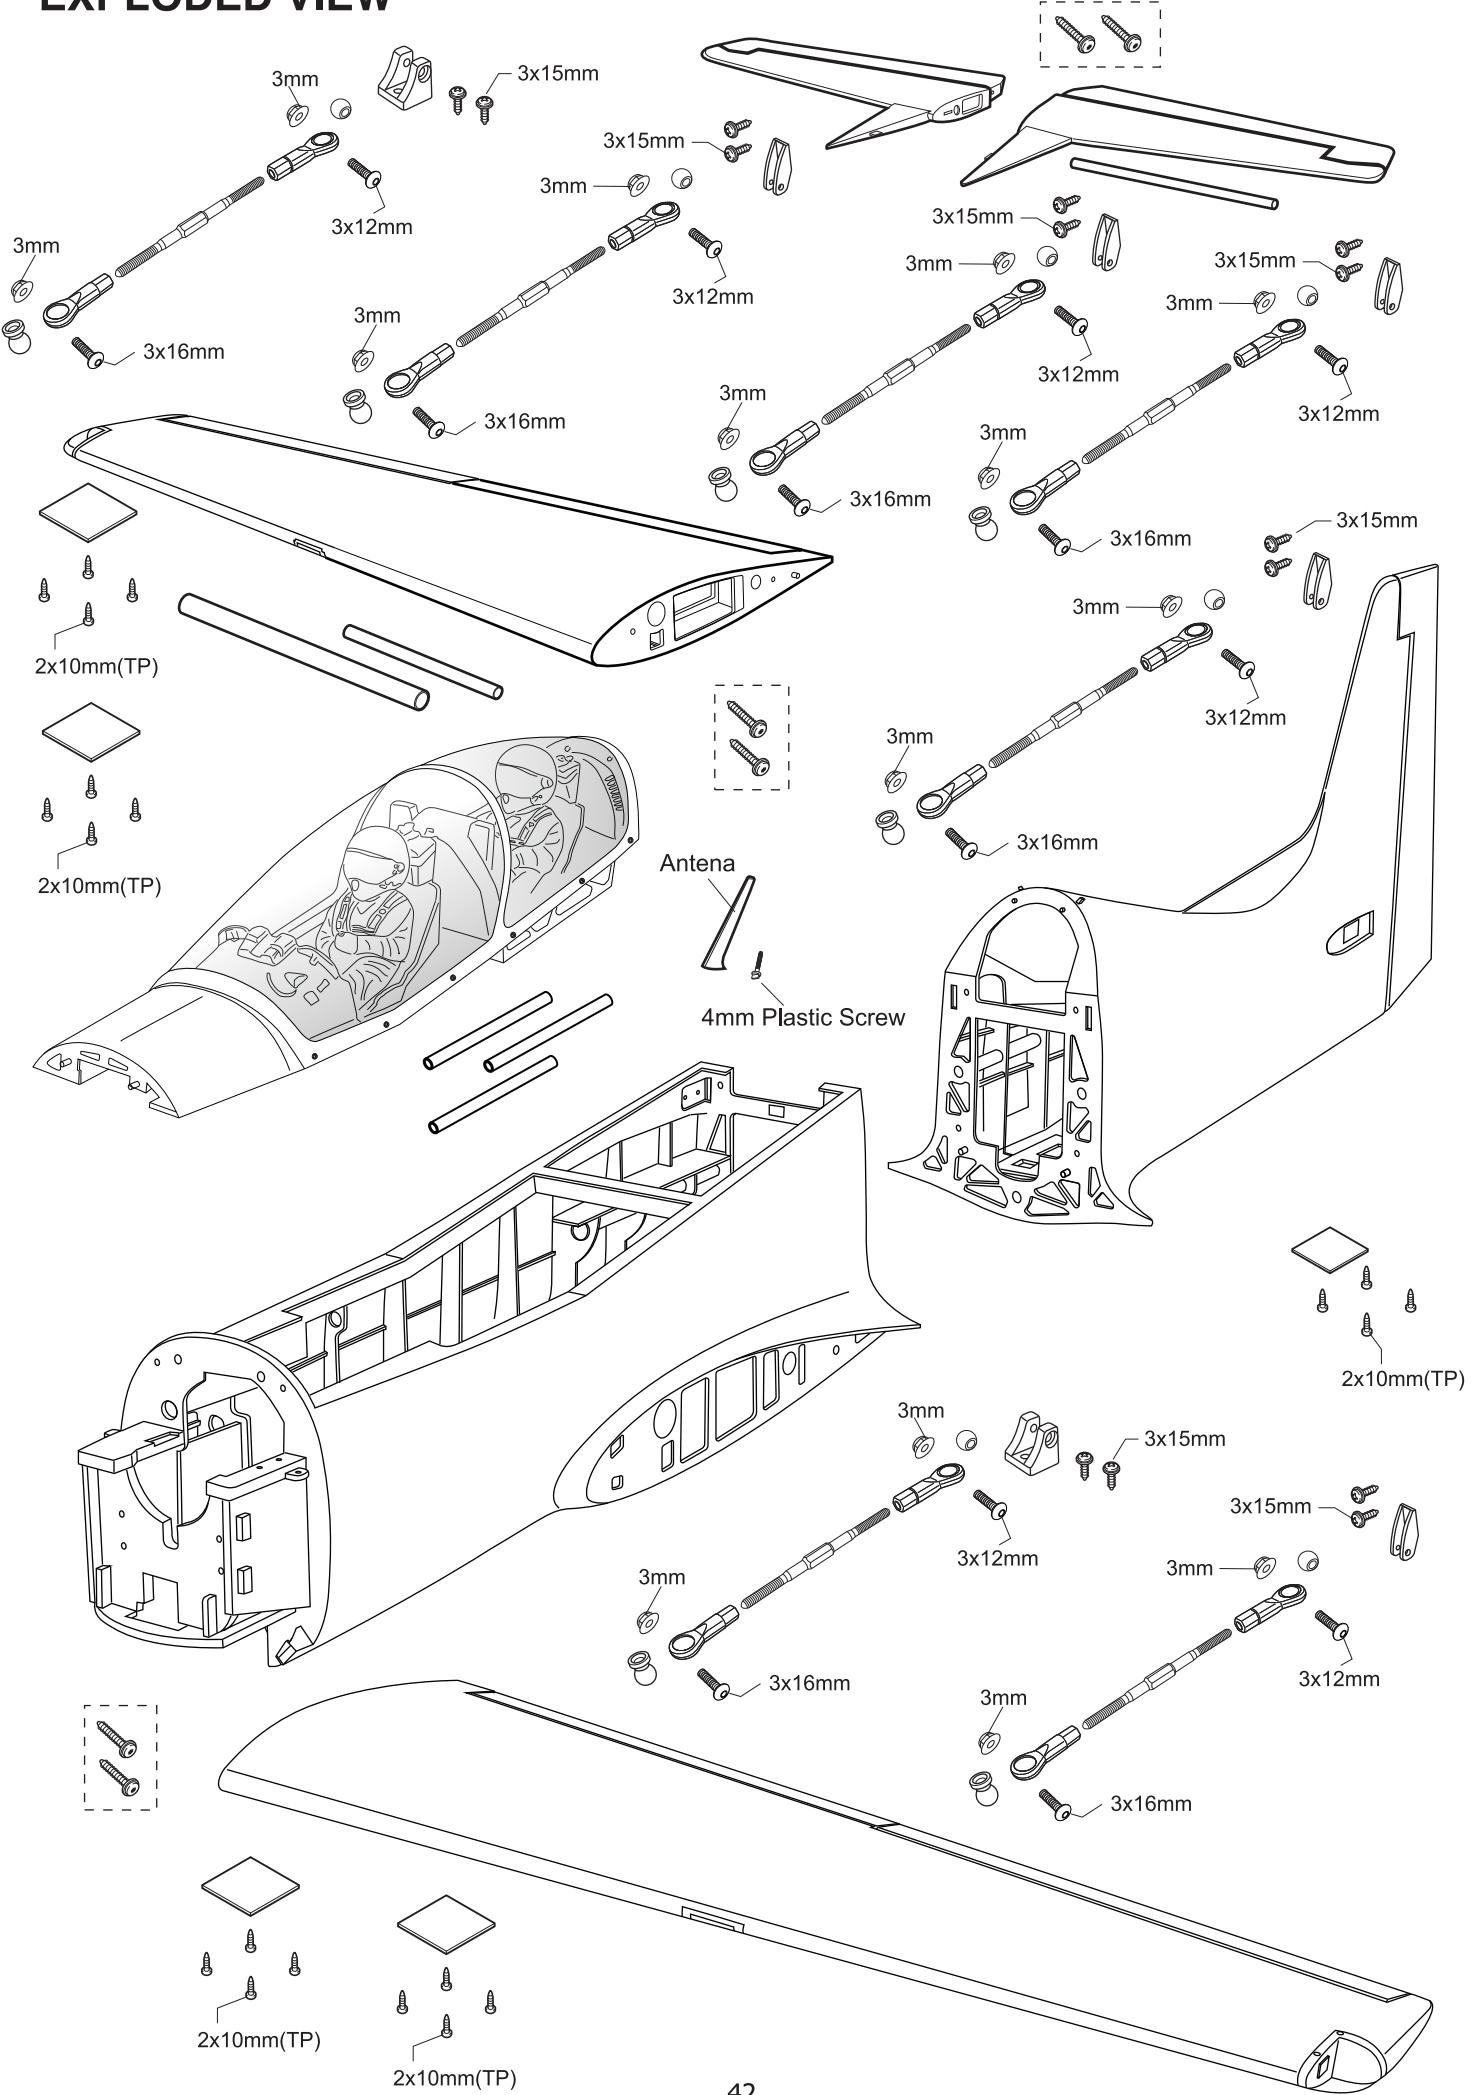

# I/C FLIGHT GUIDELINES

